

HEIDELBERG
FARBEN-DRUCKMASCHINEN
FARBEN-DRUCKMASCHINEN



PARTS BOOK

KORA 18 x 22 1/2 46 x 57 cm
KOR 15 1/2 x 22 1/2 40 x 57 cm
KORD 18 x 22 1/2 46 x 57 cm
MODELS 3/2 68-542

OFFSET OR LETTERSET
FOR
SINGLE COLOUR SHEET FED ROTARY
HEIDELBERG

Printed in Western Germany 1969. Reproduction of any contents is prohibited.

Essential parts, devices and attachments of the machine are protected by domestic and foreign patents as well as trade marks. The names **Heidelberg** and **Original Heidelberg** have been registered both in Germany and abroad.

Essential parts of the Heidelberg K-line offset presses, as far as patented units, devices and attachments are concerned, may only be repaired, changed or installed by the factory or our authorized representatives.



**HEIDELBERGER DRIJCKMASCHINEN
AKTIENGESellschaft
HEIDELBERG**

•

•
•
•
•

•

•

•

•

s!

•
•
•

•

A

•
•

•

Examples:

KSB/KORD 0811 (Section C 1)

~~K~~SB 0811 Ink Fountain Base for KOR & KORA
KORD 0811 Ink Fountain Base for KORD

KSB 0814/KORD 10114 (Section C 3)

~~K~~SB 0814 Crossbar for KOR & KORA
KORD 10114 Crossbar for KORD

KS/KSB/KSBA 1523 (Section E 1)

KS 1523 Handle Rod for KOR
KSB 1523 Handle Rod for KORA*, KORD 64 (25) & KORS
KSBA 1523 Handle Rod for KORA & KORD 62 (24)

9. If a "foreign" part number is shown, but not designated as to model in the right-hand column of a particular parts section, **nor is listed in any of the KORS sections**, such a part is applicable to all models.

Example:

KS 1568 F (Section E 2)

Extension Jogger Finger
Usable on all models—KOR, KORA, KORD, KORS

10. In many cases a part required may be one of several parts in an assembly and not indicated on an illustration page. In such cases it is necessary to locate the assembly containing the required part and then refer to the parts description section which will list the various parts of an assembly.

Example:

KOR 1082 Ductor Roller Journal Box (Section C 3)
with: 18503 Needle Bearing
KS 1032 Washer
KSZ 1083 Shoulder Screw
KSZ 1084 Locking Knob
KS 1062 Compression Spring

Part number KOR 1082 applies to the journal box only. The other parts listed make up the assembly and can be ordered separately if desired.

11. KORS Model Parts.

When ordering parts for the KORS model, bearing in mind that a number of parts for this model differ from other model parts, proceed as follows:

- a) Determine if the part required is indicated on one of the separate KORS illustrated sections A 12, A 13, C 9, D 7 and order accordingly.
- b) If a machine unit or group does not have a separate KORS illustration then determine if the part required is indicated on a separate KORS list of parts found at the end of each numbered section. If the part is not listed there, then refer to the general parts sections.

How to order a part?

12. First, indicate the model and serial number of the machine for which part or parts are needed. The model and serial number is stamped on the press base above the control box on the operator's side (see arrow, Section F 2).
13. Next, in addition to the model and serial number, list both the part number and description of the part(s) required
14. On written or telegraph orders to your dealer, the following wording is sufficient:
"Send by (air, freight, parcel post, etc.) one KORD 1173F impression cylinder jacket for KORD No. 312853"
Or
"Send for KORD No. 323947 four (4) KOR 10356 tension springs and two (2) 18504 needle bearings for KORD 1050 F journal box".

Only when the model and serial number of the machine, part number and description of the part are correct, is there assurance that the right part will be supplied. If your spare parts order is not handled in the above mentioned way, it will be necessary to check back with you and thus delays in sending the part(s) are unavoidable.

We recommend to all owners of Original Heidelberg printing presses to always contact our agencies exclusively when spare parts are needed.

U.

INDEX

Group Description

Page Numbers of Illustrations & Lists

Printing Units

Base
Cylinder:assemblies
Impression controls
Blanket cylinder
Impression cylinder
Inking unit drive
Transfer grippers
Front guides
Flywheel brake assembly
Speed controls
Cylinder gear
Drawer
Roller washing device
Brush
Sheet counter

AI – A 13
A8
A2 A 5, A 9, A 10
A2 A 5, A 9, A 10, F 3
AI A 2,A 9,A 10,A 11,F 5
A2 A3, A4, A5, A 6, A 9, A 10
AI A 2,A 7,A 10,A12
AI A 2,A 3,A 5,A 6,A 10,A13,F 5
A 5
A1 A 7, F 5
A 4, A 7, A 8
A 1
AI
AI
A 1, A 9
A2 A 9

Gear Box

B 1 - B 3

Inking Apparatus

Dampening system
Ink fountain
Ink distribution drive
Plate cylinder
Roller guards
Roller journal boxes

C 1 - C 9, F 3
CI C 2, C 3, C 6, C 7, C 8
C 1, C 2
C 7, C 9
C 4, C 5, C 6, C 7, C 8
C 2, C 3, C 8
C3 C 4, C 6

Feeder

Side guide mechanism
Travelling feed gripper mechanism
Sucker bar mechanism
Feed pile mechanism, feed table
Delivery lighting
Feed boards, sheet smoothers

D 1 - D 7
D 2, D 3, D 4
D 4, D 5
D 3, D 4, D 5, D 6
D1 D 2, D 6, D 7, F 2
D 6
D 3

Delivery


Delivery pile mechanism
Impression control lever
Air pump

EI - E 6
E 1 - E 6, FI, F 2, F 3, F 5
E 3, E 5, F 2, F 3
EI,E 3,E5,E6,F 5

441 047-4 D
it




Central lubrication pump	E 1
Overall View of Machine	F 1 — F 5
Guards	F 1, F 2, F 4
Handwheels & control levers	F 1
Tachometer	F 1
Water and wash-up fluid containers	<u>E 4</u> G 6
Main drive	F 5
Standard & Extra Accessories	G 1 — G 7
Rotary plate shells	G 1
Inking & dampening rollers, roller rack.	G 2, G 6
Powder spray	G 3
Impression cylinder jackets	<u>G 4</u> G 7
Rubber blanket makeready device	G 4
Tools & equipment	G 5
Automatic water leveler	
Two-up feeding equipment	
Sheet guard for cardboard	
Sandpaper sleeves	
Wash-up fluid container	G 6
Perrorating device	— G 7

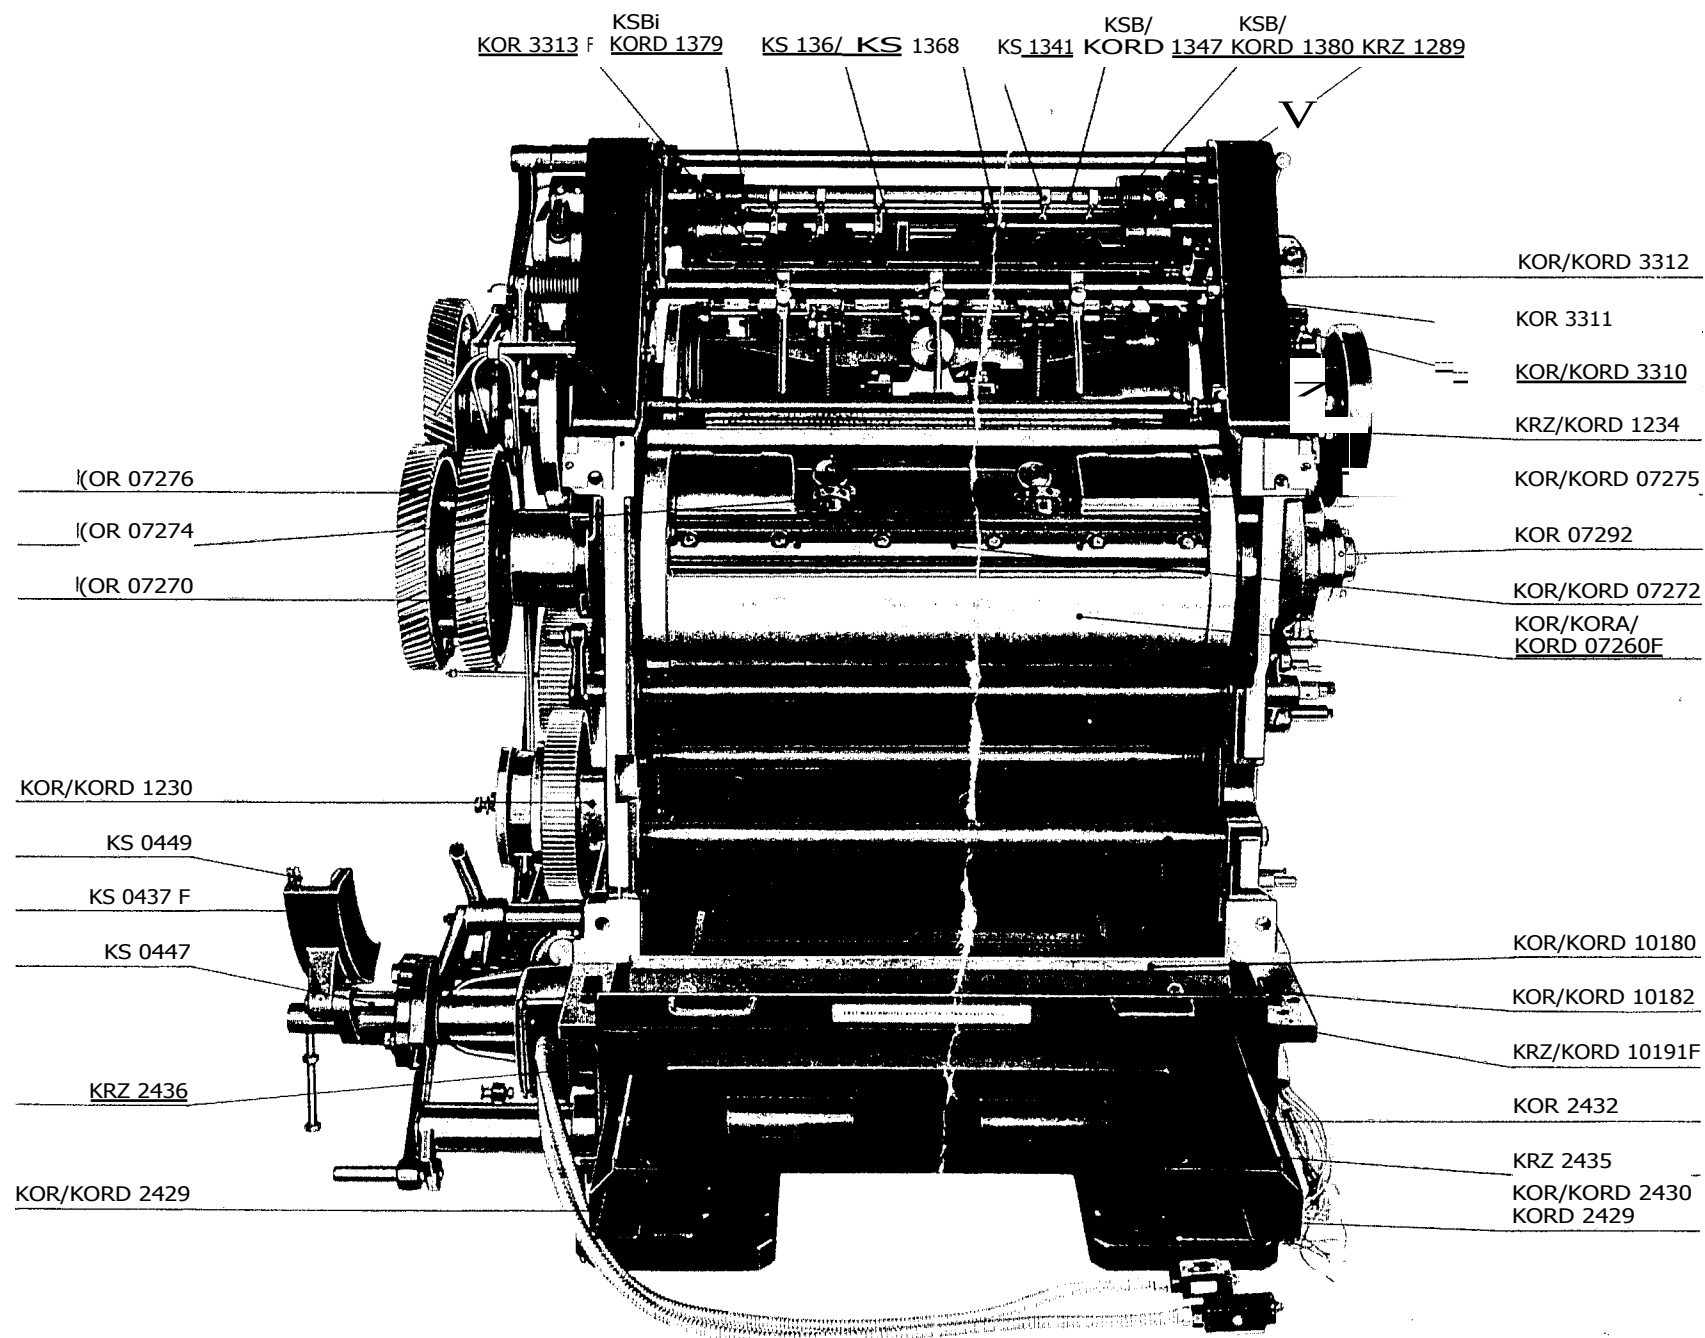


KS	0437 F	Brake shoe	
		with: KS 0471 spacer washer	
KS	0447	Brake shoe shaft	
KS	0449	Brake lining	
KOR	07260 F		
KORA 07260 F		Blanket cylinder	
KORD 07260 F		with: KOR 07.02 rubber blanket	
		KORA 07.02 rubber blanket	
		KORD 07.02 rubber blanket	
		KOR 357.009 " rubber blanket	
		KOR 07.03 under blanket	
		KORA 07.03 under blanket	
		KORD 07.03 under blanket	
		KOR 357.010* under blanket	
		KOR 07.04 felt blanket	
		KORA 07.04 felt blanket	
		KORD 07.04 felt blanket	
		KOR 357.011* felt blanket	
		* for special rotary shell KOR 357.001 F	
KOR	07270	Blanket cylinder gear I—inner	
KOR	07272	)Blanket clamp, upper position	
KORD	07272	with: KOR/KORD 07271 F	
		blanket clamp, lower position	
		KS 1236 compression spring	
		T 1212 compression spring	
KOR	07274	Blanket clamp draw nut	
		with: KOR 07273 threaded bolt	
KOR	07275	Clamp bracket	KOR/KORA/KORD 62
KORD	07275	Clamp bracket	KORD 64
KOR	07276	Blanket cylinder gear II—outer	
		with: NK 16/16 needle bearing	
KOR	07292	Bearing flange	
		with: KOR 07294 spacer washer	
KOR	10180	}Washup blade	
KORD	10180		
KOR	10182	Washup blade support bar	
		with: KOR 10181 clamp bar	
KORD	10182	Washup blade support bar	
		with: KORA 10181 clamp bar	
KRZ	10191 F	Washup sludge basin	KOR/KORA
KORD	10191 F	Washup sludge basin	

KOR	1230	Intermediate gear shaft	
KORD	1230		
KRZ	1234	Cylinder brush	KOR/KORA
KORD	1234	Cylinder brush	
KRZ	1289	Cut-out trip block	
		with: T 1710 tension spring	
KS	1341	Gripper lever	
KSB	1347	Gripper lever shaft	KOR/KORA/KORD
KORD	1347	Gripper lever shaft	KORD 64
KS	1367	Cut-out lever	
KS	1368	Cut-out lever	
KSB	1379	Torsion spring, D S	KOR/KORA/KORD I
KORD	1379	Torsion spring, D S	KORD 64/KORS
KSB	1380	Torsion spring, O S	KOR/KORA/KORD
KORD	1380	Torsion spring, O S	KORD 64/KORS
KOR	2429	Support guard, D.S.	
KORD	2429	Support guard, D S	KORD 64
			also O.S.
KOR	2430	Support guard, D.S.	
KORD	2430		
KOIR	2432	Cover guard, upper portion	
		with: KRZ 2433 guide rail, D.S.	
		KRZ 2434 guide rail, O.S.	
KRZ	2435	Drawer	
KRZ	2436	Drawer frame	
KOR	3310	Support shaft	KOR/KORA/KORD (
		With: HK 1010 needle bearing	
KORD	3310	Support shaft	KORD 64
		with: HK 1010 needle bearing	
KOR	3311	Shaft bracket	
KOR	3312	Sheet guard	KOR/KORA/KORD E
KORD	3312	Sheet guard	KORD 64
KOR	3313 F	Sheet guide	

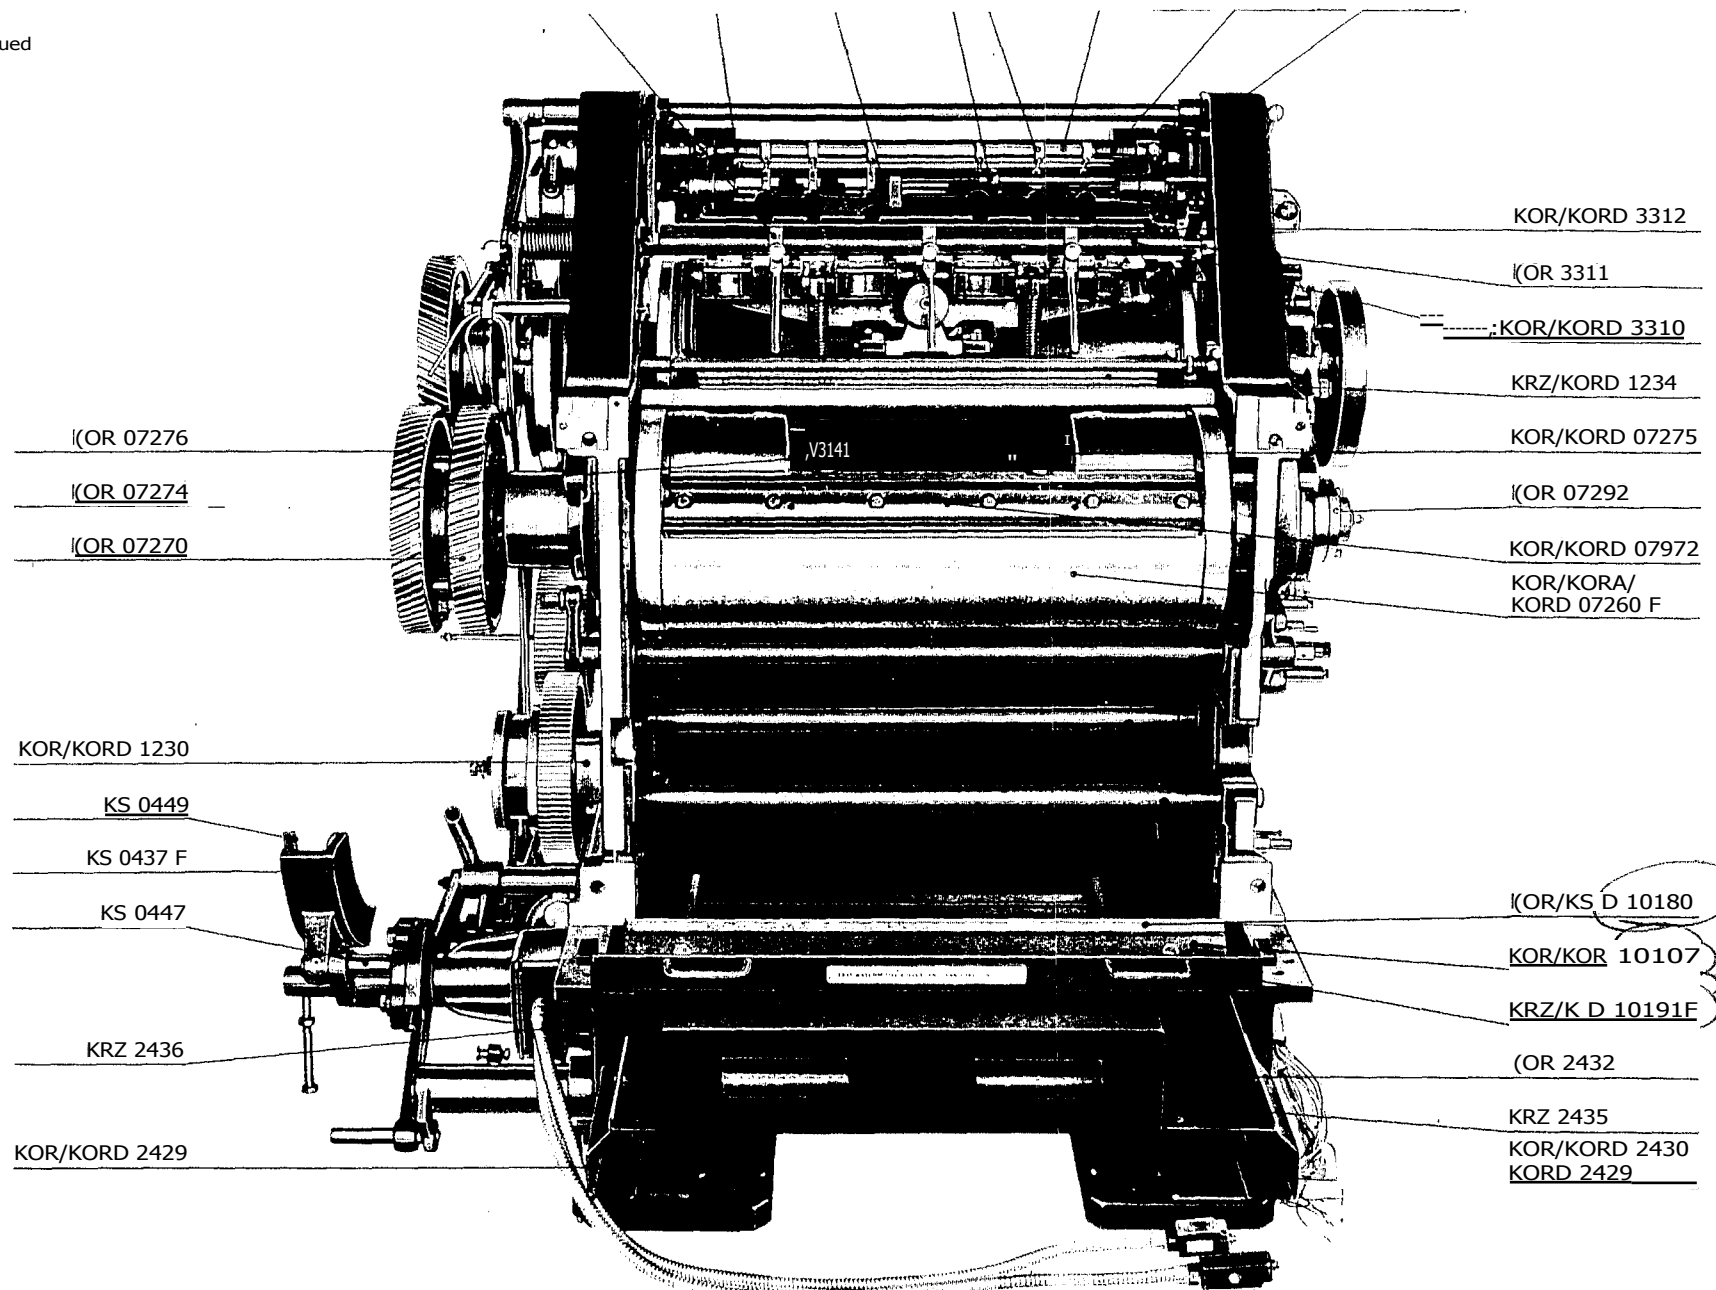


For KORS check list below. If part is not listed, then refer to general listing.

KORS Parts		Illustration shown as
KORS	07260 F Blanket cylinder with: KORS 07.02 rubber blanket KORS 07.03 under blanket KORS 07.04 felt blanket	KOR/KORA/KORD 07260 F
KORS	07272 Blanket clamp, upper portion with: KORS 07271 F blanket clamp, lower portion KS 1236 compression spring T 1212 compression spring	KOR/KORD 07272
KORS	07275 Clamp bracket	KOR/KORD 07275
KORS	10180 Washup blade	KOR/KORD 10180
KORS	10182 Support bar for washup blade with: KORS 10181 clamp bar	KOR/KORD 10182
KORS	10191 F Washup sludge basin	KRZ/KORD 10191 F
KORS	1230 Shaft for intermediate gear	KOR/KORD 1230
KORS	1234 Cylinder brush	KRZ/KORD 1234
KORS	1347 Gripper lever shaft	KSB/KORD 1347
KORS	2429 Support bracket, D.S. and O S	KOR/KORD 2429
KORS	3310 Support shaft with: HK 1010 needle bearing	KOR/KORD 3310
KORS	3312 Sheet guard	KOR/KORD 3312

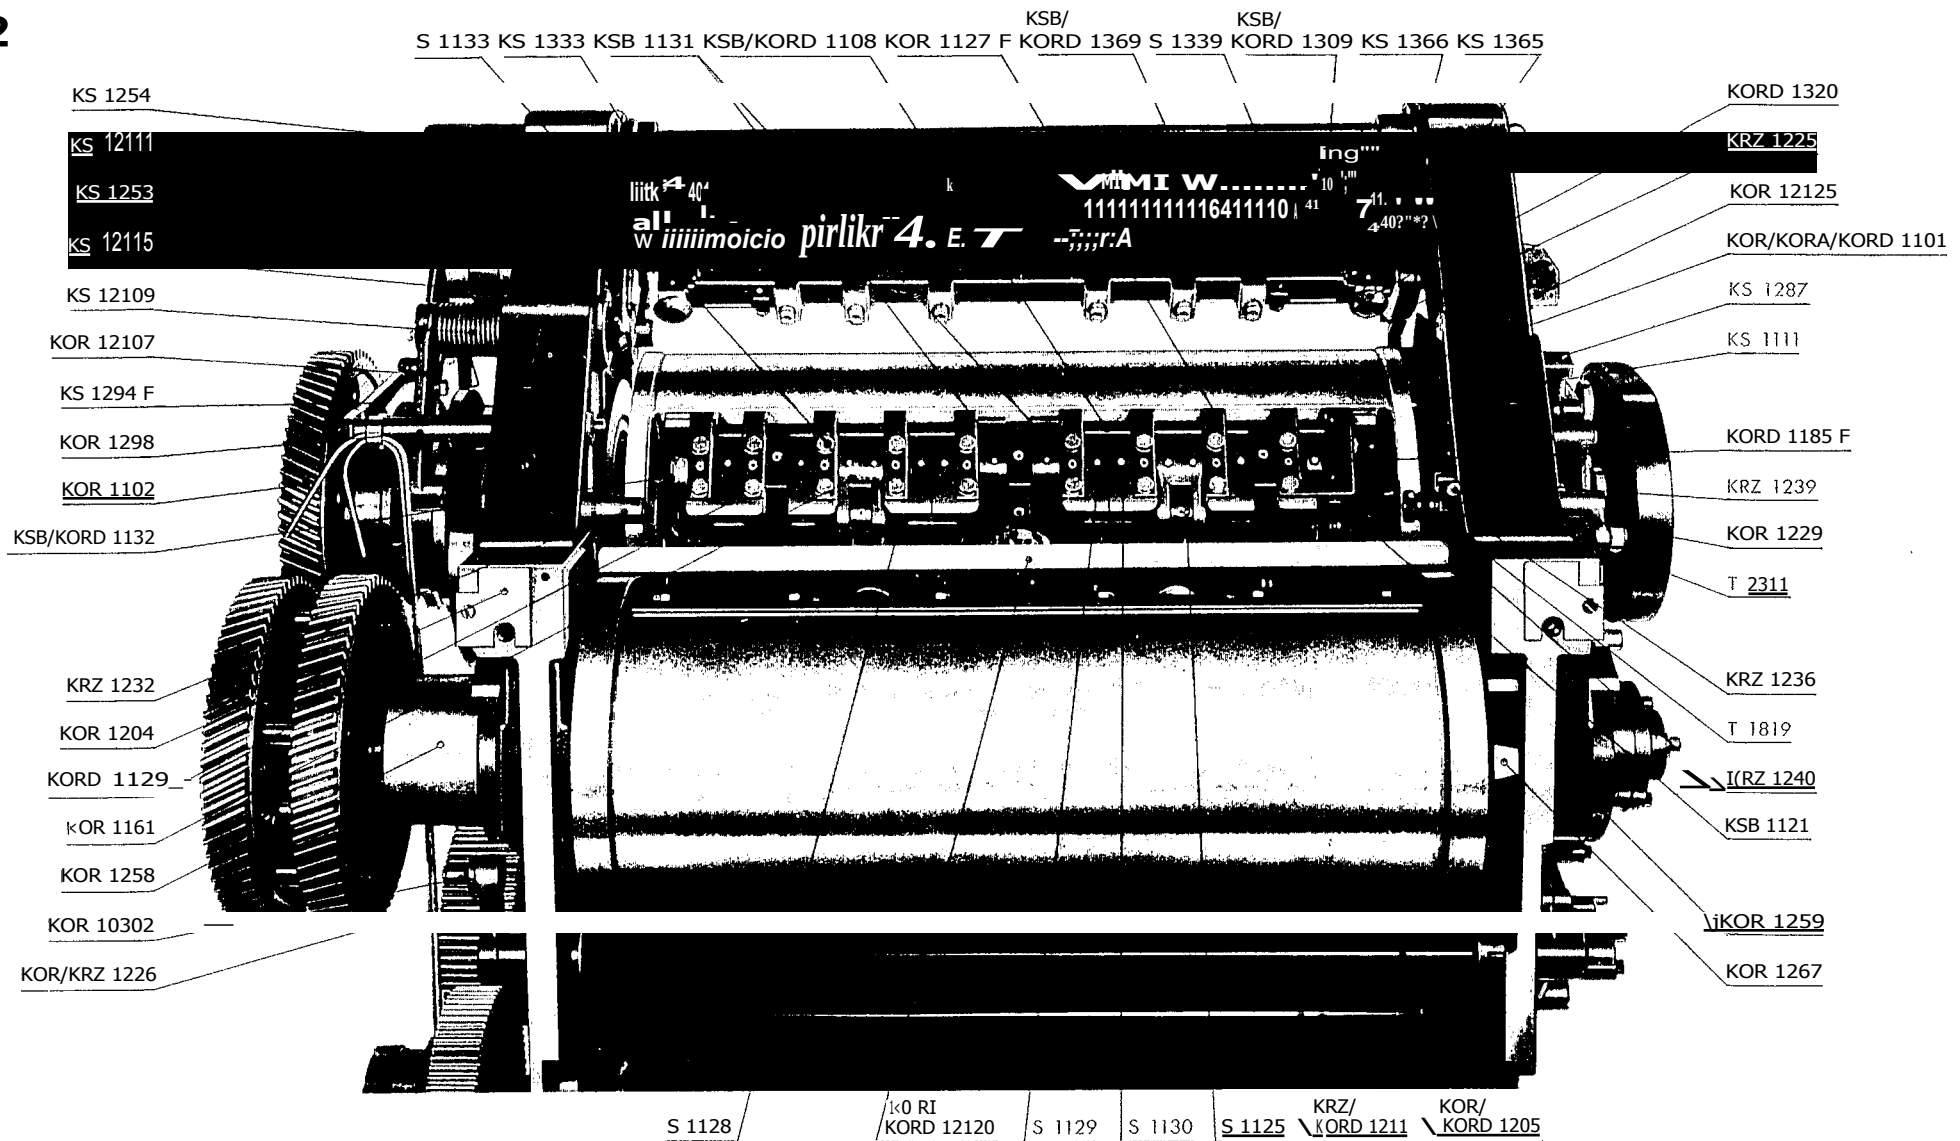

continued

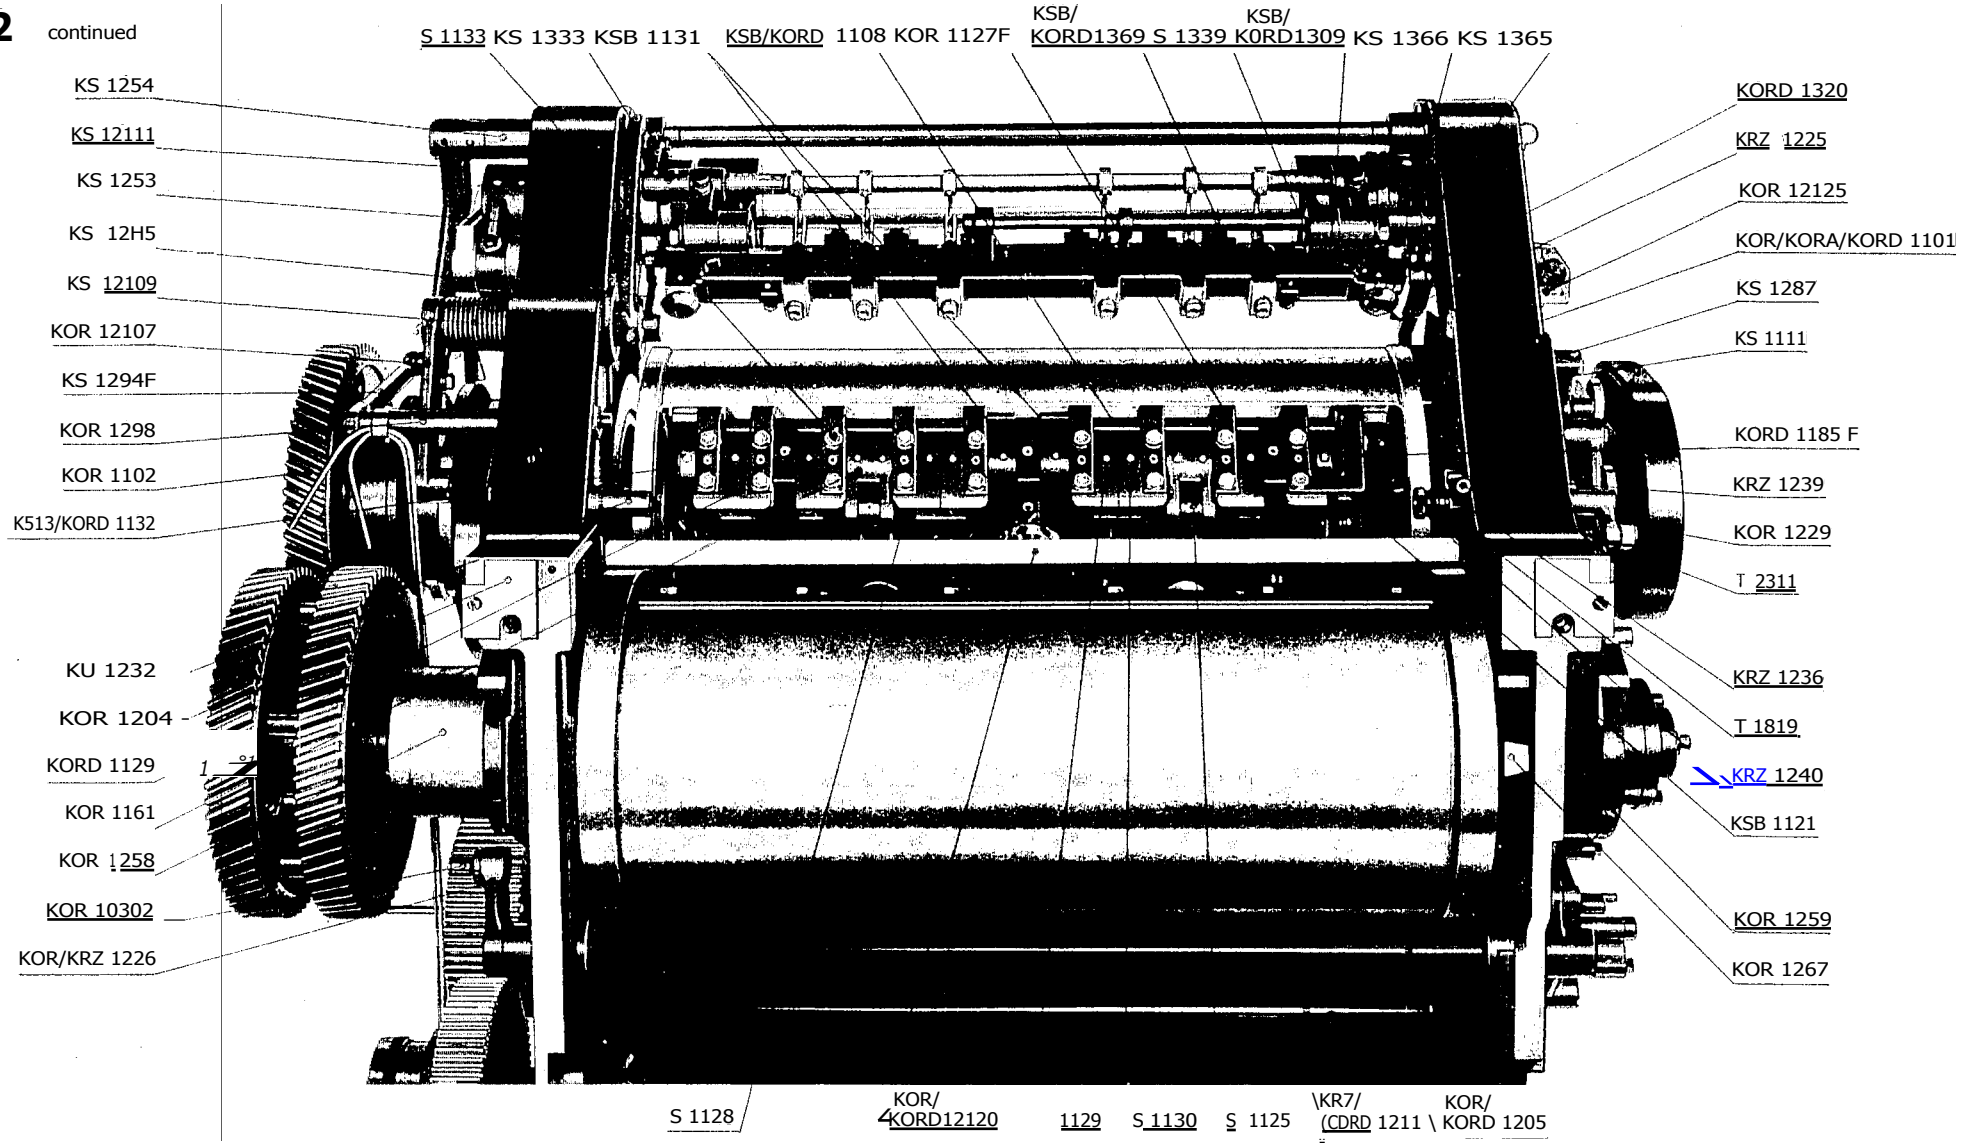

KOR	10302	Bearing stud	
KOR	1101		
KORA	1101	Impression cylinder	
KORD	1101		
KOR	1102	Impression cylinder gear	
KSB	1108	Packing clamp with: HK 2216 needle bearing	KOR/KORA
KORD	1108	Packing clamp with: HK 2216 needle bearing	
KS	1111	Gripper lever roller with: KS 1113 roller stud KOR 1149 roller lever	
KSB	1121	Gripper shaft lever with: KS 1148 link pin KSB 1129 stop pin	KOR/KORA/KORD 62
•	1125	Spring rod with: S 1124 compression spring	
KOR	1127 F	Gripper	
•	1128	Gripper holder with: 11853 spring	KOR up to No. 324306 KORA up to No. 324140 KORD 62
•	1129	Gripper spring block	KOR up to No. 324306 KORA up to No. 324140 KORD 62
KORD	1129	Gripper spring block	KORD 62
•	1130	Gripper spring block	1 KOR up to No. 324306 KORA up to No. 324140 KORD 62
KSB	1131	Gripper stop	
KSB	1132	Gripper shaft	KOR/KORA
KORD	1132	Gripper shaft	
•	1133	Grippdr bolt	
KOR	1161	Gripper shaft tension lever with: S 1126 pin	
KORD	1185 F	Double gripper	KORD 62
KOR	1204	Spacer washer	
KOR	1205	Impression control shaft with: HK 2520 needle bearing KSZ 1056 washer	KOR/KORA/KORD 62
KORD	1205	Impression control shaft with: HK 2520 needle bearing KSZ 1056 washer	KORD 64

KRZ	1211	Cross bar	KOR/KORA/KORD 62
KORD	1211	Cross bar	KORD 64
KRZ	1225	Lever cam with: KRZ 1284 stud	
KOR	1226	Lever	KOR/KORA
KRZ	1226	Lever	KORD/KORS
KOR	1229	Brush lever	
KRZ	1232	Brush support bearing with: HK 1210 needle bearing	
KRZ	1236	Stop lever	
KRZ	1239	Stop pin	
KRZ	1240	Brush locking collar	
KS	1253	Lever cam	
KS	1254	Bearing support bushing with: NK 2420 needle bearing	
KOR	1258	Bearing support bushing, D.S. with: KOR 10302 shouldered stud KSZ 10287 washer KRZ 1216 stud KORD 1265 stud KOR 1266 eccentric bushing KORD 1266 eccentric bushing KOR 1268 spacer bushing F-7b-6643 needle bearing	KOR/KORA KORD/KORS KORD/KORS
KOR	1259	Bearing support bushing, O.S. with: KOR 10302 shouldered stud F-7b-6643 needle bearing KSZ 10287 washer	
KOR	1267	Eccentric bushing, O.S. with: KRZ 1616 stud	
KS	1287	Guide block	
KS	1294 F	Enclosed spring rod with: KS 1299 compression spring	
KOR	1298	Support bolt	
KOR	12107	Cam lever with: KS 1111 cam roller KS 1113 stud	
KS	12109	Torsion spring with: KS 12106 support bushing NK 2220 needle bearing	
KS	12111	Cam lever	


KS	12115	Alignment bracket	
KOR	12120	Dust guard	KOR/KORA/KORD 62
KORD	12120	Dust guard	KORD 64
KOR	12125	Sheet counter	
KSB	1309	Transfer gripper bar	KOR/KORA/KORD 62
		with: KS 1325 bushing KS 1326 bushing KS 1344 bushing	
KORD	1309	Transfer gripper bar	KORD 64
		with: KORD 1317 bushing KS 1326 bushing KS 1344 bushing	
KORD	1320	Sheet deflector bolt	KORD 62
KS	1333	Cam lever	
		with: S 1335 cam roller S 1336 stud	
	1339	Shouldered bolt	KOR/KORA/KORD 62
KS	1365	Cut-out pawl lever	
		with: KSZ 1371 cam roller S 1372 stud	
KS	1366	Cut-out pawl lever	
		With: KSZ 1371 cam roller S 1372 stud T 0268 hexagon screw	
KSB	1369	Cut-out shaft, outer	KOR/KORA/KORD 62
		with: K 15/13 needle bearing (new number: K 15x19x13) K 10/10 needle bearing (new number: K 10x13x10) KS 1327 bushing	
KORD	1369	Cut-out shaft, outer	KORD 64
		with: same as KSB 1369	
	1819	Compression spring	
	2311	Adjusting screw	

For KORS check list below. If part is not listed, then refer to general listing.

KORS Parts			Illustration shown as
KORS	1101	Impression cylinder	KOR/KORA/KORD 110'
KORS	1108	Packing clamp	KSB/KORD 1108
		with: HK 2216 needle bearing	
KORS	1132	Gripper shaft	KSB/KORD 1132
KORS	1205	Impression control shaft	KOR/KORD 1205
		with: same as KOR 1205	
KORS	1211	Cross bar	KRZ/KORD 1211
KORS	12120	Dust guard	KOR/KORD 12120
KORS	1309	Transfer gripper bar	KSB/KORD 1309
		with: same as KORD 1309	
KORS	1369	Cut-out shaft, outer	KSB/KORD 1369
		with: same as KSB 1369	

• 1.

A3

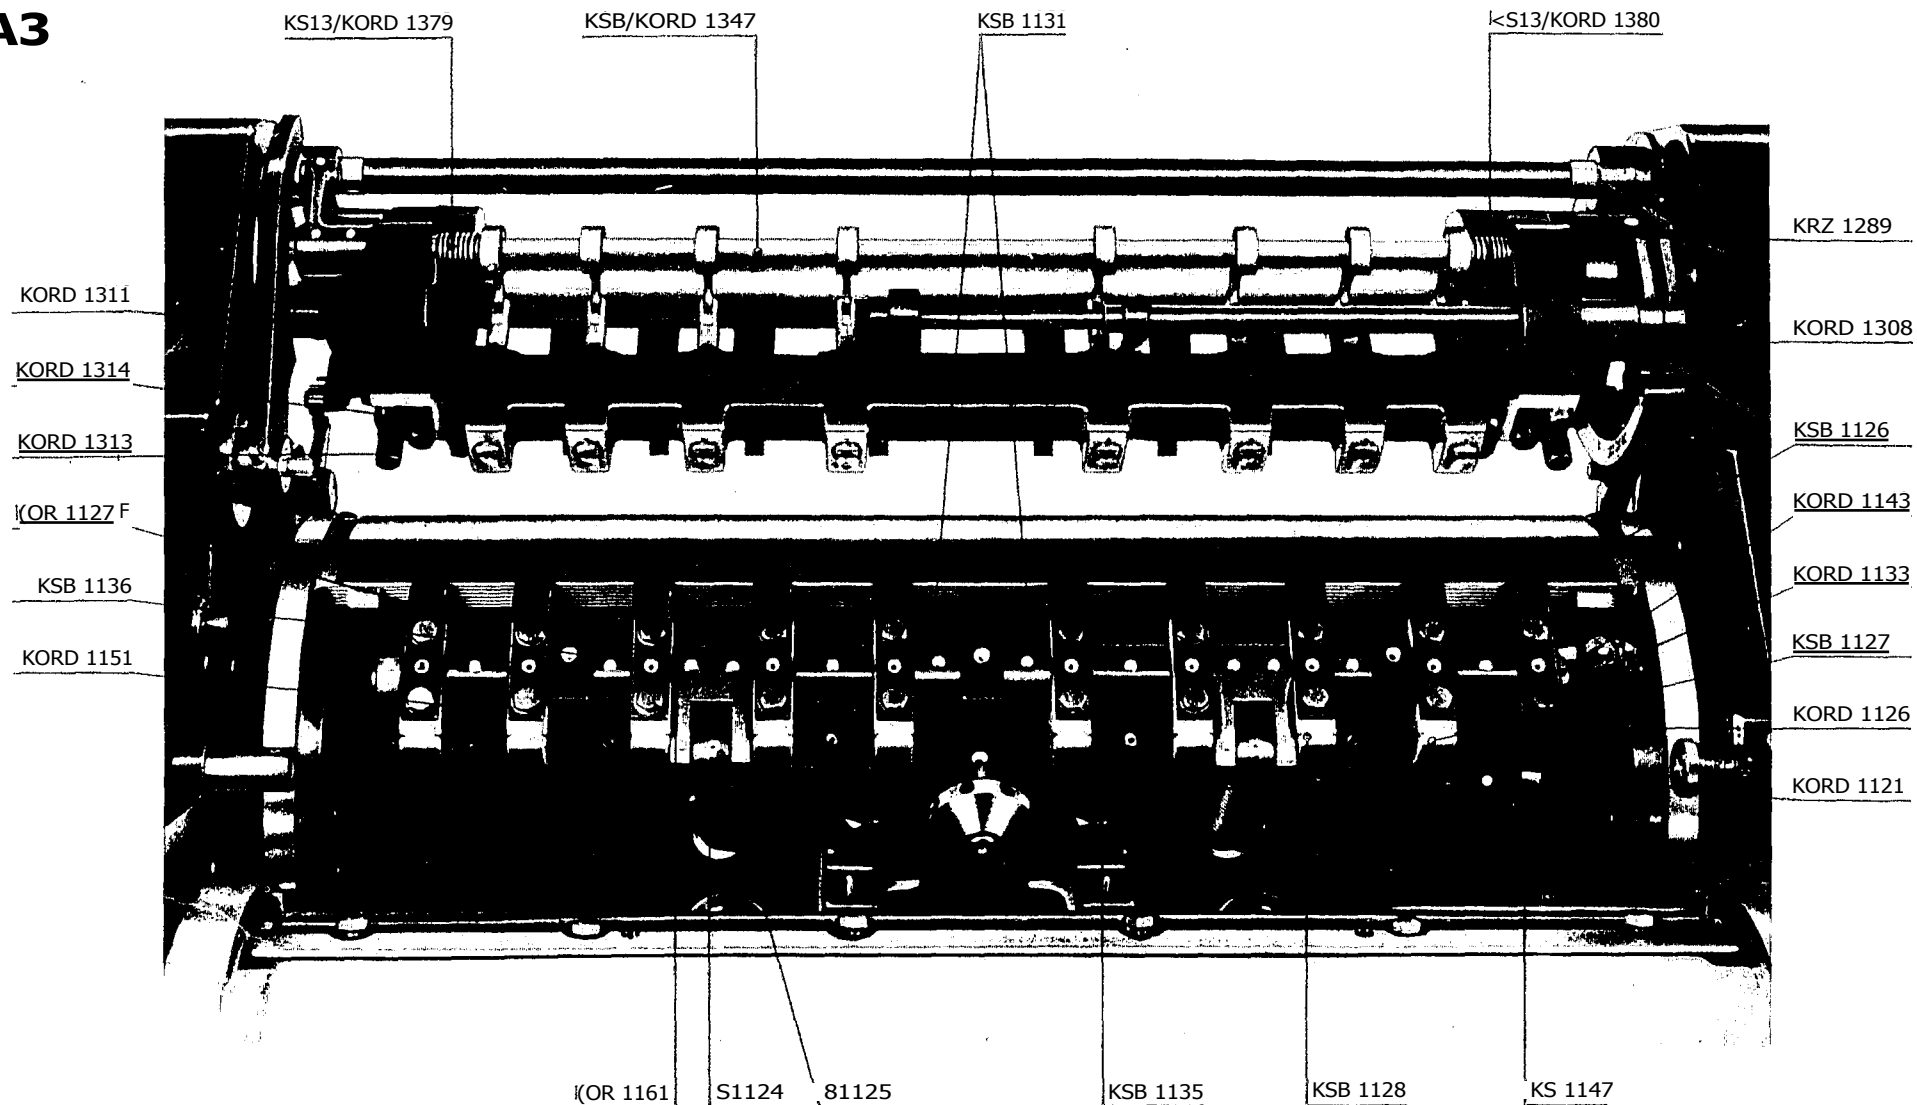


KORD	1121	Gripper shaft operating lever with: KORD 1147 stud KS 1234 washer KORD 1130 opening pin	KORD 64
	1124	Compression spring	
	1125	Spring rod	
KSB	1126	Gripper holder with: KSB 1129 opening pin	KOR from No. 324365 KORA from No. 324308 KORD 64
KORD	1126	Gripper holder with: SZ 10250 compression spring	KORD 64/KORS
KOR	1127 F	Gripper	
KSB	1127	Gripper holder with: S 1938 compression spring	f KOR from No. 324365 KORA from No. 324308 KOR from No. 324365 KORA from No. 324308 KORD 64/KORS
KSB	1128	Gripper holder with: S 1938 compression spring	
KSB	1131	Gripper stop	
KORD	1133	Gripper bolt	KORD 64/KORS
KSB	1135	Gripper opening lever with: KSB 1130 pin	KOR from No. 324365 KORA from No. 324308 KORD 64/KORS
KSB	1136	Washer	KOR from No. 324365 KORA from No. 324308 KORD 64/KORS
KORD	1143	Washer	KORD 64/KORS
KS	1147	Connecting link with: HK 12/10 needle bearing	
KORD	1151	Gripper opening lever, D.S. with: KORD 1129 pin	KORD 64
KOR	1161	Gripper shaft tension lever with: S 1126 pin	
KRZ	1289	Cut-out trip block	
KORD	1308	Support block, O S	KORD 64
KORD	1311	Support block, D.S	KORD 64
KORD	1313	Sheet deflector bolt	KORD 64/KORS
KORD	1314	Plate	KORD 64/KORS
KSB	1347	Gripper lever shaft	KOR/KORA/KORD 62
KORD	1347	Gripper lever shaft	KORD 64
KSB	1379	Torsion spring	KOR/KORA/KORD 62
KORD	1379	Torsion spring	KORD 64/KORS

KSB	1380	Torsion spring	KOR/KORA/KORD 62
KORD	1380	Torsion spring	KORD 64/KORS

For KORS cheek list below. If part is not listed, then refer to general listing.

KORS Parts			Illustration shown as
KORS	1121	Gripper shaft lever with: KORS 1130 link pin KORD 1148 stud KS 1234 washer	KORD 1121
KORS	1151	Gripper opening lever with: KORS 1129 pin	KORD 1151
KORS	1308	Support block, O S	KORD 1308
KORS	1311	Support block, D.S	KORD 1311
KORS	1347	Gripper lever shaft	KSB/KORD 1347

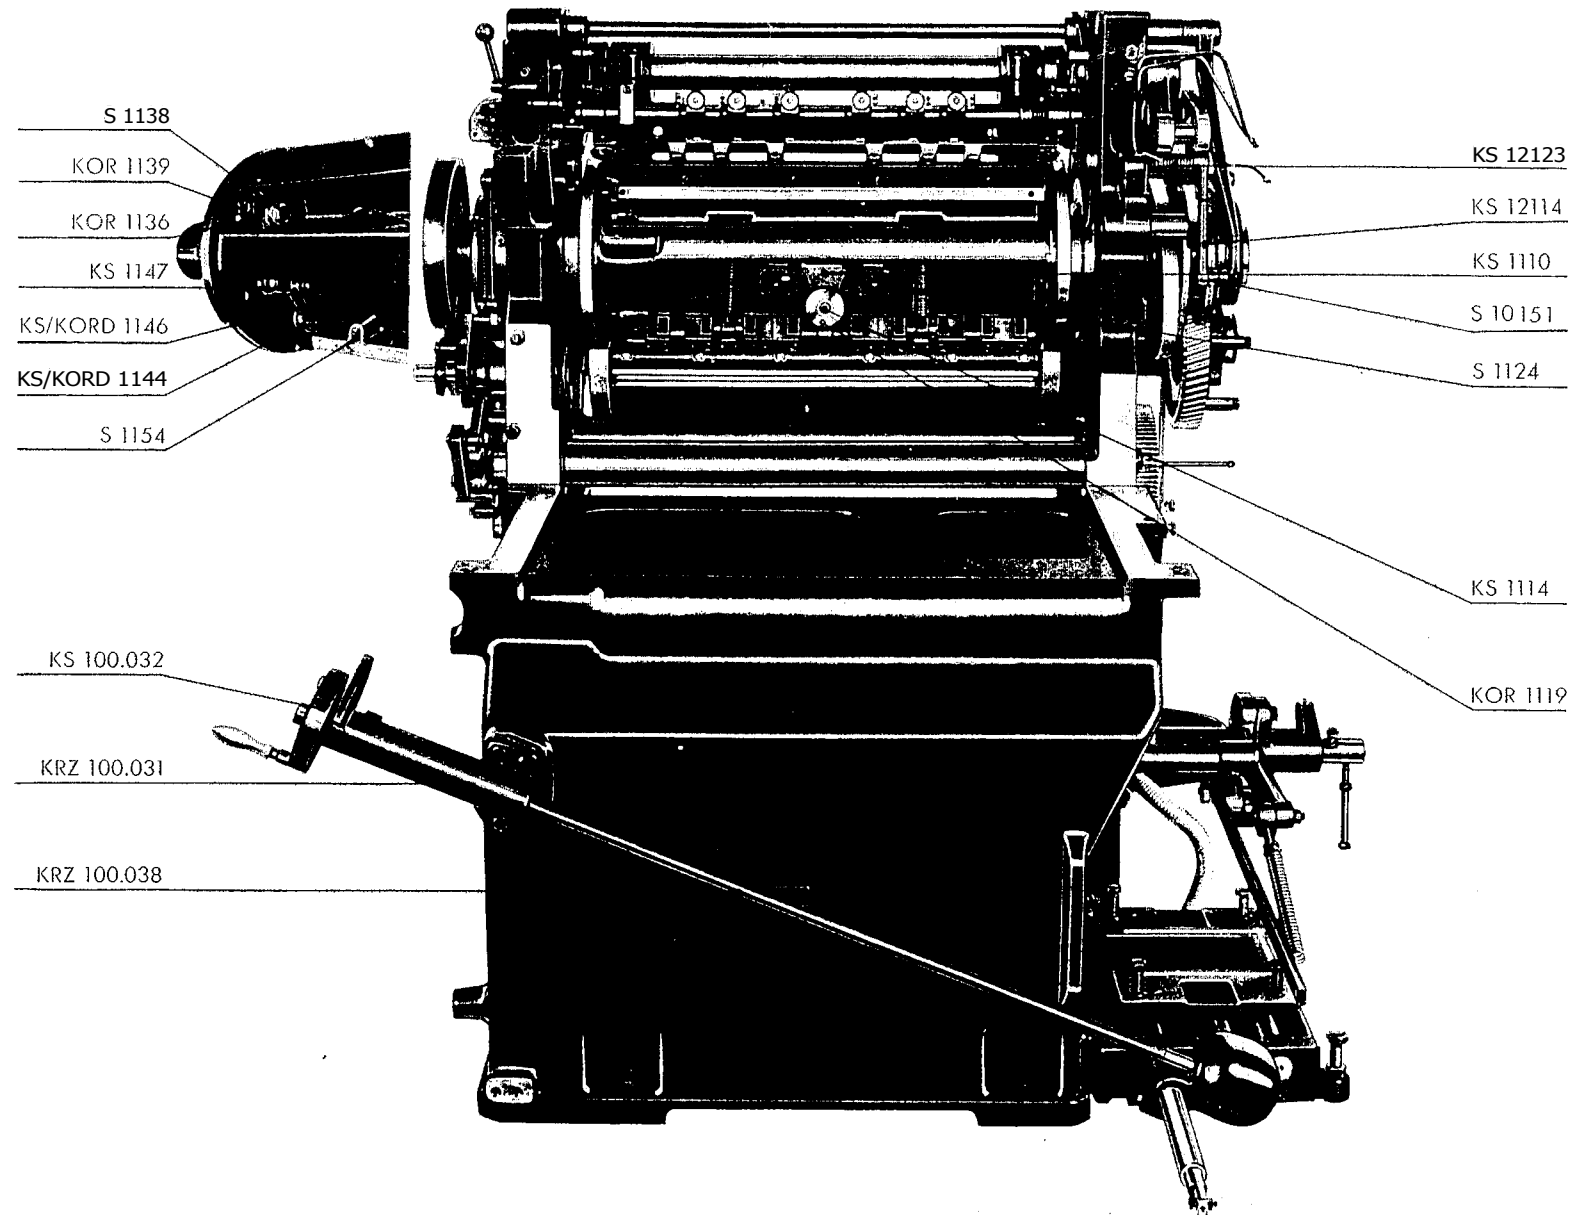


•	10151	Cam roller with: K 12/10 needle bearing (new number: K 12x15x10) S 14161 stud	
KS	1110	Handwheel bracket with: KS 1112 hinge shaft KS 1165 shim plate	
KS	1114	Handwheel screw with: KS 1118 trunion ARK 1528/L 1528 thrust bearing (new number: K 81102/LS 1528)	
KOR	1119	Handwheel	
•	1124	Compression spring	
KOR	1136	Ratchet pawl with: T 1853 compression spring T 0122 plunger	
•	1138	Shouldered cap screw	
KOR	1139	Ratchet pawl release with: KOR 1142 keeper plate	
KS	1144	Bearing housing with: K 22/13 needle bearing (new number: K 22x26x13) KS 1152 spacer	KOR/KORA/KORD 62
KORD	1144	Bearing housing with: K 22/13 needle bearing (new number: K 22x26x13) KORD 1152 spacer	KORD 64/KORS
KS	1146	Gripper operating lever with: KS 1148 link pin KOR 1149 roller lever KS 1111 roller	KOR/KORA/KORD 62
KORD	1146	Gripper operating lever with: KORD 1145 spacer KORD 1148 link pin KS 1234 washer KOR 1149 roller lever KS 1111 roller	KORD 64/KORS
KS	1147	Connecting link with: HK 1210 needle bearing	
•	1154	Grooved screw	
KS	12114	Cam lever with: KS 12110 support bushing KS 12113 shaft HK 1512 needle bearing	
KS	12123	Torsion spring	


KRZ	100.031	Bearing bracket with: HK 1612 needle bearing	KOR up to No. 32E KORA up to No. 3: KORD 62
KS	100.032	Speed control crank with: KS 100.037 stud KS 100.039 gear KS 100.040 gear KS 100.041 gear KS 100.044 pointer E 25 crank handle SN 4.28.16 speed indicator plate	
KRZ	100.038	Speed control shaft	KOR up to No. 32; KORA up to No. 3: KORD 62



A5

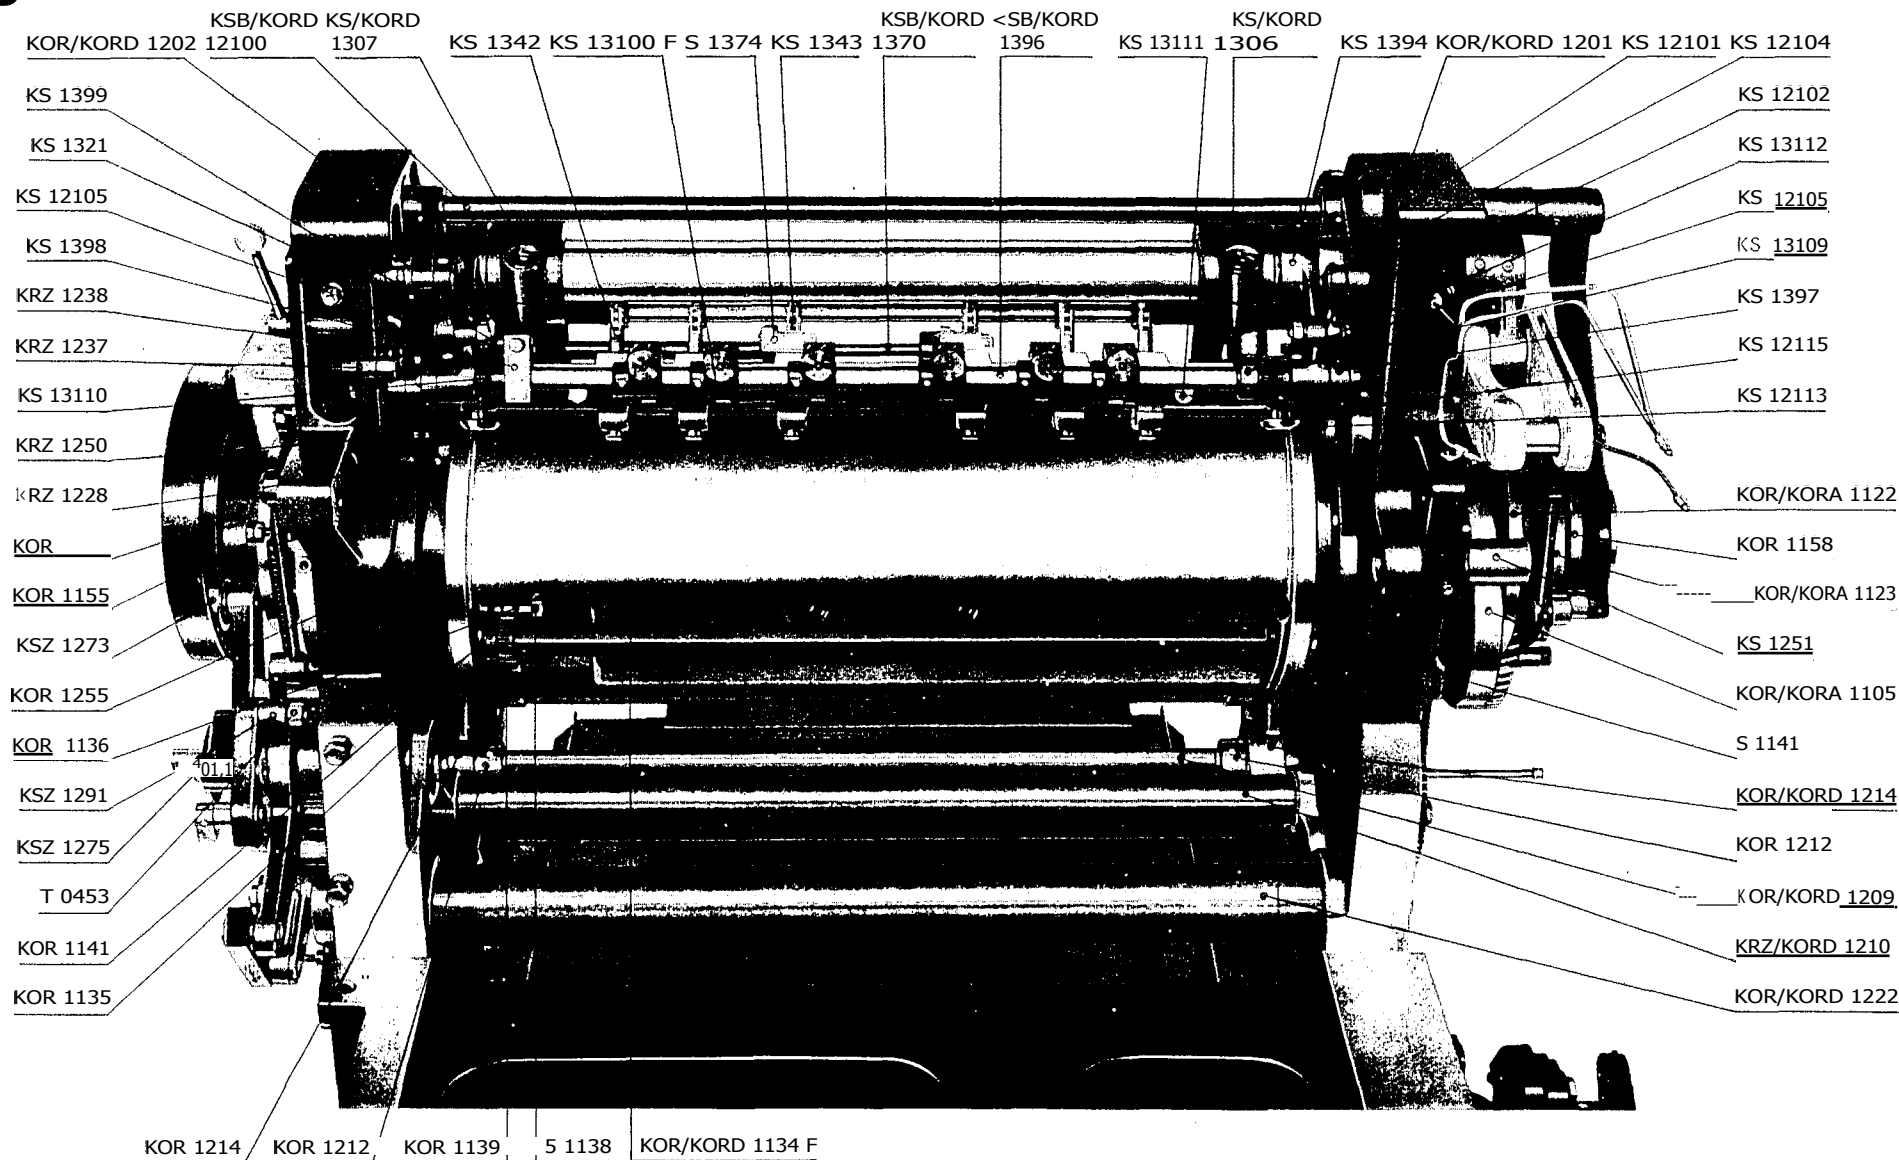


•	0453	Cam roller			
KOR	1105	Transfer gripper bar cam with: KS 1140 tapered pin	KOR		
KORA	1105	Transfer gripper bar cam with: KS 1140 tapered pin	KORA/KORD		
KOR	1122	Cam	KOR		
KORA	1122	Cam	KORA/KORD		
KOR	1123	Cam	KOR		
KORA	1123	Cam	KORA/KORD		
KOR	1134 F }	Reel bar			
KORD	1134 F				
KOR	1135	Ratchet wheel			
KOR	1136	Ratchet pawl with: T 1853 compression spring T 0122 plunger			
•	1138	Shouldered cap screw			
KOR	1139	Ratchet pawl release with: KOR 1142 keeper plate			
•	1141	Hexagon pilot screw with: S 16114 washer			
KOR	1141	Pilot stud with: KOR 1142 keeper plate			
KOR	1143	Cam			
KOR	1155	Impression cam with: KSZ 1158 stud			
KOR	1158	Eccentric flange			
KOR	1201	Cylinder side frame, D.S. with: KS 1240 bushing			
KORD	1201	Cylinder side frame, D.S. with: KS 1240 bushing	KORD/KORS		
KOR	1202	Cylinder side frame, O.S.			
KORD	1202	with: KS 1241 bushing			
KOR	1209	Pressure control shaft	KOR/KORA/KORD 62		
KORD	1209	Pressure control shaft	KORD 64		
KRZ	1210	Cross bar with: KS 0443 washer	KOR/KORA/KORD 62		
KORD	1210	Cross bar with: KS 0443 washer	KORD 64		
KOR	1212	Eccentric			
KOR	1214	Lever			
KORD	1214	Lever, D S	KORD/KORS		
KOR	1222 F	Pressure control shaft-plate to blanket cylinder with: HK 2520 needle bearing HK 2526 needle bearing	KOR/KORA/KORD 62		
KORD	1222 F	Pressure control shaft-plate to blanket cylinder with: HK 2520 needle bearing HK 2526 needle bearing	KORD 64		
KRZ	1228	Shaft			
KRZ	1237	Shouldered stud			
KRZ	1238	Double lever			
KRZ	1250	Lever			
KS	1251	Transfer gripper lever bearing stud			
KOR	1255	Cylinder gripper cam			
KSZ	1273	Cam roller with: KSZ 1272 stud KSZ 1274 washer K 22/17 needle bearing (new number: K 22x26x17)			
KSZ	1275	Shouldered bolt			
KSZ	1291	Shouldered stud			
KSB	12100	Shaft with: NK 20/16 needle bearing NK 24/20 needle bearing	KOR/KORA/KORD 62		
KORD	12100	Shaft With: same as KSB 12100	KORD 64		
KS	12101	Lever			
KS	12102	Connecting link with: NK 12/12 needle bearing			
KS	12104	Shoulder stud			
KS	12105	Shouldered bolt with: NK 12/12 needle bearing			
KS	12113	Front guide opening lever shaft			
KS	12115	Front guide opening lever			
KS	1306	Transfer gripper bar support lever, D.S. with: KS 1319 spacer washer KS 1348 spring plunger KS 1349 compression spring KS 1350 stop screw	KOR/KORA/KORD 62		
KORD	1306	Transfer gripper bar support lever, D.S.	KORD 64		
KS	1307	Transfer gripper bar support lever, O.S. with: KS 1348 spring plunger KS 1349 compression spring KS 1350 stop screw	KOR/KORA/KORD 62		
KORD	1307	Transfer gripper bar support lever, O.S.	KORD 64		

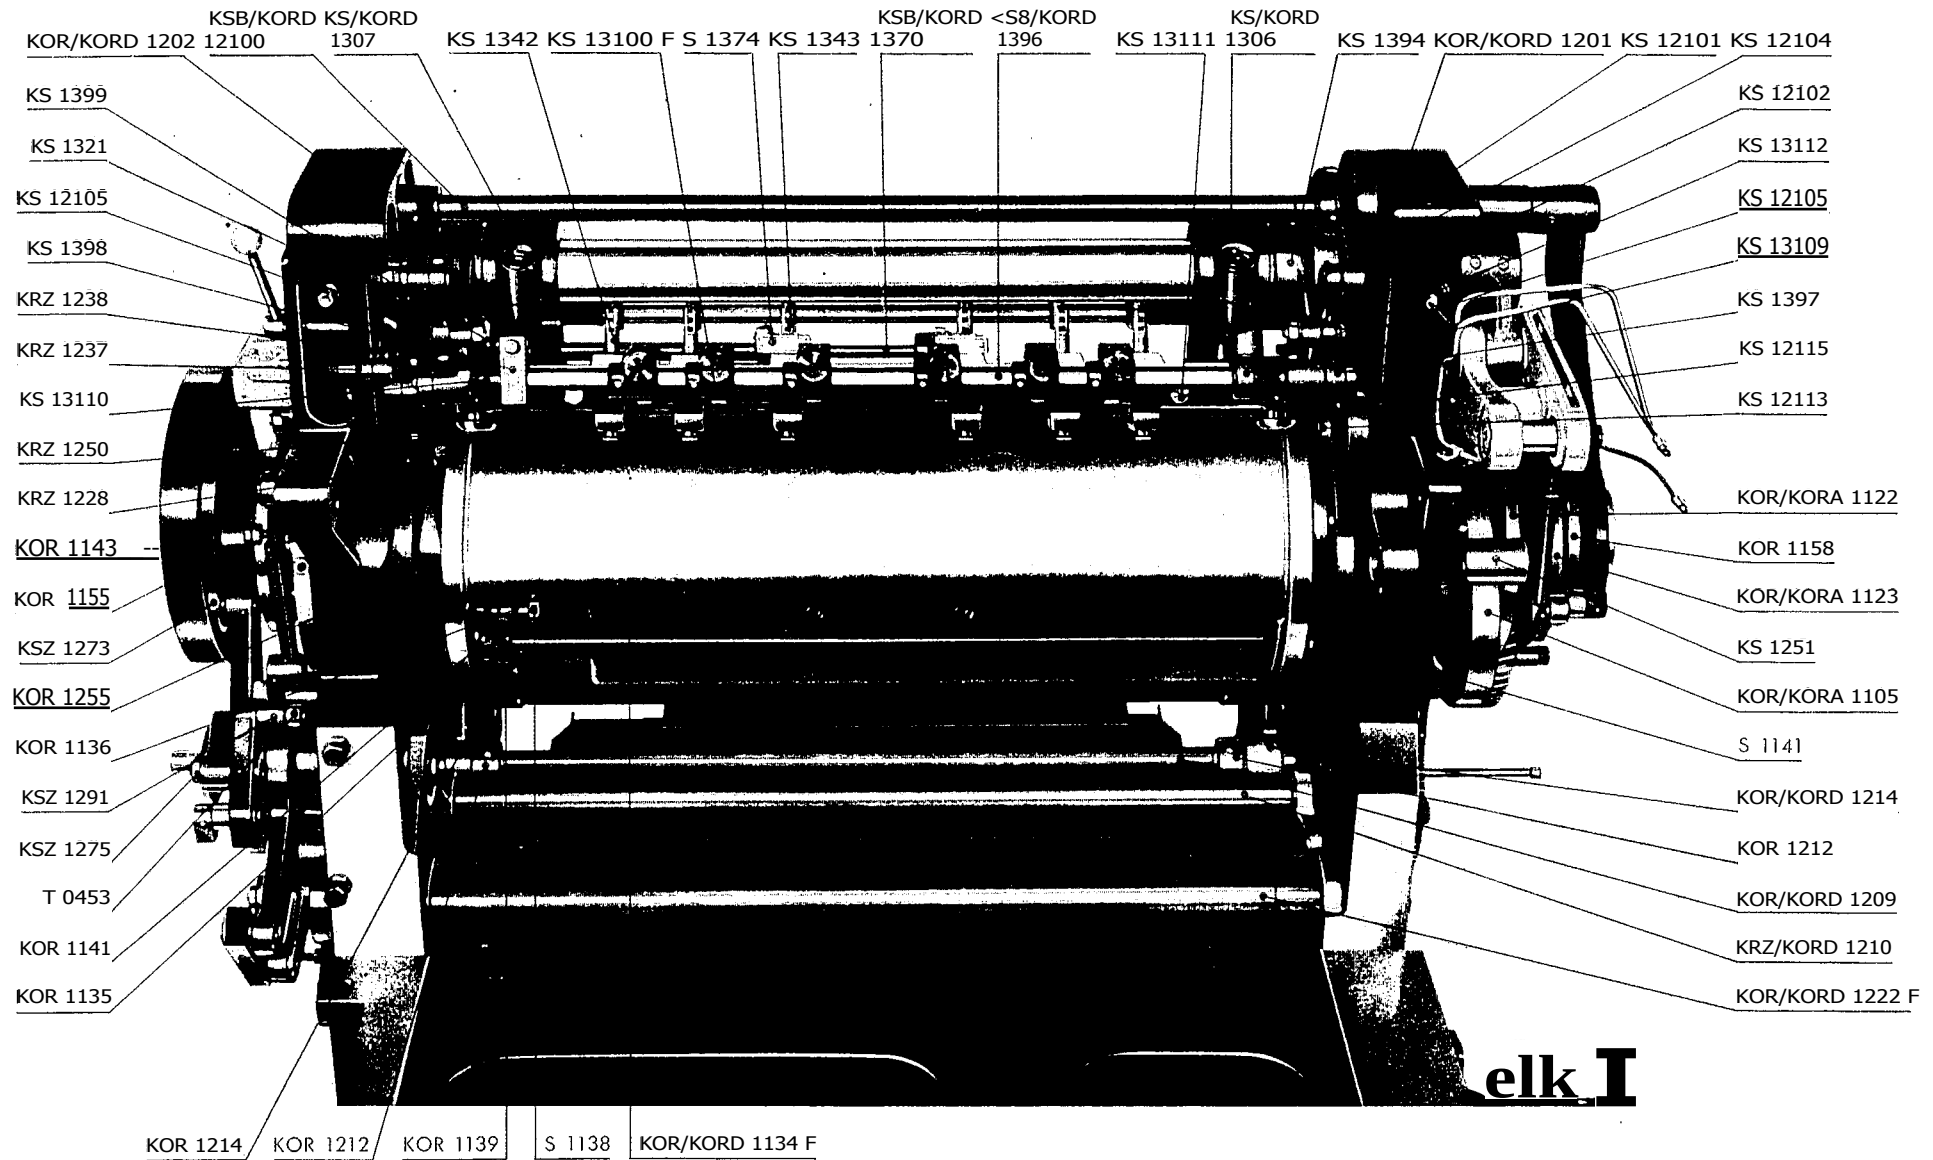

KS	1321	Stop screw	
% KS	1342	Transfer gripper, outer with: S 1353 roller S 1354 pin KS 1345 compression spring KSB 1340 retainer plate	
KS	1343	Transfer gripper, inner with: same as KS 1342	
KSB	1370	Cut-out shaft, inner with: NK 10/12 needle bearing KS 1367 cut-out lever KS 1368 cut-out lever	KOR/KORA/KORD 62
KORD	1370	Cut-out shaft, inner with: same as KSB 1370	KORD 64
S	1374	Cut-out disconnect plate with: KS 1375 cut-out plunger rod S 1376 plunger rod head S 1377 plate spring S 1378 eccentric bolt	
KS	1394	Front guide support lever	
KSB	1396	Front guide shaft	KOR/KORA/KORD 62
KORD	1396	Front guide shaft	KORD 64
KS	1397	Guide shaft lever with: T 0452 stud T 0453 roller	
KS	1398	Stop lever	KOR/KORA/KORD 62
KS	1399	StoRscrew	KOR/KORA/KORD 62
KS	13100 F	Front guide with: KS 13100 front guide holder KS 13102 retainer spring KS 13103 front guide KS 13105 adjusting screw KS 13108 cover plate	
KS	13109	Torsion spring: D.S.	
KS	13110	Torsion spring, O.S.	
KS	13111	Stop screw	
KS	13112	Tension collar	

For KORS check list below. If part is not listed, then refer to general listing.

KORS Parts			Illustration shown as
KORS	1105	Transfer gripper bar cam with: KS 1140 tapered pin	KOR/KORA 1105
KORS	1122	Cam	KOR/KORA 1122
KORS	1123	Cam	KOR/KORA 1123
KORS	1134 F	Reel bar	KOR/KORD 1134 F
KORS	1143	Cam	KOR 1143
KORS	1155	Impression cam with: KSZ 1158 stud	KOR 1155
KORS	1158	Eccentric flange	KOR 1158
KORS	1202	Cylinder side frame, O.S. With: KS 1241 bushing	KOR/KORD 1202
KORS	1209	Pressure control shaft	KOR/KORD 1209
KORS	1210	Cross bar with: KS 0443 washer	KRZ/KORD 1210
KORS	1222 F	Pressure control shaft-plate to blanket cylinder with: same as KOR 1222 F	KOR/KORD 1222 F
KORS	12100	Shaft with: same as KSB 12100	KSB/KORD 12100
KORS	1306	Transfer gripper bar support lever, D.S.	KS/KORD 1306
KORS	1307	Transfer gripper bar support lever, O.S.	KS/KORD 1307
KORS	1370	Cut-out shaft, inner with: same as KSB 1370	KSB/KORD 1370
KORS	1394	Front guide support lever	KS 1394
KORS	1396	Front guide shaft	KSB/KORD 1396
KORS	1399	Stop screw	KS 1399

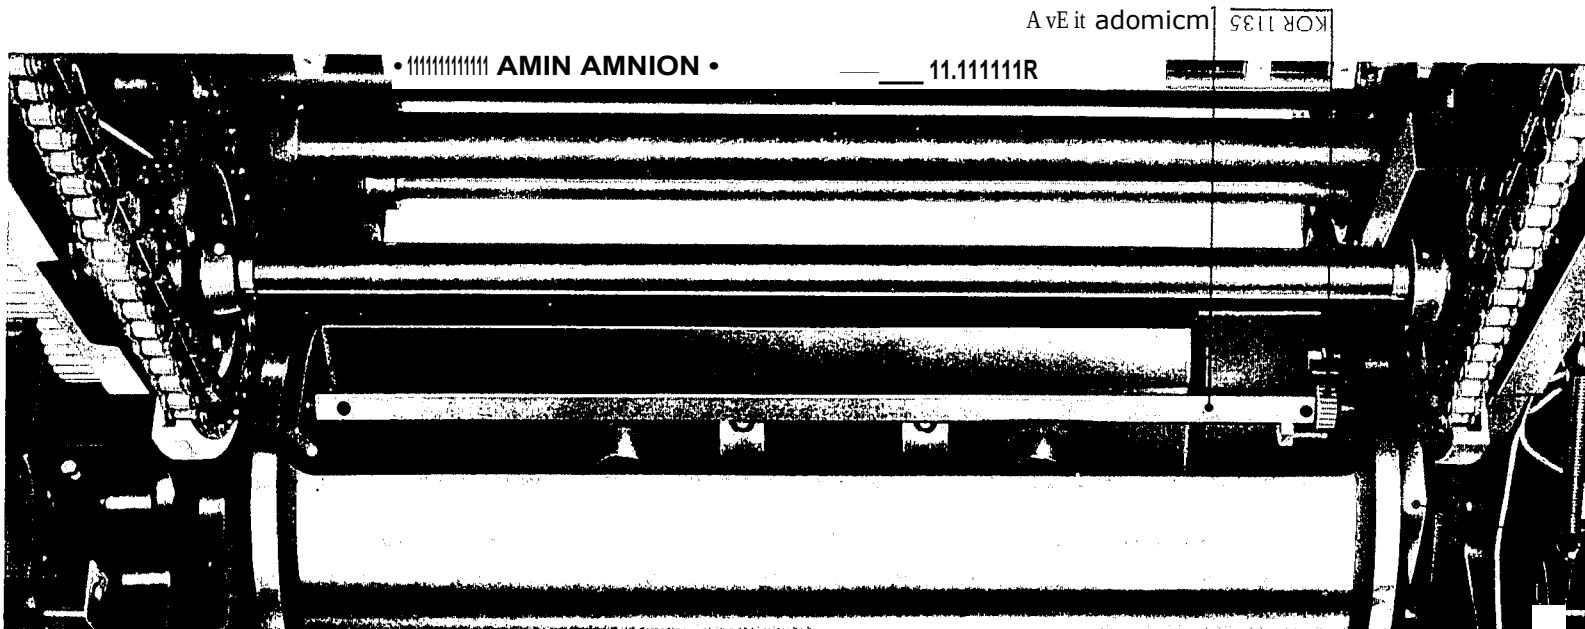

601C t SN

L6E1 S>I

MCI 3)1

60[61 3)1

17,01. , \$),

ctci 0e10)1

1016E. SN

11.1164"1" 11M11.0.11 411 illir 1.4 = 111111.04 AMRIE
41(fost Aiii A.i it .11110 JP -4,-. Ater - Alt itt.40010 ./174

1 1 11110101110111.1111.111.1011011000111111110100111-111101.



at si '0210)1/9S)1 Oat 6 t 0210>1/9S) otci C160)1

KOR 1255

KS 13110

6151 MON

86E1 CINON/SM

6621C1210N


9V

KOR	1134 F 1	Reel bar	
KORD	1134F)		
KOR	1135	Ratchet wheel	
KOR	1255	Cylinder gripper cam	
KSB	12100	Shaft with: NK 20/16 needle bearing NK 24/20 needle bearing	KOR/KORA/KORD 62
KORD	12100	Shaft with: NK 20/16 needle bearing NK 24/20 needle bearing	KORD 64
KS	12101	Lever	
KS	12102	Connecting link with: NK 12/12 needle bearing	
KS	12104	Shouldered stud	
KSB	1310	Transfer gripper shaft	KOR/KORA/KORD 62
KORD	1310	Transfer gripper shaft with: KORD 1322 end cover	KORD 64
KORD	1312	Washer	KORD 64/KORS
KORD	1315	Adjusting screw with: KORD 1316 washer	KORD 64
KORD	1319	Spacer washer	KORD 64/KORS
KS	1397	Lever with: T 0452 shoulder stud T 0453 roller	
KS	1398	Stop lever	KOR/KORA/KORD 62
KORD	1398	Stop lever	KORD 64/KORS
KORD	1399	Adjusting screw	KORD 64/KORS
KS	13109	Torsion spring, D.S.	
KS	13110	Torsion spring, O.S.	
KS	13112	Tension collar	

For KORS check list below. If part is not listed, then refer to general listing.

KORS Parts		Illustration shown as
KORS	1134 F	Reel bar KOR/KORD 1134 F
KORS	12100	Shaft with: same as KSB 12100 KSB/KORD 12100

A7

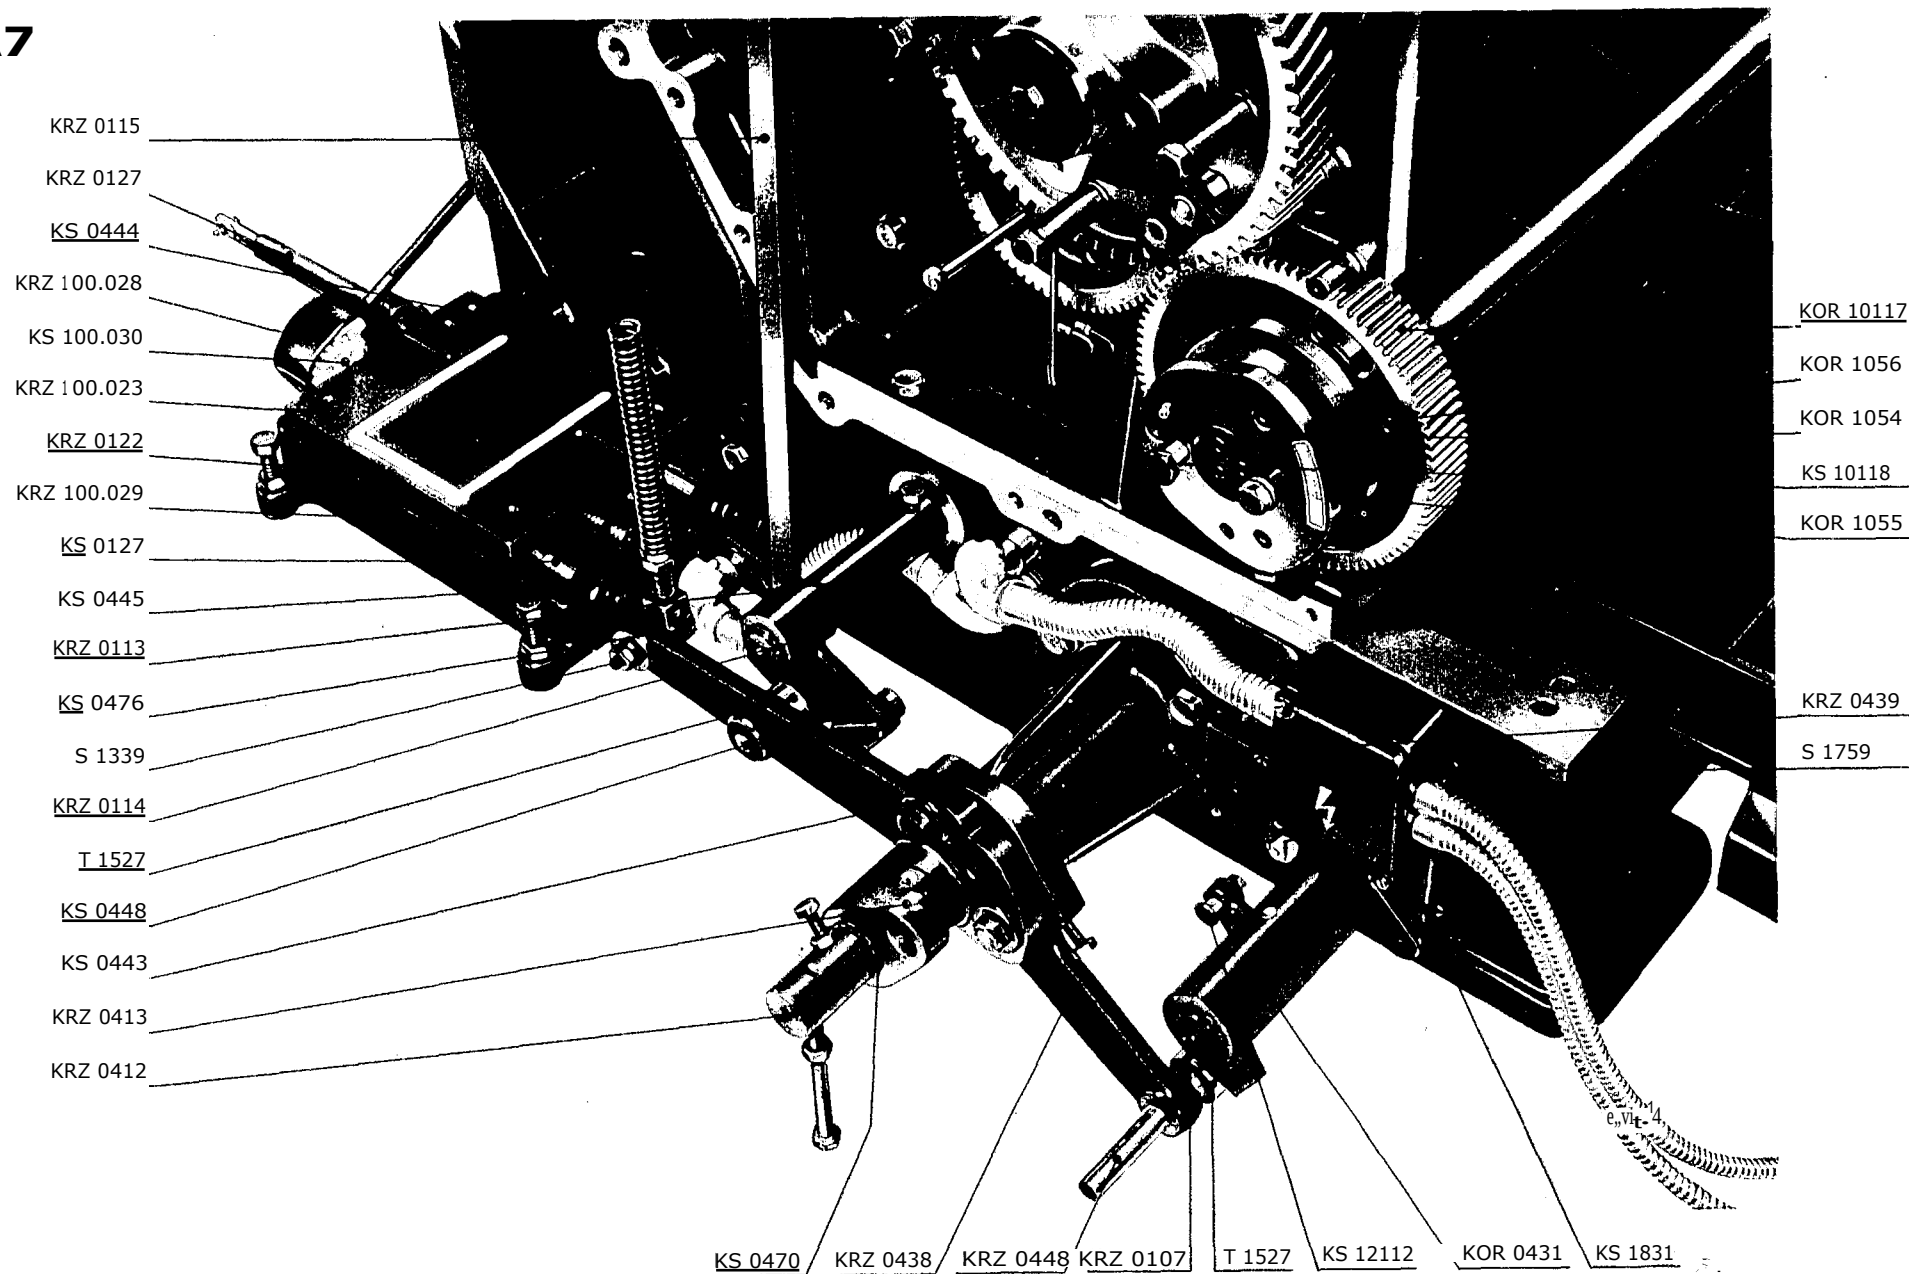

KRZ	0107	Support shaft	
KRZ	0113	Shouldered shaft with: S 10144 washer	
KRZ	0114	Brake release cam lever with: HK 2520 needle bearing GTP 5691 stud KSL 10530 washer	
KRZ	0115	Connecting rod with: HK 1210 needle bearing KSL 10530 washer	
KRZ	0122	Motor base	KORD 62 KORA up to No. 323788 KOR up to No. 325727
KRZ	0127	Support rod	
KS	0127	Support rod	
KRZ	0412.	Support shaft with: KS 0441 bolt	
KRZ	0413	Brake support lever	
KOR	0431	Release lever with: GT 0296 knurled screw	
KRZ	0438	Foot release lever	
KRZ	0439	Support bracket	
KS	0443	Washer	
KS	0444	Compression spring	
KS	0445	Spring rod	
KS	0448	Roller stud	
KRZ	0448	Stop bolt	
KS	0470	Spacer washer	
KS	0476	Spring rod head	
KOR	1054	Cam flange with: NK 40/20 needle bearing KOR 1088 spacer washer 51108 thrust bearing	
KOR	1055	Inking ductor roller cam	
KOR	1056	Water ductor roller cam	
KOR	10117	Gear	
KS	10118	Shoulder stud	
KS	12112	Shouldered bolt	
	1339	Shouldered bolt	
	1527	Roller	
	1759	Spring rod	

KS	1831	Tension spring	
KRZ	100.023	Motor mounting base with: KRZ 100.025 threaded bushing	KORD 62 KORA up to No. 323788 KOR up to No. 325727
KRZ	100.028	Guard & bearing bracket with: HK 1612 needle bearing	
KRZ	100.029	Screw with: 51104 thrust bearing	KORD 62 KORA up to No. 323788 KOR up to No. 325727
KS	100.030	Bevel gear with: 51104 thrust bearing	

For KORS check list below. If part is not listed, then refer to general listing.

KORS Parts			Illustration shown as
KORS	1055	Inking ductor roller cam	KOR 1055

AS

AKL/RUKU 0101

KS 100.042

KORD 90 23

KORD 90 29

KORD 0122

KRZ 01 27

KS 0127

KORD 90 26

KS 100.030

KS 100.044

SN 4.38.08

KS 100.037

KS 100.032

KORD 90 38

KORD 90 31

DIN 98

DIN 81 80

KSB 15 03


KOR/KORD 9045

KS 100.042

KRZ	0101	Main base	KOR/KORA/KORD 62
KORD	0101	Main base	KORD 64
KORD	0122	Motor base	KORD 64/KORA*/KORS/ KOR from No. 325728
KRZ	0127	Support rod	
KS	0127	Support rod	
KSB	1503	Angle piece	
KORD	9023	Motor mounting base with: KS 100.025 threaded bushing	KORD 64/KORA*/KORS/ 1 KOR from No. 325728
KORD	9026	Bearing support	KORD 64/KORA*/KORS/ KOR from No. 325728
KORD	9029	Screw with: 51104 thrust bearing	1 KORD 64/KORA*/KORS/ 1 KOR from No. 325728
KORD	9031	Guard bearing bracket with: HK 1612 needle bearing KS 1589 holder screw T 0109 compression spring	KORD 64/KORA*/KORS/ KOR from No. 325728
KORD	9038	Shaft	KORD 64/KORA*/KORS/ KOR from No. 325728
KOR	9045	Shaft	KORA*/ 1 KOR from No. 325728
KORD	9045	Shaft	KORD 64
KS	100.030	Bevel gear	
KS	100.032	Speed control crank with: KS 100.039 gear KS 100.040 gear KS 100.041 gear	
KS	100.037	Stud	
KS	100.042	Sprocket	
KS	100.044	Pointer	
DIN 98		Crank handle E 25	
DIN 8180		Roller chain 12.7x4.88x166 links	
SN	4.38.08	Speed indicator plate	

For KORS check list below. If part is not listed, then refer to general listing.

KORS Parts			Illustration shown as
KORS	0101	Main base	KRZ/KORD 0101
KORS	9045	Shaft	KOR/KORD 9045

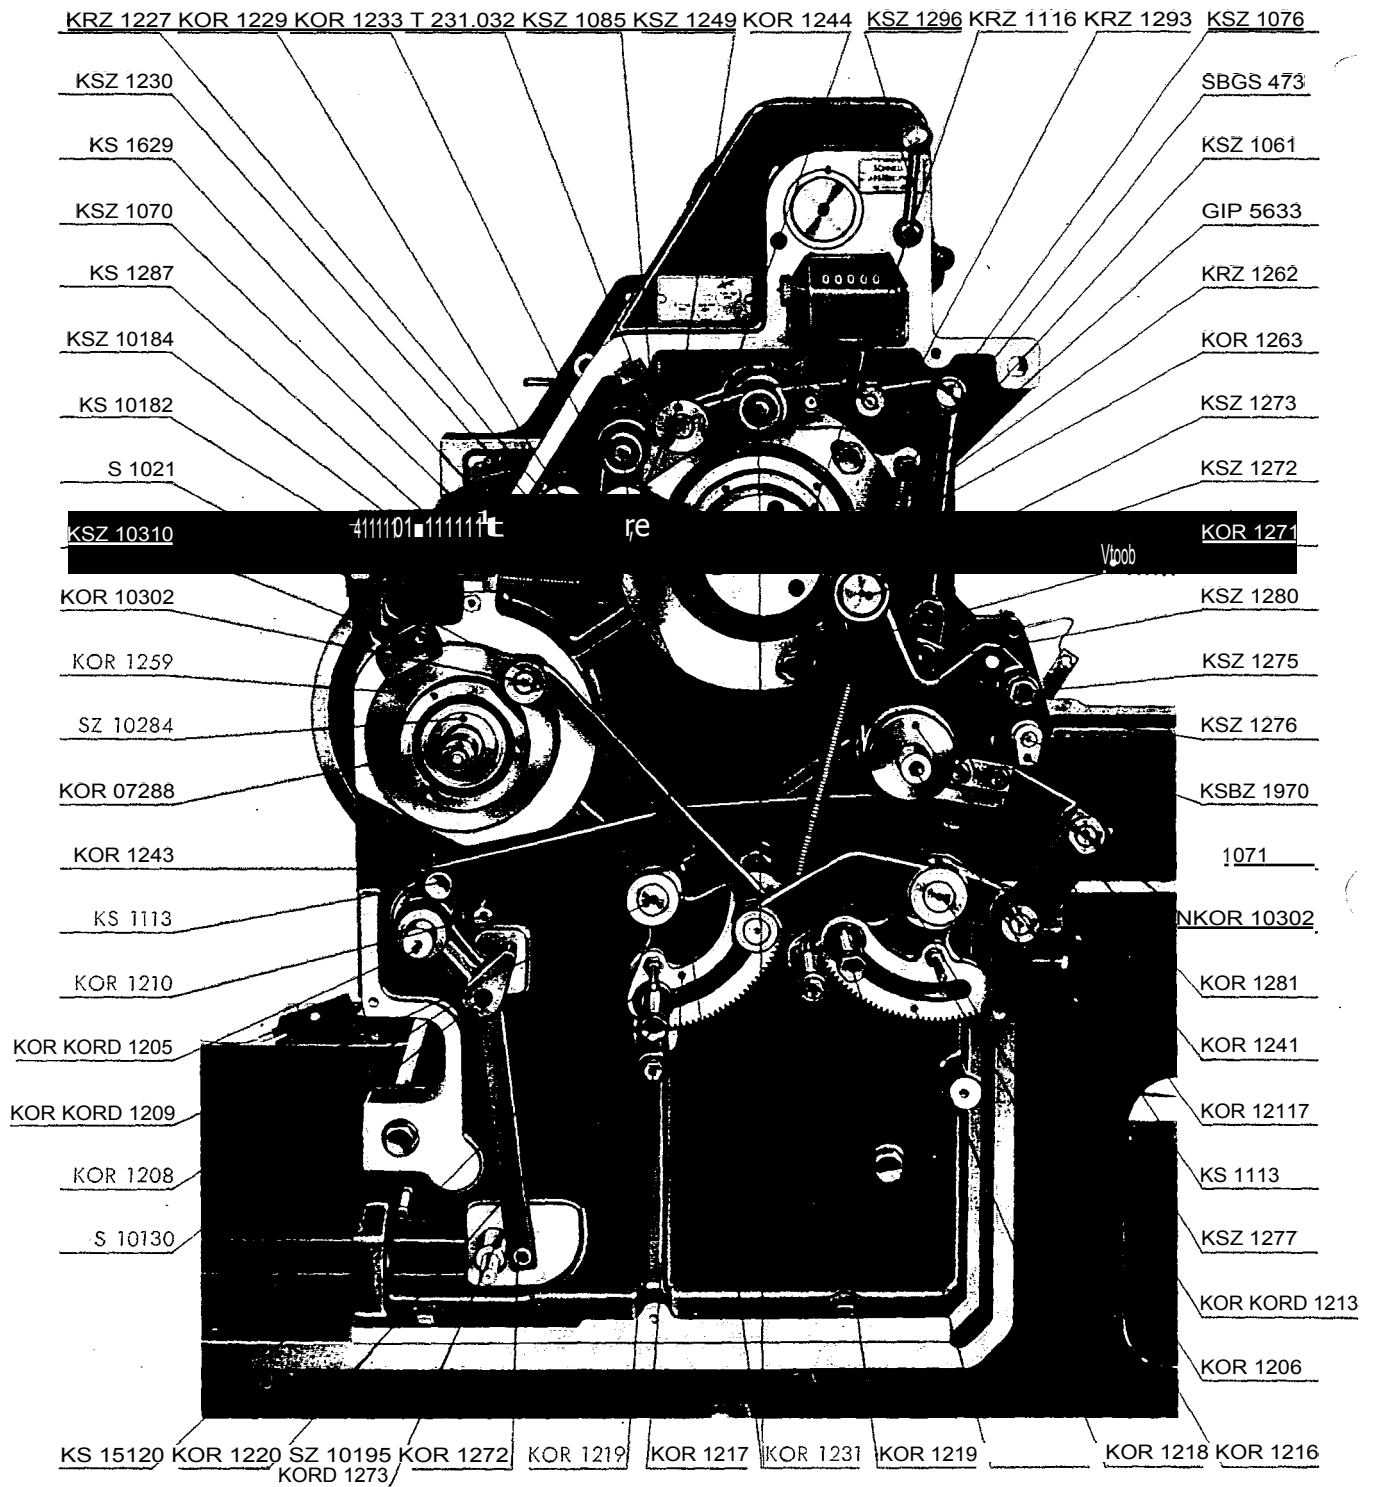

KOR	07288	Thrust shaft with: ARK 3047 thrust bearing (new number: K 81106) LS 3047 thrust bearing washer
	1021	Connecting link with: HK 1616 needle bearing
KSZ	1061	Connecting link with: HK 1212 needle bearing
KSZ	1070	Compression spring
	1071	Spring rod head
KSZ	1076	Shouldered stud
KSZ	1085	Spring rod head
	10130	Connecting link pin (stud)
KS	10182	Spring rod pin
KSZ	10184	Spring rod
SZ	10195	Support stud
SZ	10284	Threaded adjusting ring (from Serial No. 323871: KOR 07298 with 10 flanged spring plates K 6204)
KOR	10302	Bearing stud with: KS 10156 washer
KSZ	10310	Guide block with: KSBZ 10313 shim
KS	1113	Shouldered stud
KRZ	1116	Retainer ring-nut
KOR	1205	Impression control shaft with: HK 2520, needle bearing
KORD	1205	Impression control shaft with: HK 2520 needle bearing
KOR	1206	Double lever
KOR	1208	Stop lever
KOR	1209	Pressure control shaft
KORD	1209	Pressure control shaft
KOR	1210	Stop bolt
KOR	1213	Pressure control shaft
KORD	1213	Pressure control shaft
KOR	1216	Indicator
KOR	1217	Segment gear
KOR	1218	Segment gear
KOR	1219	Pinion gear
KOR	1220	Lock bolt

KOR/KORA

KOR/KORA/KORD 62

KORD 64

KOR/KORA/KORD 62

KORD 64

KOR/KORA/KORD 62

KORD 64

KRZ	1227	Brush shaft with: HK 1210 needle bearing
KOR	1229	Lever
KSZ	1230	Connecting link with: HK 1010 needle bearing
KOR	1231	Support shaft
KOR	1233	Roller lever with: HK 1210 needle bearing KS 1234 washer
KOR	1241	Connecting link with: HK 1616 needle bearing
KOR	1243	Connecting link with: HK 1512 needle bearing
KOR	1244	Counter lever with: HK 1210 needle bearing KS 1234 washer KSL 10249 stud KS 10182 stud
KSZ	1249	Roller with: K 12/10 needle bearing (new number: K 12x15x10) KSZ 1246 stud
KOR	1259	Eccentric bushing, O.S. with: F-7b-6643 needle bearing KSZ 10287 washer
KRZ	1262	Threaded adjusting ring
KOR	1263	Cylinder bearing, O.S. with: F-7b-10412 needle bearing F-7b-4346 thrust bearing KRZ 1117 thrust washer KRZ 1120 spacer ring
KOR	1271	Impression cam lever with: NK 30/20 needle bearing KSZ 1278 washer
KSZ	1272	Roller stud
KOR	1272	Connecting link with: HK 1210 needle bearing
KORD	1273	Support stud
KSZ	1273	Roller with: K 22/17 needle bearing (new number: K 22x26x17) KSZ 1274 washer
KSZ	1275	Shouldered bolt
KSZ	1276	Impression pawl with: HK 1816 needle bearing NK 12/16 needle bearing

KS	0443	Washer	
KOR	07268	Gear flange	
KOR	07270	Blanket cylinder gear I	
KOR	07287	Washer	
KOR	07295	Pilot shaft	
KOR	07297	Lock bolt	
	1021	Connecting link with: HK 1616 needle bearing	
KOR	1055	Inking ductor roller cam	
KOR	1056	Water ductor roller cam	
KOR	1059	Cover plate	
KRZ	10107	Gear shaft	KOR/KORA
KOR	10117	Cam Gear	
KOR	10118	Intermediate gear with: NK 30/20 needle bearing	
KORD	10118	Intermediate gear with: NK 40/20 needle bearing KOR 1088 spacer ring	KORD/KORS
	10141	Washer	KOR/KORA
	10152	Roller stud with: S 10151 roller	
KSBZ	10281	Guide plate with: HK 1212 needle bearing	
KOR	10302	Flanged stud	
KOR	10379	Lubrication pipe	
KOR	1105	Transfer gripper cam	KOR
KORA	1105	Transfer gripper cam	KORA/KORD
KS	1113	Roller stud with: KS 1111 roller	
KOR	1123	Cam	KOR
KORA	1123	Cam	KORA/KORD
KOR	1158	Cam flange	
KOR	1213	Impression control shaft	KOR/KORA/KORD 62
KORD	1213	Impression control shaft	KORD 64
KOR	1215	Lever with: KOR 10302 stud KS 10156 washer	
KSZ	1246	Support stud	
KS	1250	Cover plate	

KOR	1264	Cylinder bearing, D.S. with: F-7b-10412 needle bearing KRZ 1117 thrust washer BR 130 retainer ring	
KORD	1269	Gear shaft	KORD/KORS
KS	1294 F	Compression connecting rod with cover with: KS 1299 compression spring	
KS	12103	Stop bolt	
KOR	12107	Cam lever	
KOR	12108	Shaft	
KS	12111	Cam lever	
KS	12112	Shouldered stud	
KS	1301	Cam lever with: NK 20/20 needle bearing	
KS	1302	Connecting link	
KS	1303	Lever	
KS	1304	Spring rod head	
•	1311	Spring rod	
KS	1316	Bearing stud with: 3206 ball bearing	
KS	1317	Link pin	
KS	1318	Pin	
GTP	5670	Washer	KORD/KORS
S	801.007	Washer	

For KORS check list below. If part is not listed, then refer to general listing.


KORS Parts		Illustration shown as
KORS	1055	Inking ductor roller can KOR 1055
KORS	1059	Cover plate with: KORS 10349 spacer washer KOR 1059
KORS	1105	Transfer gripper cam KOR/KORA 1105
KORS	1123	Cam KOR/KORA 1123
KORS	1158	Cam flange KOR 1158
KORS	1213	Impression control shaft KOR/KORD 1213

KSZ	1277	Lever support shaft with: KSZ 1294 washer
KSZ	1280	Stop block
KOR	1281	Impression lever with: NK 40/20 needle bearing KSZ 1279 washer
KS	1287	Guide block
KRZ	1293	Lever
KSZ	1296	Stop lever shaft with: F 25 ball handle KRZ 1292 ball rod
KOR	12117	Guide washer
KS	15120	Washer
KS	1629	Shouldered stud
KSBZ	1970	Stud
SBGS	4730	Stud
GTP	5633	Tension spring
	231.032	Compression spring with: KOR 1245 spring rod

For KORS check list below. If part is not listed, then refer to general listing.


KORS Parts		Illustration shown as
KORS	1205	Impression control shaft with: HK 2520 needle bearing
KORS	1209	Pressure control shaft
KORS	1213	Pressure control shaft

KRZ 1227 KOR 1229 KOR 1233 T 231,032 KSZ 1085 KU 1249 KOR 1244 KSZ 1296 .KRZ 1116 KRZ 1293 KSZ 1076

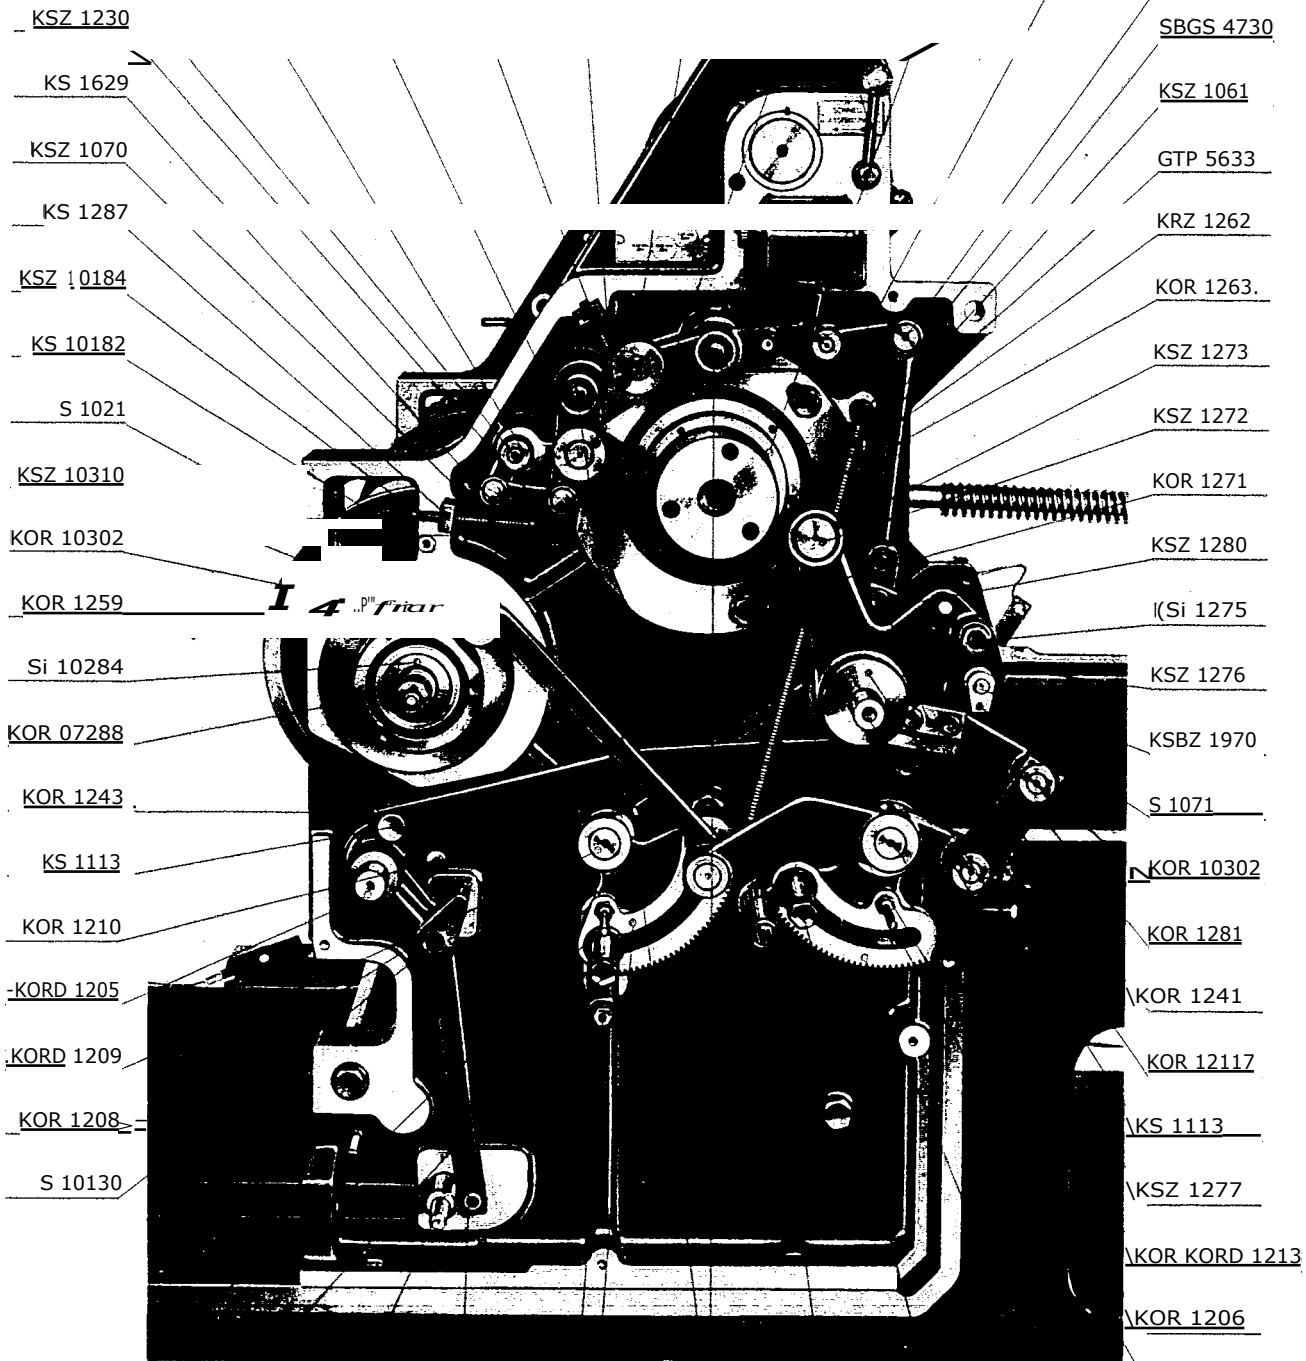

KS 15120 KOR1220 SZ 10195 /KOR 1272/ KOR 12191 IKOR 1217 IKOR 1231 \KOR 1219 \KOR 1220 \KOR 1218 KOR 1216
KORD 1273.

KOR 07 260 F

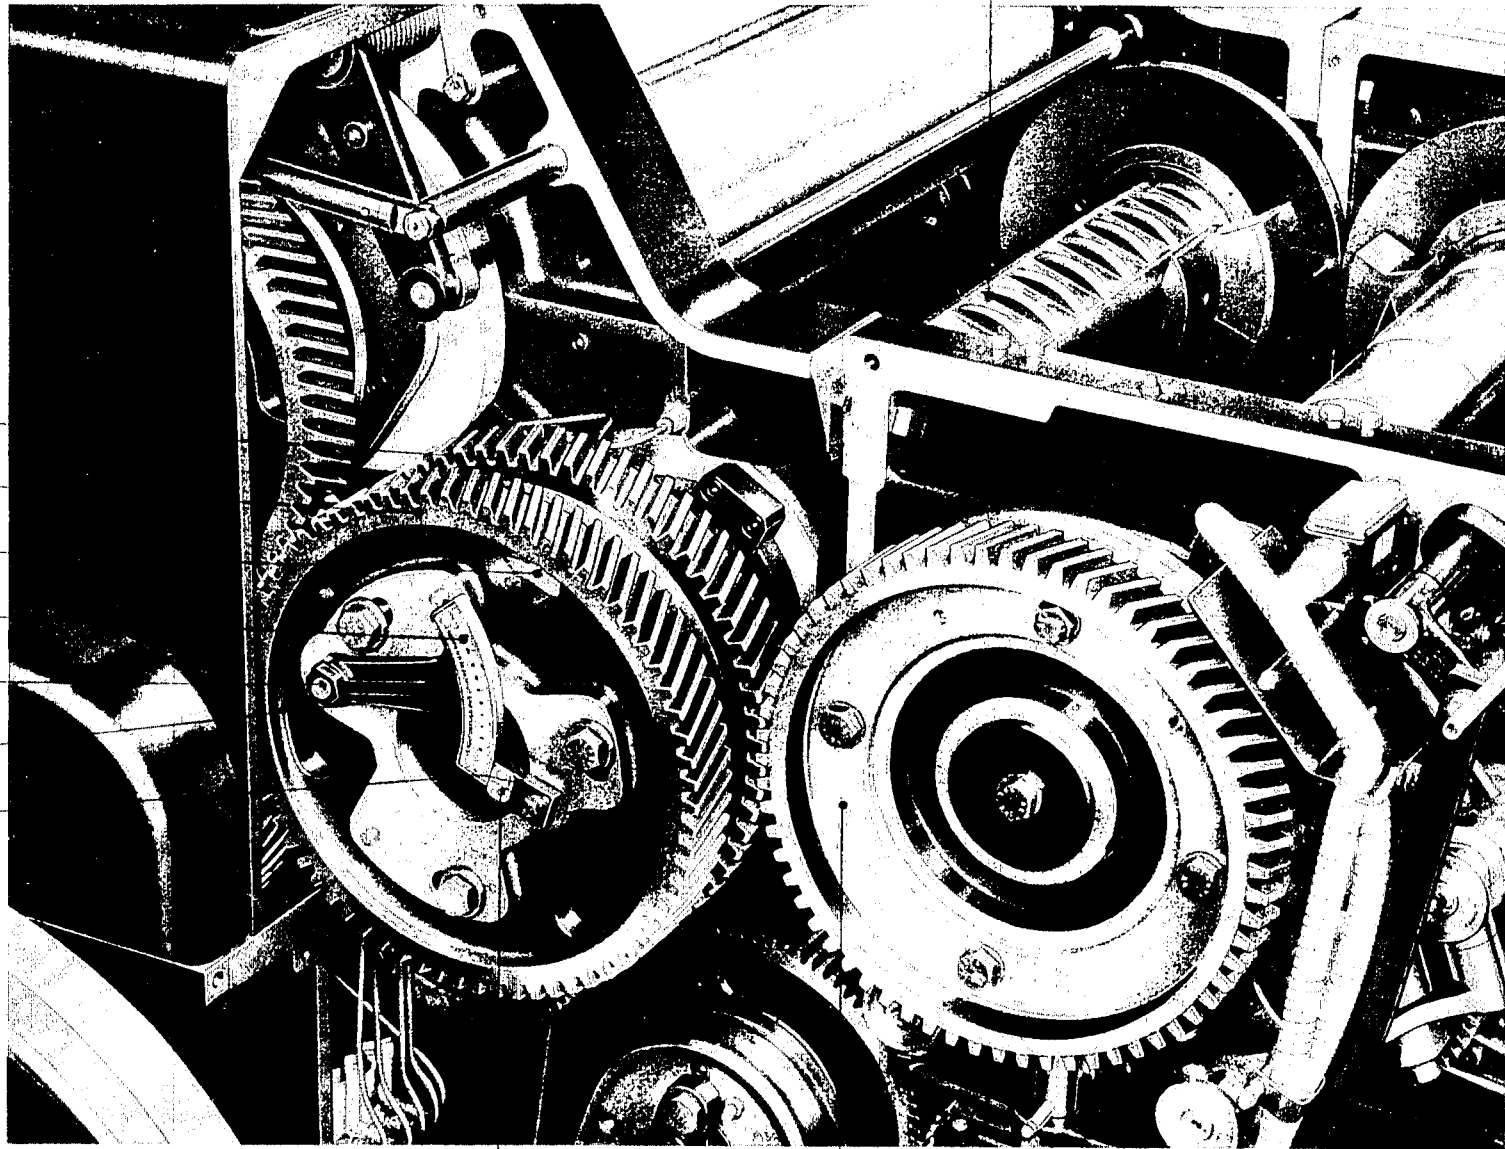

KOR 07 270

KOR 07 276

KOR 07 285

SNI 4.24.17


(OR 07 293

KSBZ 10279



KSBZ 10 284.

SN 4.24.18

KOR 07 170

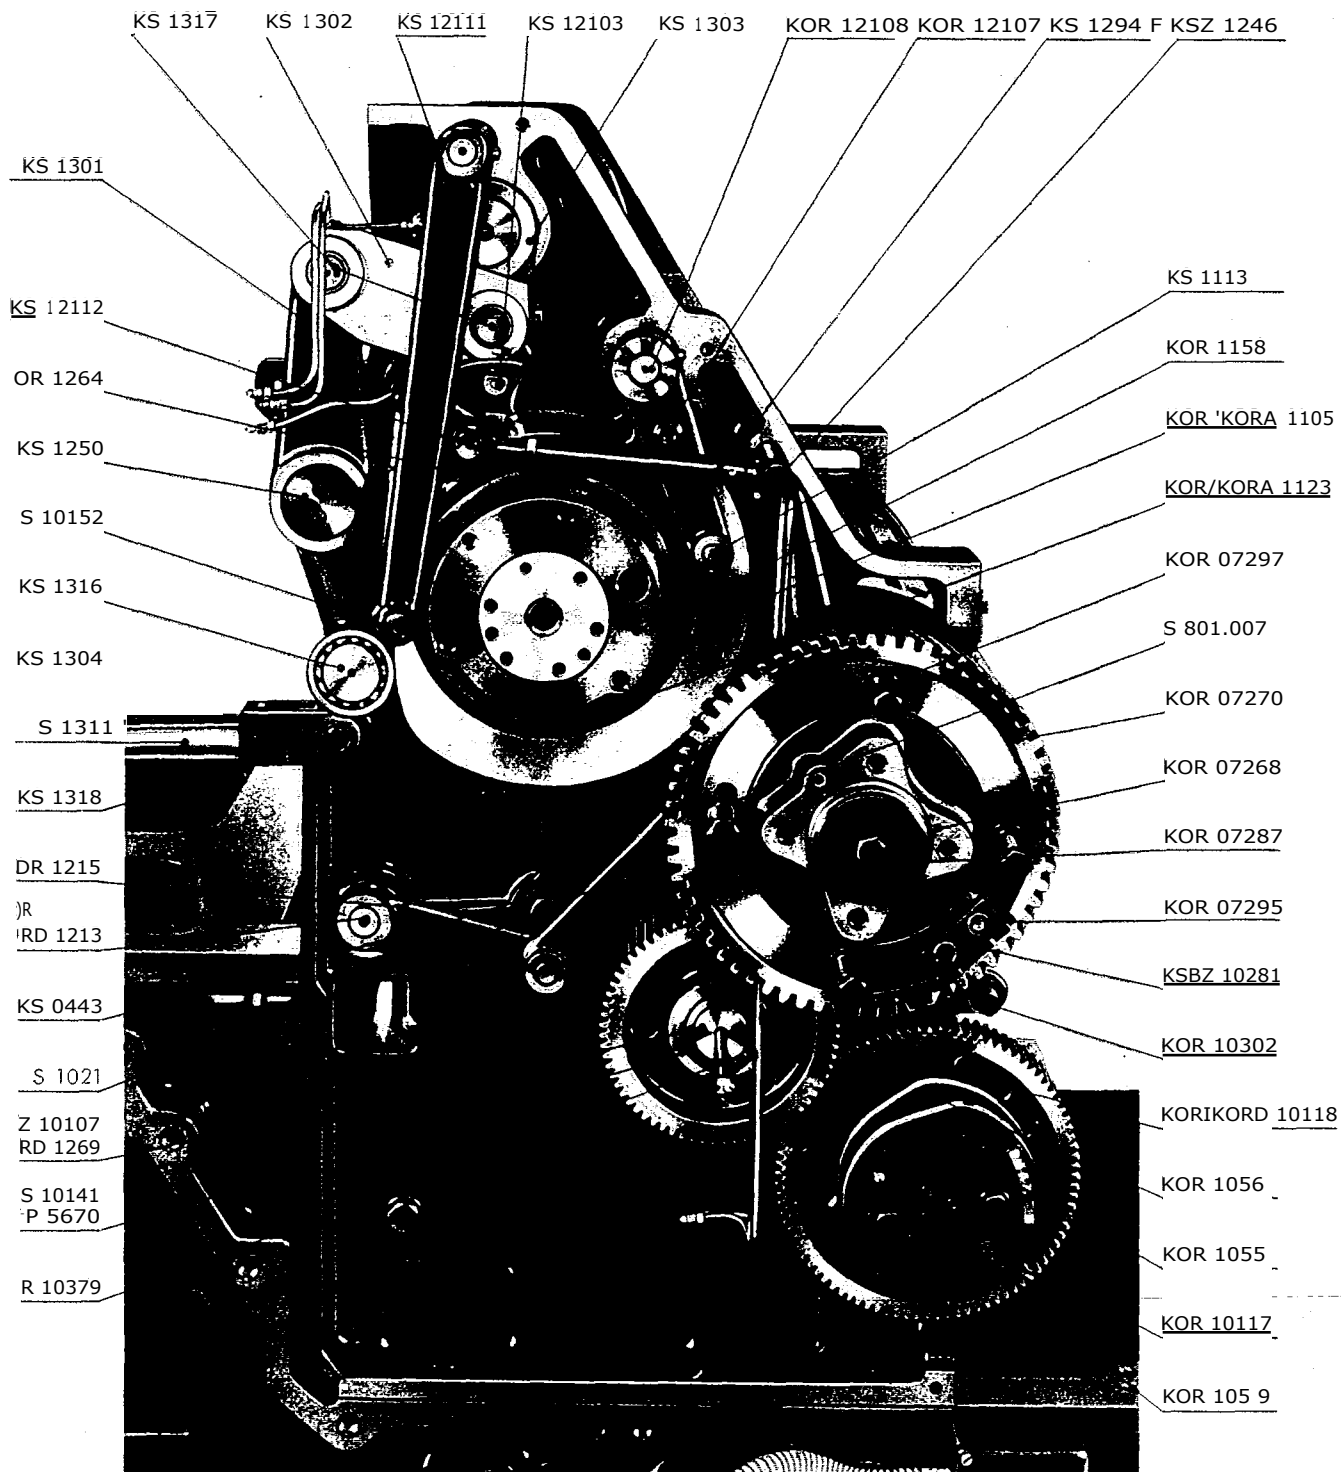

KORS 1022	Housing	
KORS 1023	Oscillation adjustment eccentric with: S 1635 collar	
KORS 1024	Adjustment plate	
KORS 1054	Flange with: IORS 1088 spacer ring K 40/20 needle bearing GS/AXK/AS 4060 thrust bearing (new number: GS 81108; AXK/AS 4060)	
SOR 1059	Locking screw with: ORS 1026 washer	
KORS 1102	Cylinder gear I	
KORS 1107	Cylinder gear II	
KORS 1424	Shaft	
KORS 1429	Drive gear	
KORS 1448	Gear flange	
V 75084 — A	Lubrication distributor unit	
221 136 U 5	Lubrication distributor bracket	
SN 4.08.35	Oscillation indicator plate	

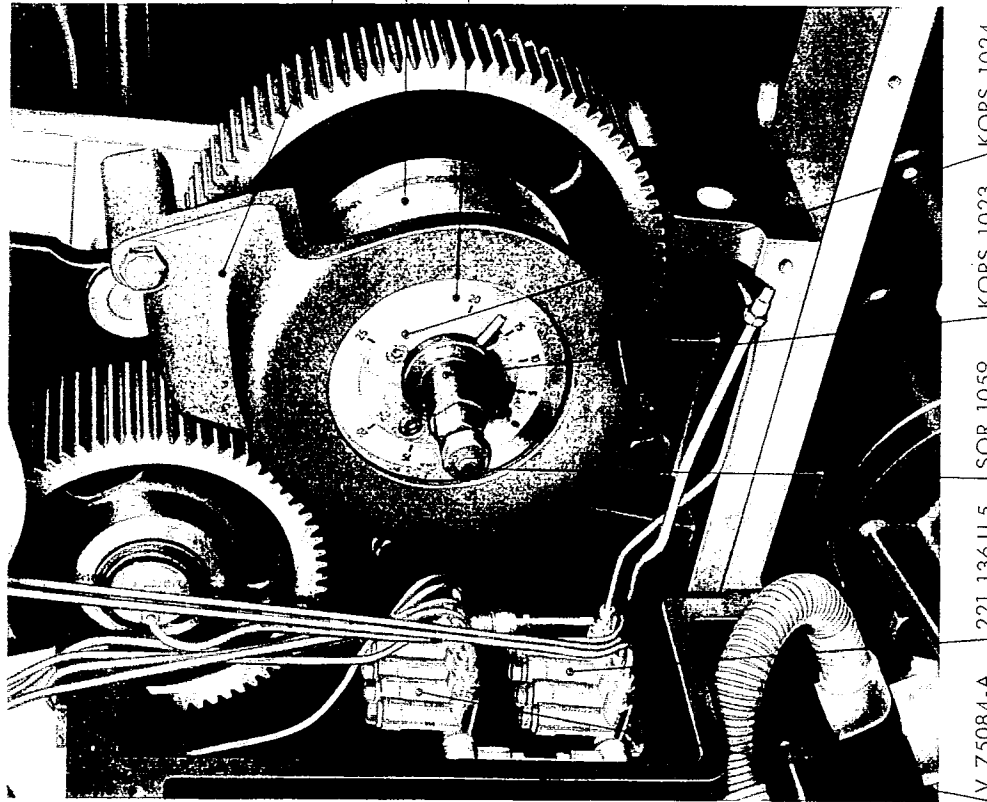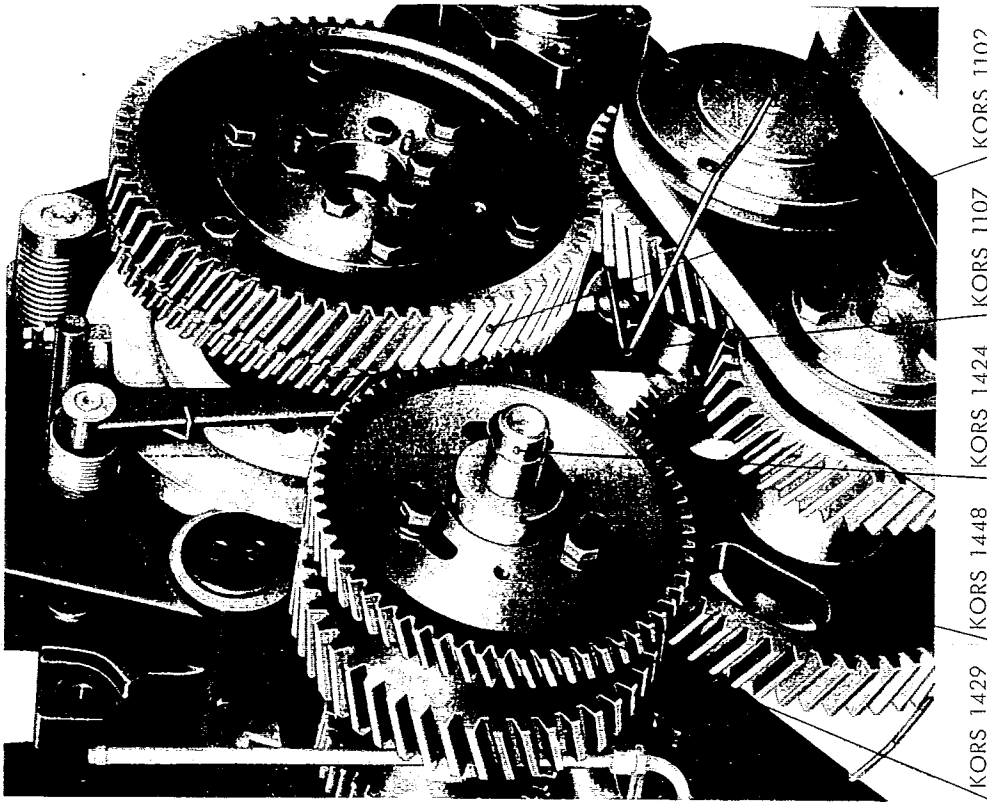



KORS 1022

KORS 1054

SN 4.08.35

KOR	07170	Plate c tinder gear	
KOR	07260 F	Blanket cylinder shaft	KOR up to No. 311398
		with: OR 07268 gear flange	
		IOR 346.001 F blanket shell	
		IOR 347.002 rubber blanket	
		OR 346.003 under blanket	
KOR	0270	Blanket cylinder gear I	
KOR	07276	Blanket cylinder gear II	
KOR	07285	Disc	
		with: SBZ 10283 screw	
		SBZ 10281 guide plate	
		K 12/12 needle bearing	1 KOR up to No. 318205
KOR	07293	Adjustrent shaft	KORA up to No. 318193
KSBZ	10279	Quadrant	KORD up to No. 317778
KSBZ	10284	Guide plate	
SN	4.24.17	Indica or plate	
SN	4.24.18	Pointe	


A13

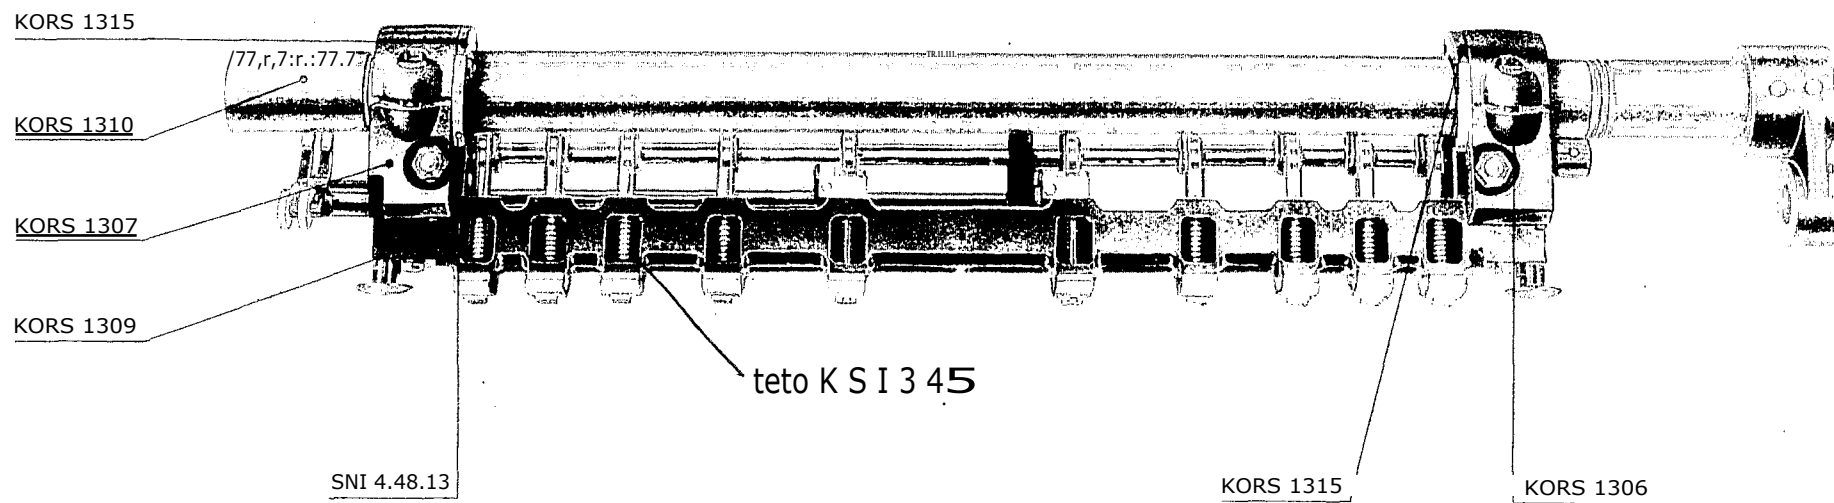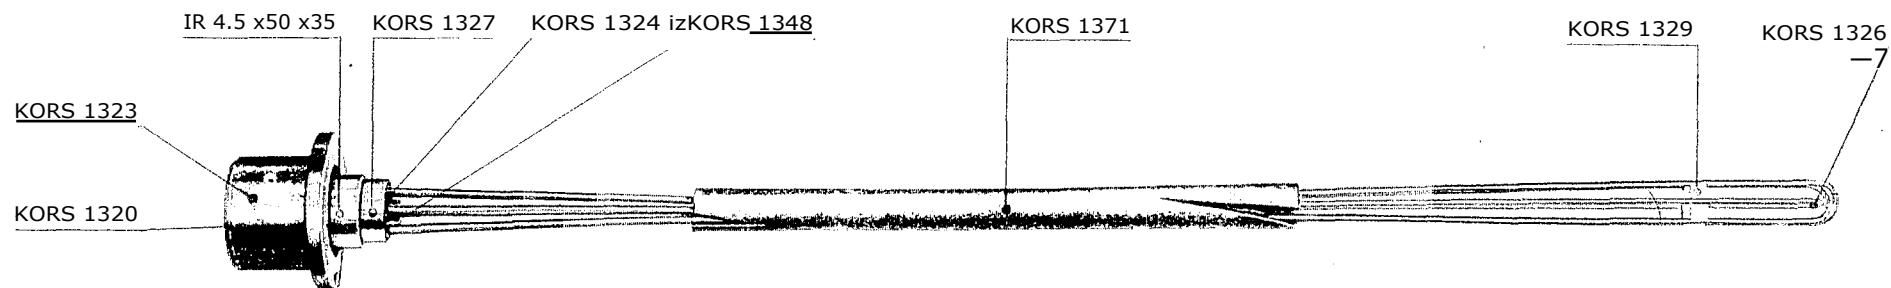


KORS	1306	Transfer gripper bar support lever, D.S. with: KORS 1316 compression spring
KORS	1307	Transfer gripper bar support lever, O.S.
KORS	1309	Transfer gripper bar
KORS	1310	Transfer gripper shaft
KORS	1315	Adjusting ring with: GT 0668 shouldered screw
• KORS	1320	Cover
KORS	1323	Bushing cap with: F-14726 ball bearing
KORS	1324 F	Guide piece with: SOR 0925 trunnion F-16181 thrust bearing
KORS	1326	Torsion rod
KORS	1327	Retainer ring with: KORS 1328 guide ring (in bronze bushing of side frame)
KORS	1329	Guide piece
KORS	1348	Retainer plug
KO RS	1371	Sleeve
IR 45x50x35		Inner bearing
SN	4.48.13	Indicator plate

/ 16 spyi"j-

AE ksi3q2--

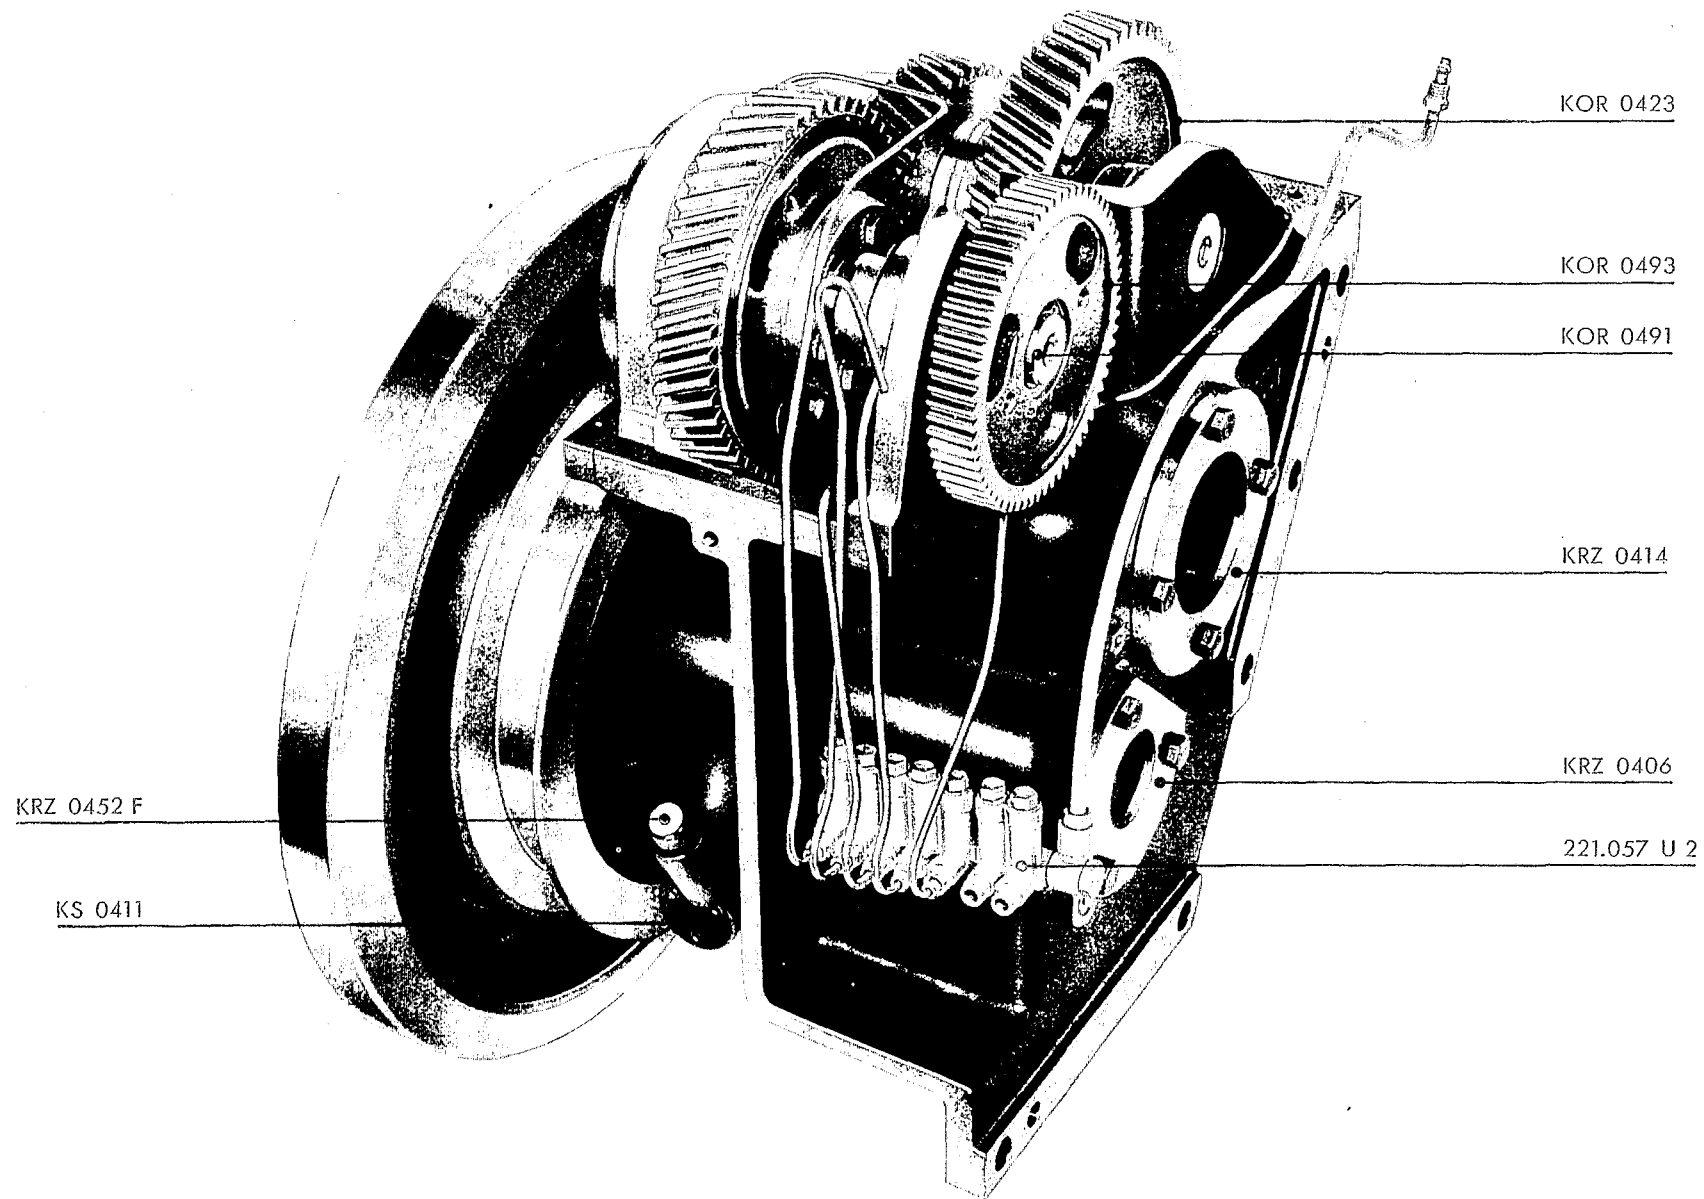

KRZ	0402	Support bar
KRZ	0 04	Flywheel (for 60 cycle motor) or: KRZ 0480 (for 60 cycle motor) with: S 0477 oil seal
KOR	0108	Gear shaft
KRZ	0116	Bearing flange
KS	0140	Cap bolt
KOR	0496	Bearing cap

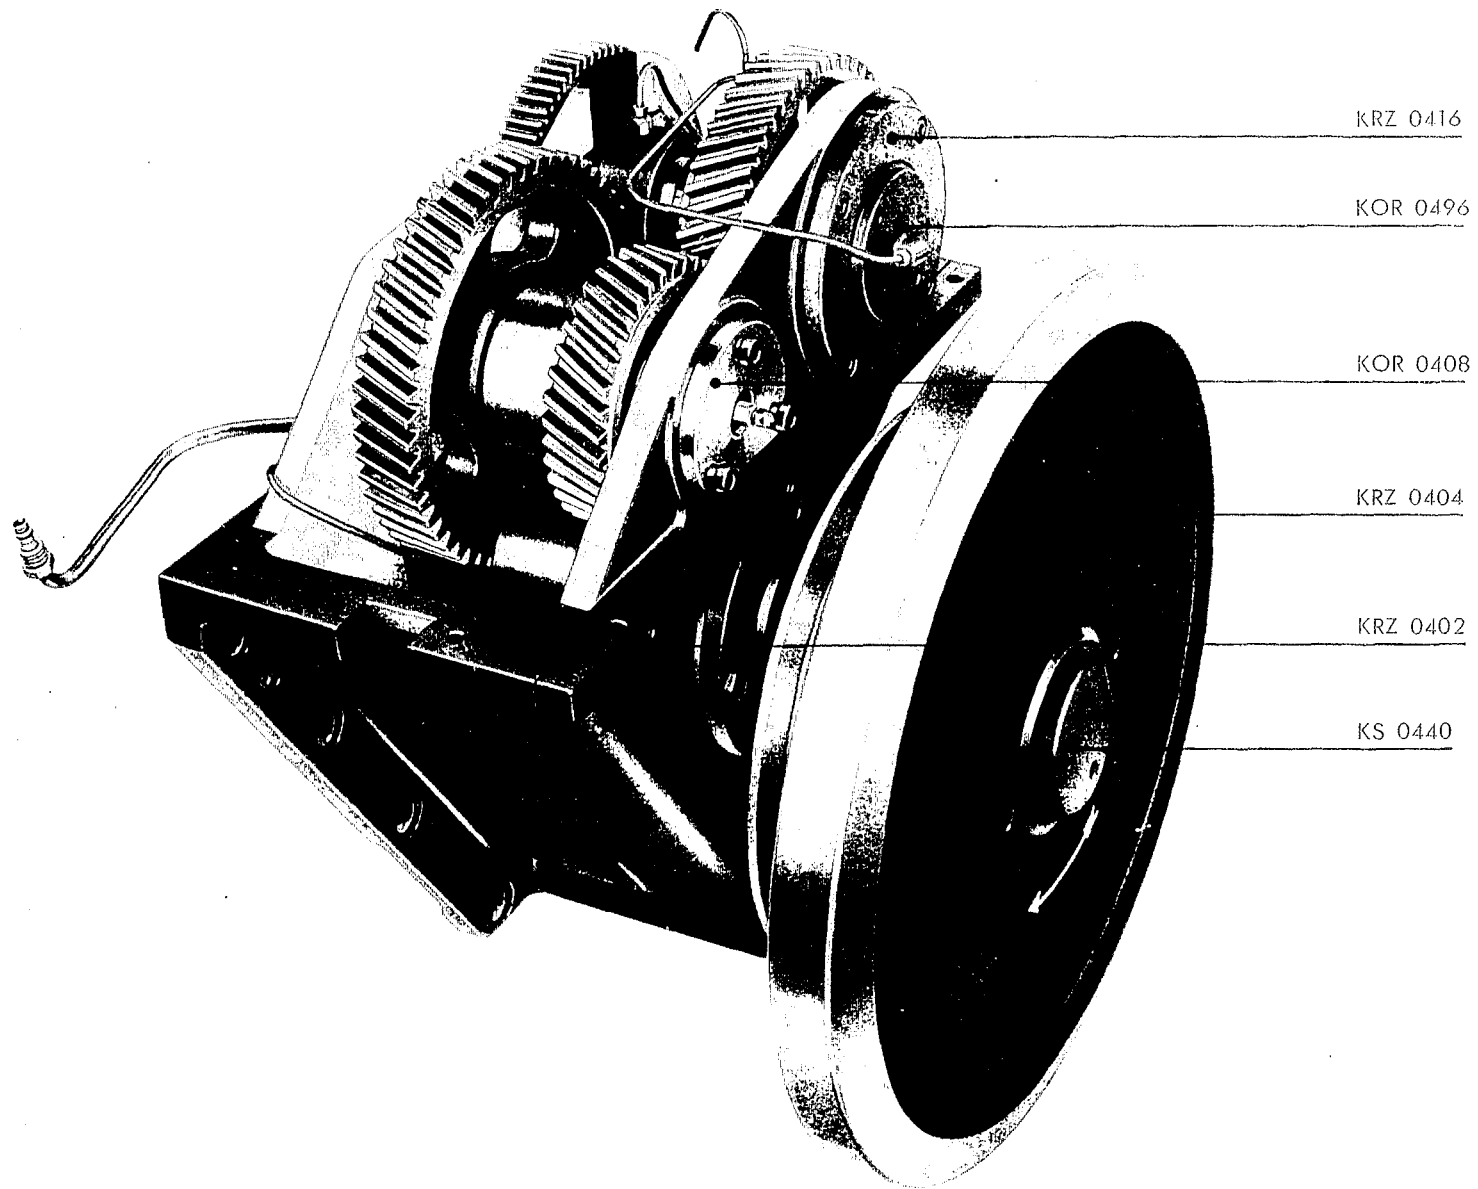

1

451, XE

KOR 2/1.022 F

KOR 271.001 F

KOR/KORD 09 45 F

KoR/voRD 01:1

KOR:KORD 0850 FI KOR 271.002 F

agbe.4

.101i

U.W.Zig4VANU

A;_...***.?)4#6421f 41: •

:44" AN

FOR 271,021


KOR 1018

wtorinr •

FOR 1017

4'00'011001040¹¹50¹⁴ VP:0

KS 1069

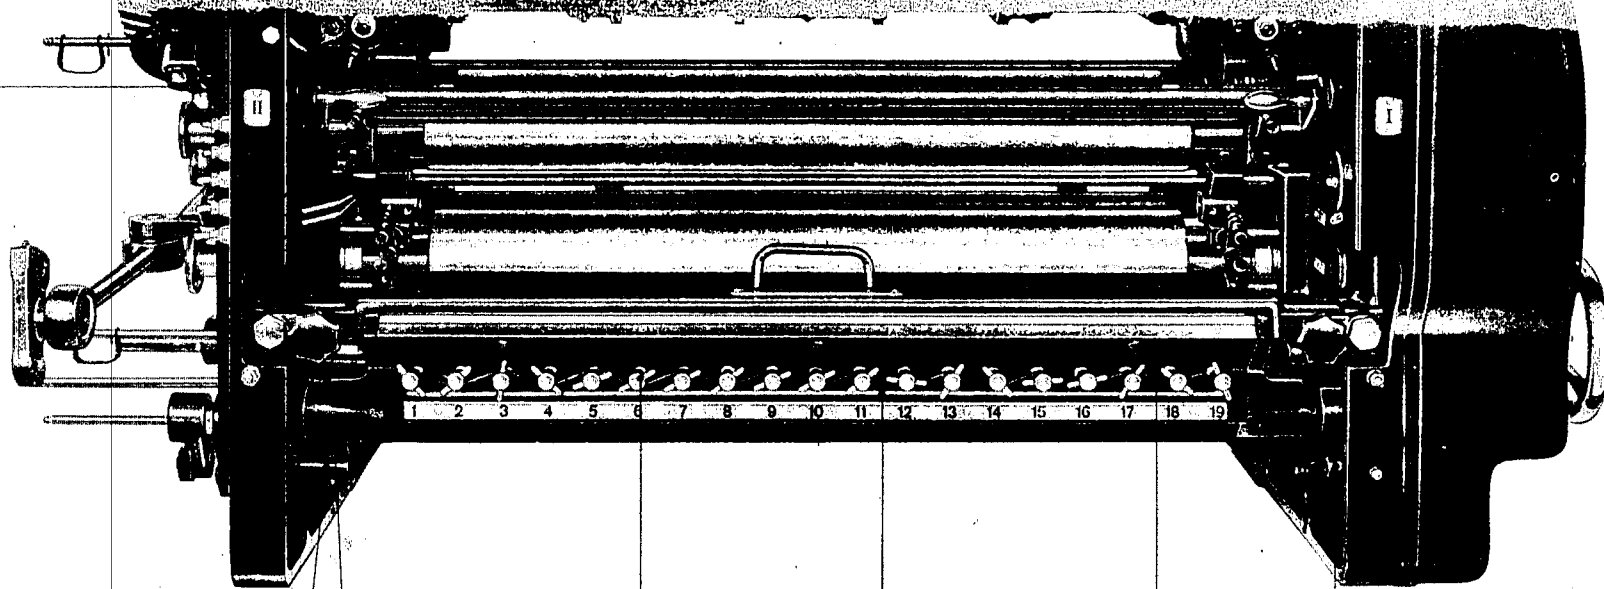

KOR 1087

/5/ 1078

T 0824

KSB/KORD
0811

KSB/KORD
0831


KS/ 1087

KOR	0401	Gear case with: T 0185 lead washer
KRZ	0402	Support bar
KRZ	0406	Bearing housing with: NK 50/35 needle bearing
KRZ	0407	Oil seal housing
KOR	0408	Gear shaft
KS	0410	Flange wheel and pinion gear shaft
KRZ	0414	Bearing housing with: NU 210 roller bearing
KS	0415	Bearing cap
KRZ	0416	Bearing housing
KRZ	0417 F	Gear shaft with: KS 0484 flange KS 0421 washer
KS	0419	Gear
KOR	0423	Intermediate gear with: NK 50/35 needle bearing
KRZ	0461	Oil circulation gear
KRZ	0462	Shaft
KRZ	0463	Spacer bushing
KRZ	0465	Oil wiper rod
KOR	0466	Guard
KS	0474	Lead washer
KOR	0491	Gear shaft with: KS 0421 washer
KOR	0492	Cylinder drive gear
KOR	0493	Inker drive gear
KOR	0494	Bearing housing with: NK 50/35 needle bearing
KOR	0496	Bearing cap
KOR	0497	Bearing housing
DIN 462 48 0		Keyed washer
DIN 628 3210		Tapered roller bearing
DIN 628 3212		Tapered roller bearing
DIN 711 51110		Flange bearing
DIN 1804 M 48x1,5		Lock nut

from Ser. No. 323501
KOR 0409 adjusting ring

from Ser. No. 323501
KOR 0409 adjusting ring

B3

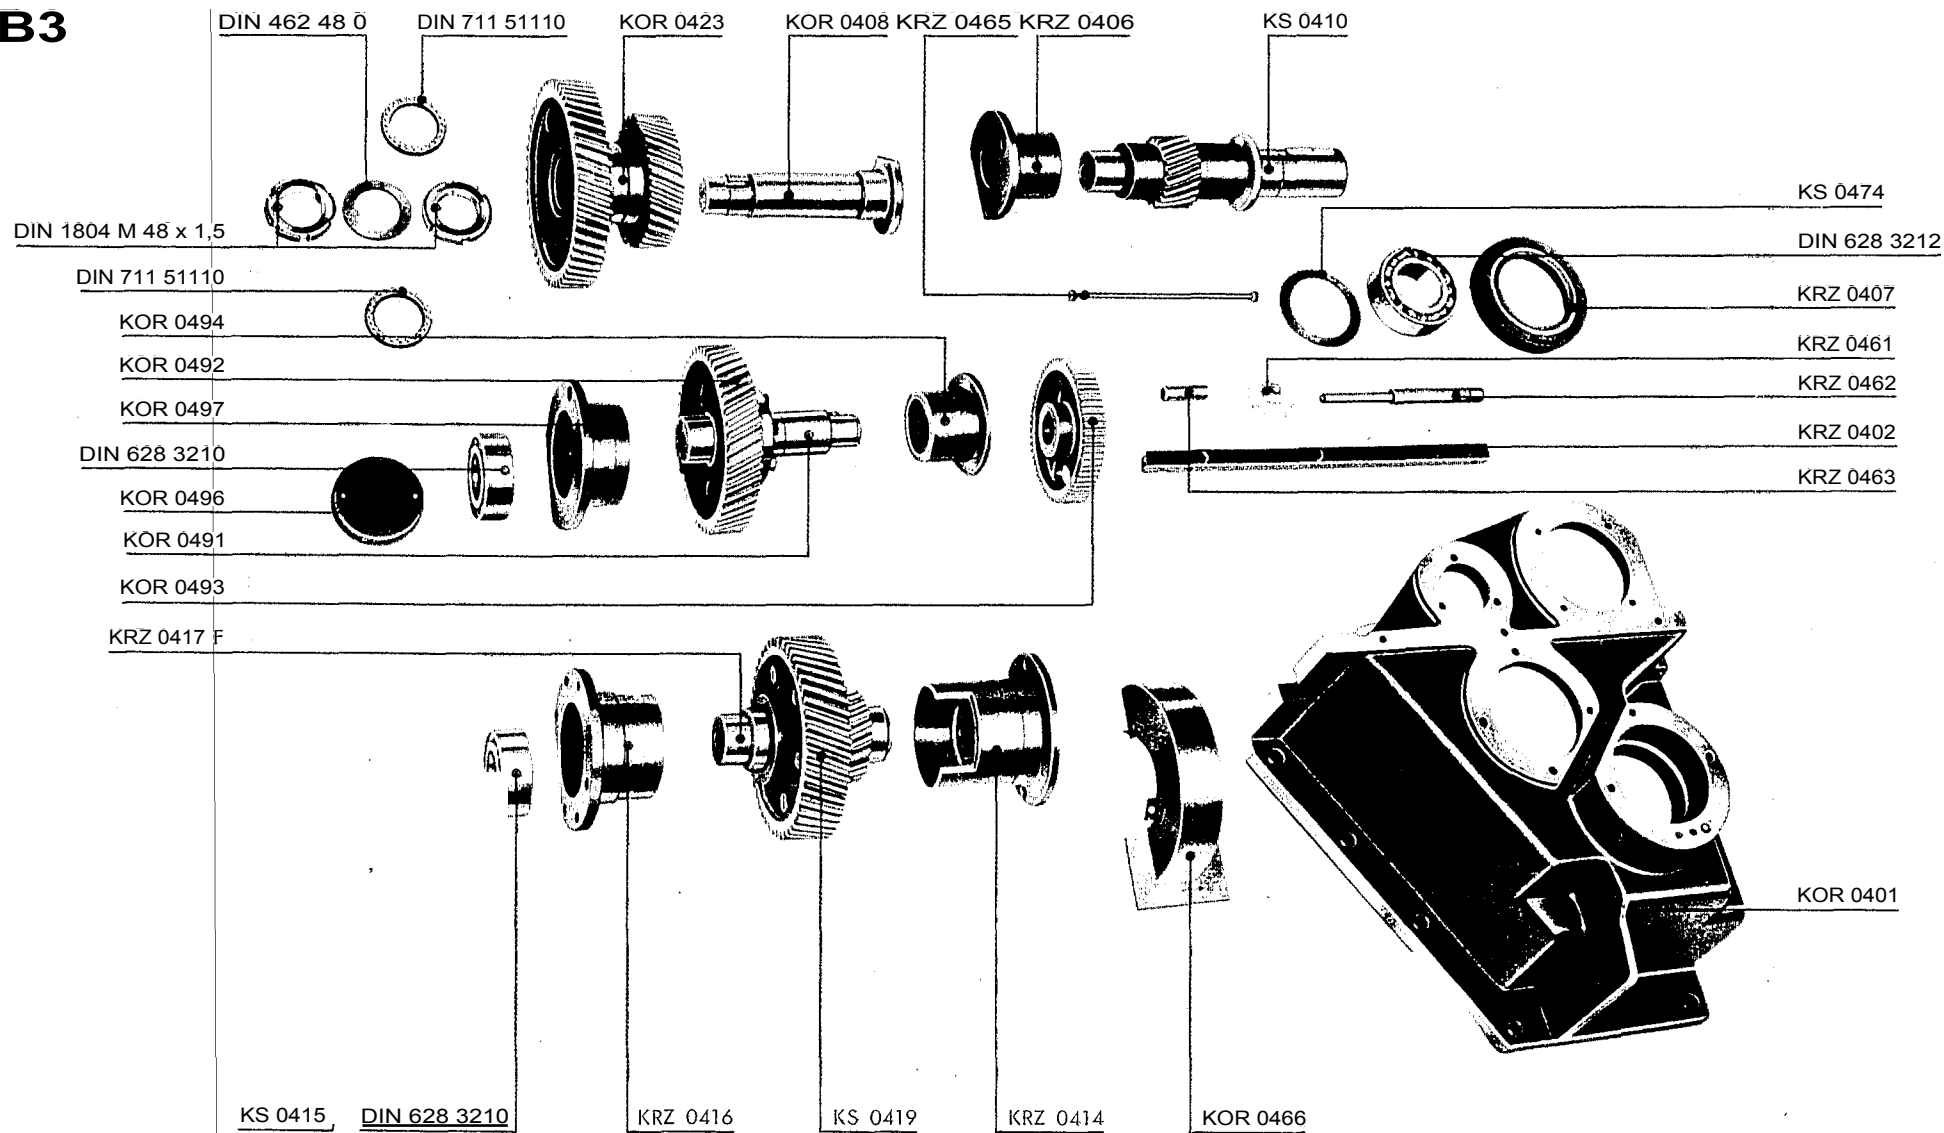


KRZ	0406	Bearing housing
KS	0411	Oil filler with: T 0182 gasket
KRZ	0414	Bearing housing
KOR	0423	Intermediate gear
KRZ	0452 F	Oil dip Sick
KOR	0491	Shaft
KOR	0493	Inker driye gear
	221.057.0 2	Lubrication distributor unit

KSB	0811	Ink fountain base	KOR/KORA
KORD	0811	Ink fountain base	
	0824	Fountain adjusting screw	
KSB	0831	Tension band	KOR/KORA
KORD	0831	Tension band	
KOR	0850 F	Intermediate dampening ductor roller with: KOR 0854 linen roller cover	
KORD	0850 F	Intermediate dampening ductor roller with KORD 0854 linen roller cover	
KOR	0945 F	Water fountain roller. \$ <u>203.00</u>	
KORD	0945 F	Water fountain roller. \$ <u>203.00</u>	
KOR	1014 F	Water trough with: KOR 10104 square plastic bearing	
KORD	1014 F	Water trough with: KOR 10104 square plastic bearing KOR 10102 water trough end support	
KOR	1017	Safety latch rod with: KOR 1016 compression spring	
KOR	1018	Safety latch with: T 0830 handle •	
KS	1069	Shouldered bearing bolt	
KSZ	1078	Ink ductor roller lever, D.S. with: KS 10182 stud KS 1060 bearing housing 18504 needle bearing KS 1032 bearing disc	
KSZ	1087	Spring rod guide with: KSZ 1086 spring rod KSZ 1085 spring rod head KSZ 1070 compression spring	
KOR	1087	Spring rod guide with: same as KSZ 1087	
KOR	271.001 F	Water stop roller, 2" (50 mm) long	
KOR	271.002 F	Water stop roller, 4" (100 mm) long	
KOR	271.021	Roller holder	
KOR	271.022 F	Holder screw	

For KORS check list below. If part is not listed, then refer to general listing.

KORS Parts			Illustration shown as
KORS	0811	Ink fountain base	KSB/KORD 0811
KORS	0831	Tension band	KSB/KORD 0831
KORS	0850 F	Intermediate dampening ductdr rill with: KORS 0854 linen roller cover	KOR/KORD 0850 F
KORS	0945 F	Water fountain roller	KOR/KORD 0945 F
KORS	1014 F	Water trough with: KOR 10102 water trough end support KOR 10104 square plastic bearing	KOR/KORD 1014 F

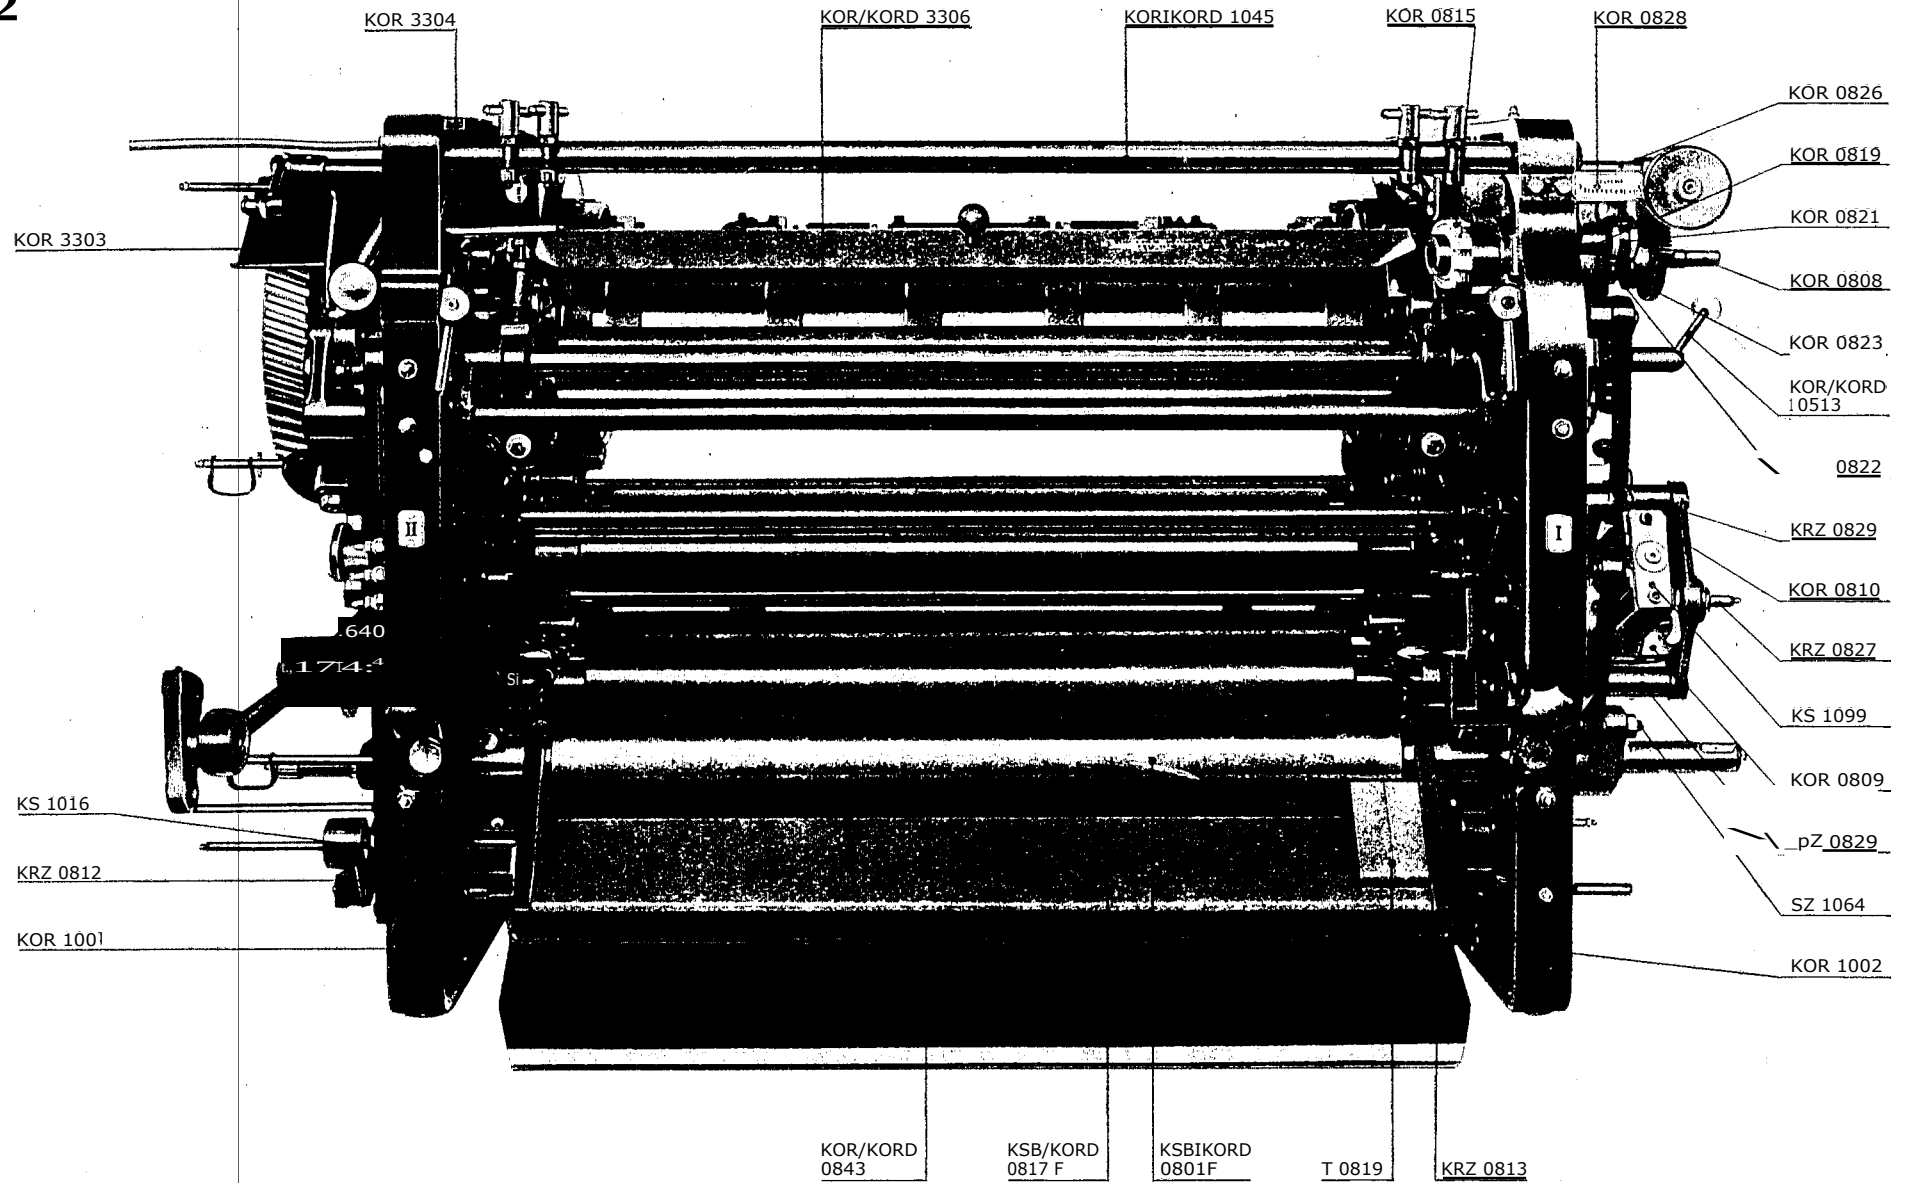

KSB	0801 F	Ink fountain' roller	KOR/KORA
KORD	0801 F	Ink fountain roller	
KOR	0806	Water fountain drive shaft with: KS 10156 washer	
KOR	0809	Ink fountain control lever with: T 1149 bushing KRZ 0830 bushing 6003 ball bearing KSZ 1056 washer	
KOR	0810	Bearing support with: NK 2216 needle bearing	
KRZ	0812	Ink fountain end plate, D.S.	
KRZ	0813	Ink fountain end plate, O.S. with: KSZ 0831 spring rod KSZ 0832 compression spring	
KOR	0815	Brake	
KSB	0817 F	Fountain blade	KOR/KORA
KORD	0817 F	Fountain blade	
KOR	0819	Support bolt	
T	0819	Fountain divider	
KOR	0821	Back-up collar with: HK 0810 needle bearing KS 1547 tension spring	
KOR	0822	Feed disc	
KOR	0823	Water fountain feed segment with: FIK 1612 needle bearing	
KOR	0826	Support shaft	
KRZ	0827	Ink fountain feed control shaft with: IS 1091 bevel gear S 1094 hand wheel	
KOR	0828	Support bracket	
KRZ	0829	Support bolt	
KOR	0843	Fountain cover	
KORD	0843	Fountain cover	
KOR	1001	Side frame, D.S.	
KOR	1002	Side frame, O.S.	
KS	1016	Spacer ring	
KOR	1045	Cross bar	
KORD	1045	Cross bar	
SZ	1064	Shoulder bolt	
KS	1099	Bearing plate	

KOR	10513 F	Dampening roller engaging lever	
KORD	10513 F	with: KOR 10366 lever shaft KORD 10366 lever shaft KOR 10364 trip cam KOR 10367 lever GTP 5891 stud KRZ 06179 trip lever KRZ 06177 rod with F 25 ball handle S 1023 spacer washer	
KOR	3303	Switch bracket	
KOR	3304	Guard bracket	
KOR	3306	Dampening roller guard	
KORD	3306	with: KS 1425 spacer ring F 25 ball handle 0263 oval head screw	

For KORS check list below. If part is not listed, then refer to general listing.

KORS Parts			Illustration shown as
KORS	0801 F	Ink fountain roller	KSB/KORD 0801 F
KORS	0817 F	Fountain blade	KSB/KORD 0817 F
KORS	0843	Fountain cover	KOR/KORD 0843
KORS	1001	Side frame, D.S.	KOR 1001
KORS	1002	Side frame, O.S.	KOR 1002
KORS	1045	Cross bar	KOR/KORD 1045
KORS	10513 F	Dampening roller engaging lever with: KORS 10366 lever shaft balance same as KOR/KORD 10513 F	KOR/KORD 10513 F
KORS	3306	Dampening roller guard with: same as KOR/KORD 3306	KOR/KORD 3306

KOR 10503 F No. 2 plate dampening roller journal box, D.S.
 with: KOR 10344 journal box housing
 KS 10182 stud
 KOR 10334 journal box insert
 18503 needle bearing
 KS 1032 bearing disc
 KOR 10333 spacer washer

KOR 10511 F 1
KORD 10511 p j Water ductor roller operating shaft
 with: KOR/KORD 1083 shaft lever
 HK 2216 needle bearing
 KSZ 1081 stop lever
 KS 1078 lever
 KOR 1072 stud

KSL 10565 Shouldered stud
 with: KS 1075 washer

1349 Compression spring
 with: KSZ 1086 spring rod
 KSZ 1085 spring rod head
 KOR 0977 washer



KS 2257 Spring rod guide
 with: KS 1623 washer
 K 14/17 needle bearing (new number: K 14x18x17)

KOR 3305
KORD 3305 } Danipenin roller guard frame
 with: S 3313 pivot screw
 KOR 3308 pivot shaft

For KORS check list below. If part is not listed, then refer to general listing.

KORS Parts		Illustration shown as
KORS 10114	Cross bar	KSB 0814/KORD 10114
KORS 10373	Fountain operating shaft—ink and water with: NK 2516 needle bearing	KOR/KORD 10373
KORS 10501 F	No. 1 plate dampening roller journal box, D.S.. with: KORS 10363 journal box housing balance same as KOR 10501 F	KOR 10501 F
KORS 10503 F	No. 2 plate dampening roller journal box, D.S. . with: KORS 10344 journal box housing balance same as KOR 10503 F	KOR 10503 F
KORS 10511 F	Water ductor roller operating shaft with: KORS 1083 shaft lever balance same as KOR/KORD 10511 F	KOR/KORD 10511 F
KORS 3305	Dampening roller guard frame with: same as KOR/KORD 3305	KOR/KORD 3305

C 3 continued

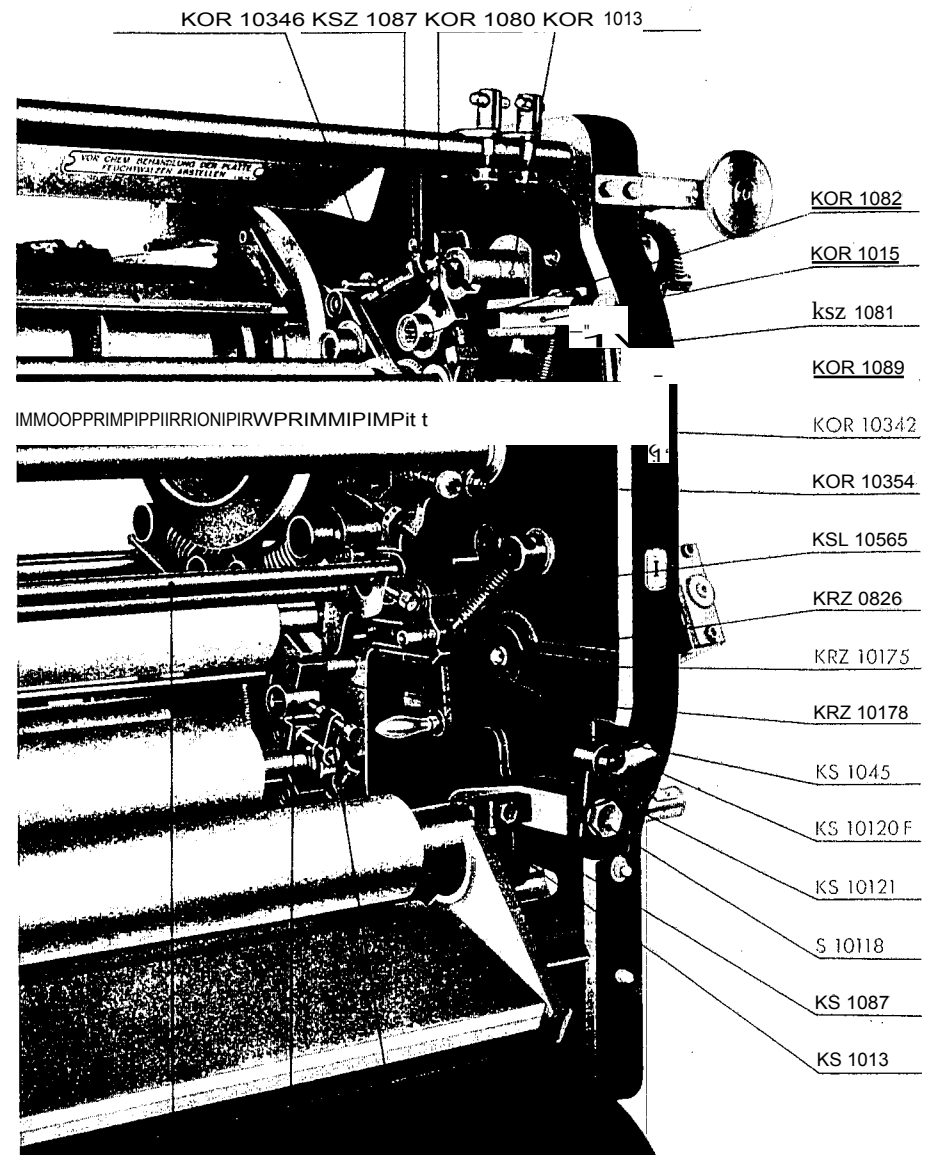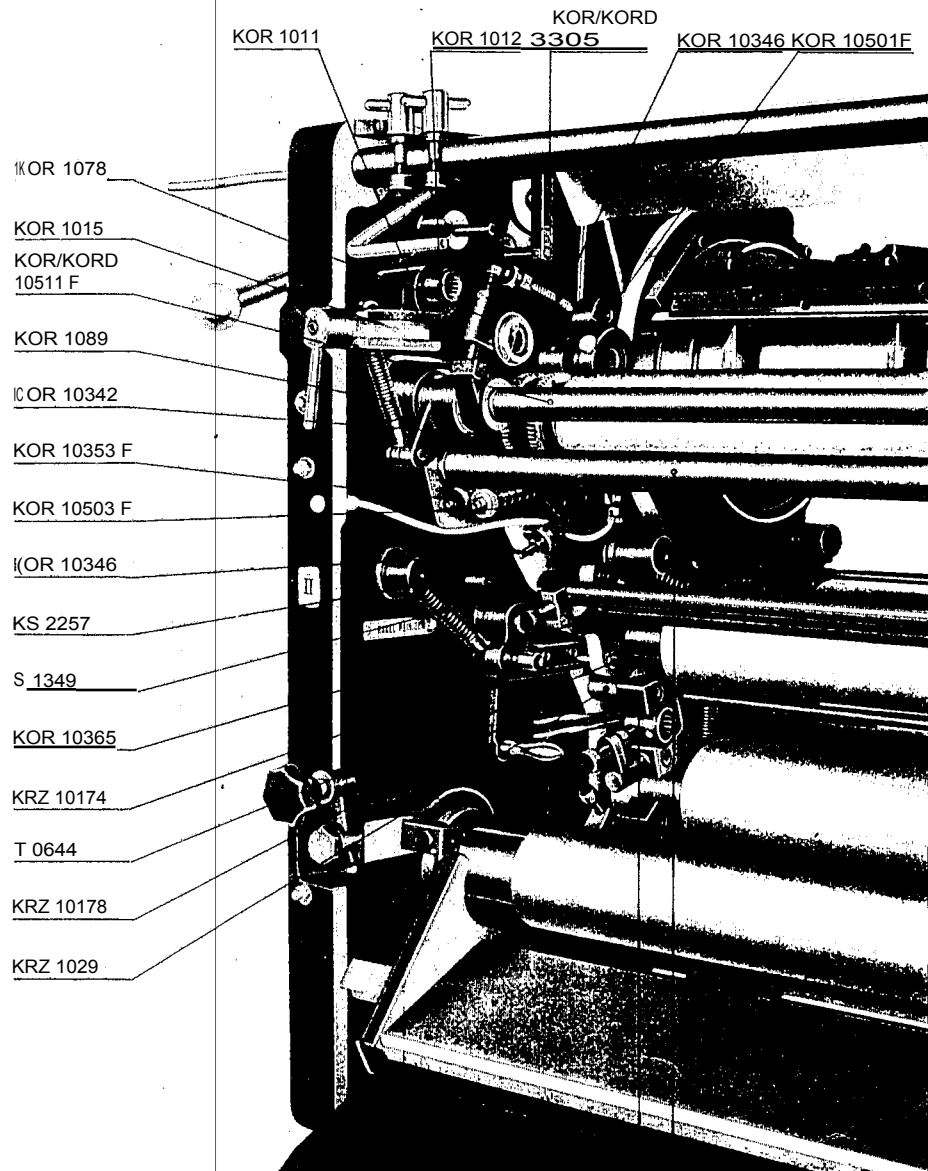


	0644	Bearing stud	
KSB	0814	Cross bar.	KOR/KORA
KRZ	0826	Supphoh shaft	
KOR	1011	Safety Itch with: S 3313 screw	
KOR	1012	Intermediate water ductor journal box with: HK 1512 needle bearing	
KOR	1013	Intermediate water ductor drive shaft with: FIK 2016 needle bearing --	743
KS	1013	Ink fountain roller bushing, O.S.	
KOR	1015	Water trough bracket	# 208.46
KRZ	1029	Spacer stud	
KS	1045	Bearing guide block, O.S.	
KS	1046	Bearing latch with: KS 1042 locking screw KS 1044 compression spring T 0682 stud	
KS	1047	Bearing guide block, D.S.	
KS	1048	Journal box with: 18503 needli bearing KS 1043 adjusting screw KS 1044 compression spring	
KOR	1078	Ductor roller lever, D.S. with: KOR 1081 bearing sleeve 18503 needle bearing KS 1032 bearing disc KS 10182 shouldered stud FIK 2216 needle bearing	
KOR	1080	Ductor roller lever, O.S. with: KS 10182 shouldered stud HK 2216 needle bearing	
KSZ	1081	Stop lever	
KOR	1082	Ductor roller journal box with: 18503 needle bearing KS 1032 bearing disc KSZ 1083 shouldered screw KSZ 1084 locking knob KS mg pompression spring	
KSZ	1087	Spring rod support	
KS	1087	Stop bracket	
KOR	1089	Spring rod with: KSZ 1085 rod head KSZ 1070 compression spring	

KO RD	10114	Cross bar	
	10118	Shouldered bolt	
KS	10120 F	Fountain latch screw	
KS	10121	Fountain latch	
KRZ	10174	Washup bracket, D.S.	
KRZ	10175	Washup bracket, O.S.	
KRZ	10178	Washup lever, D.S. Washup lever, O.S. with: KSL 10249 stud KS 10182 shouldered stud A 16 handle	
KOR	10342	Eccentric gear with: KOR 10348 washer KOR 10349 spacer washer	
KOR	10346	Spring rod with: 1 1614 rod head KS!.. 10253 compression spring S 1061 adjusting nut KOR 10347 spring rod stud	
KOR	10353 F	Dampening roller adjustment, D.S. with: KOR 10345 worm gear shaft KOR 10350 compression spring KOR 10353 bracket T 2343 knurled nut KOR 10338 spacer block S 1383 washer	
KOR	10354 F	Dampening roller adjustment, O.S. with: same as KOR 10353 F	/
KOR	10365	Forked lever with: 12311 adjusting screw KS 1236 compression spring KOR 10357 tension spring	
KOR	10373	Fountain operating shaft—ink and water	
KORD	10373 J	with: NK 2516 needle bearing	
KOR	10501 F	No. 1 plate dampening roller journal box, D.S. with: KOR 10363 journal box housing KS 10182 stud KOR 10334 journal box insert 18503 needle bearing KS 1032 bearing disc KOR 10333 spacer washer	


•n

C3

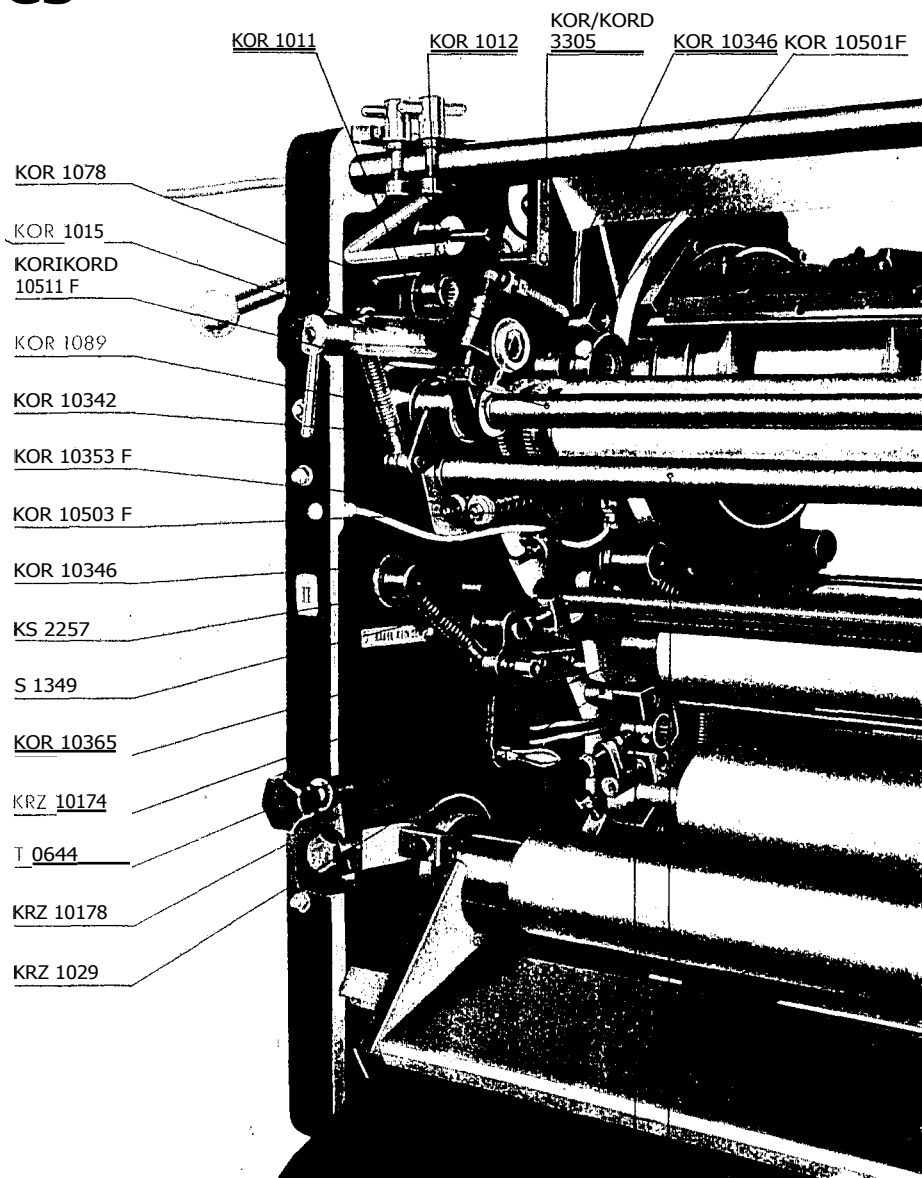

KS 1047

KOR/KORD 10273

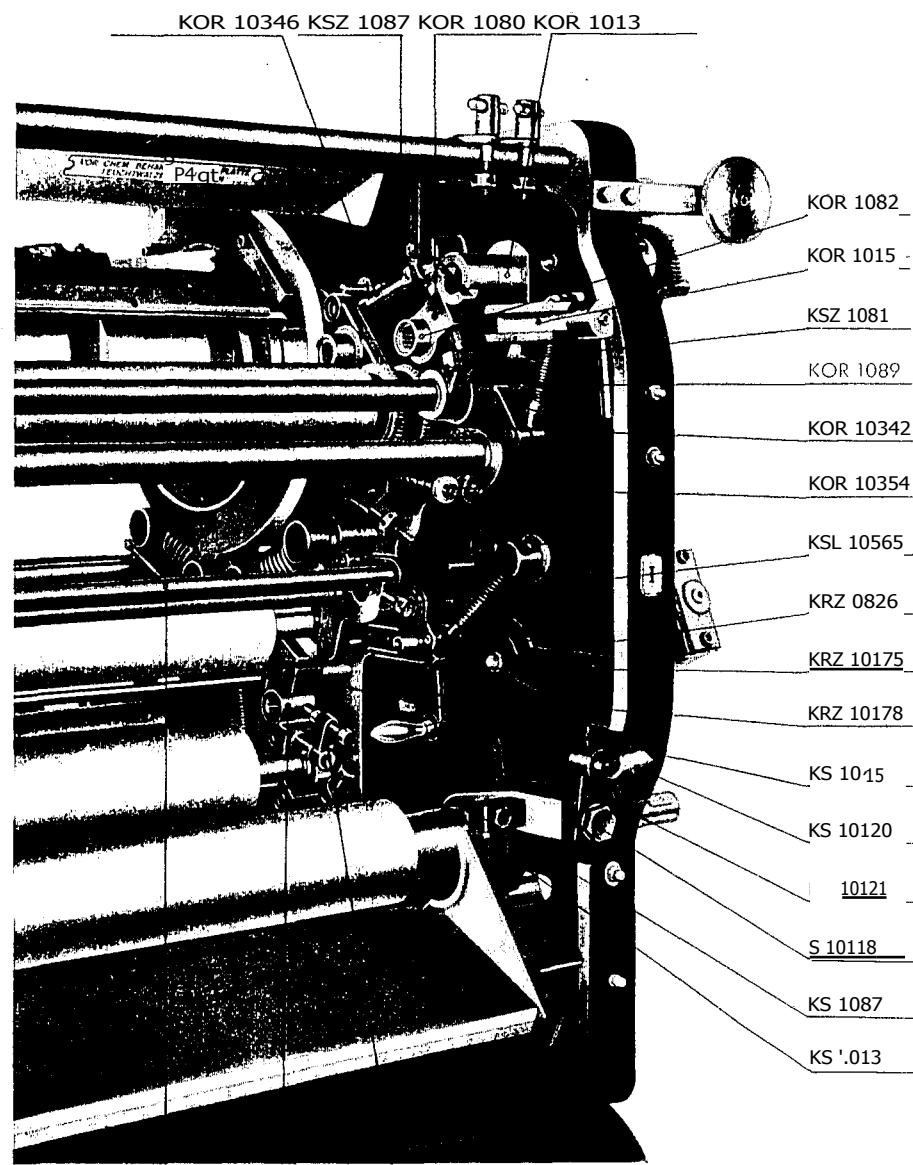


KS 0814
KORD 10114

KS 1048

KS 1046

C4

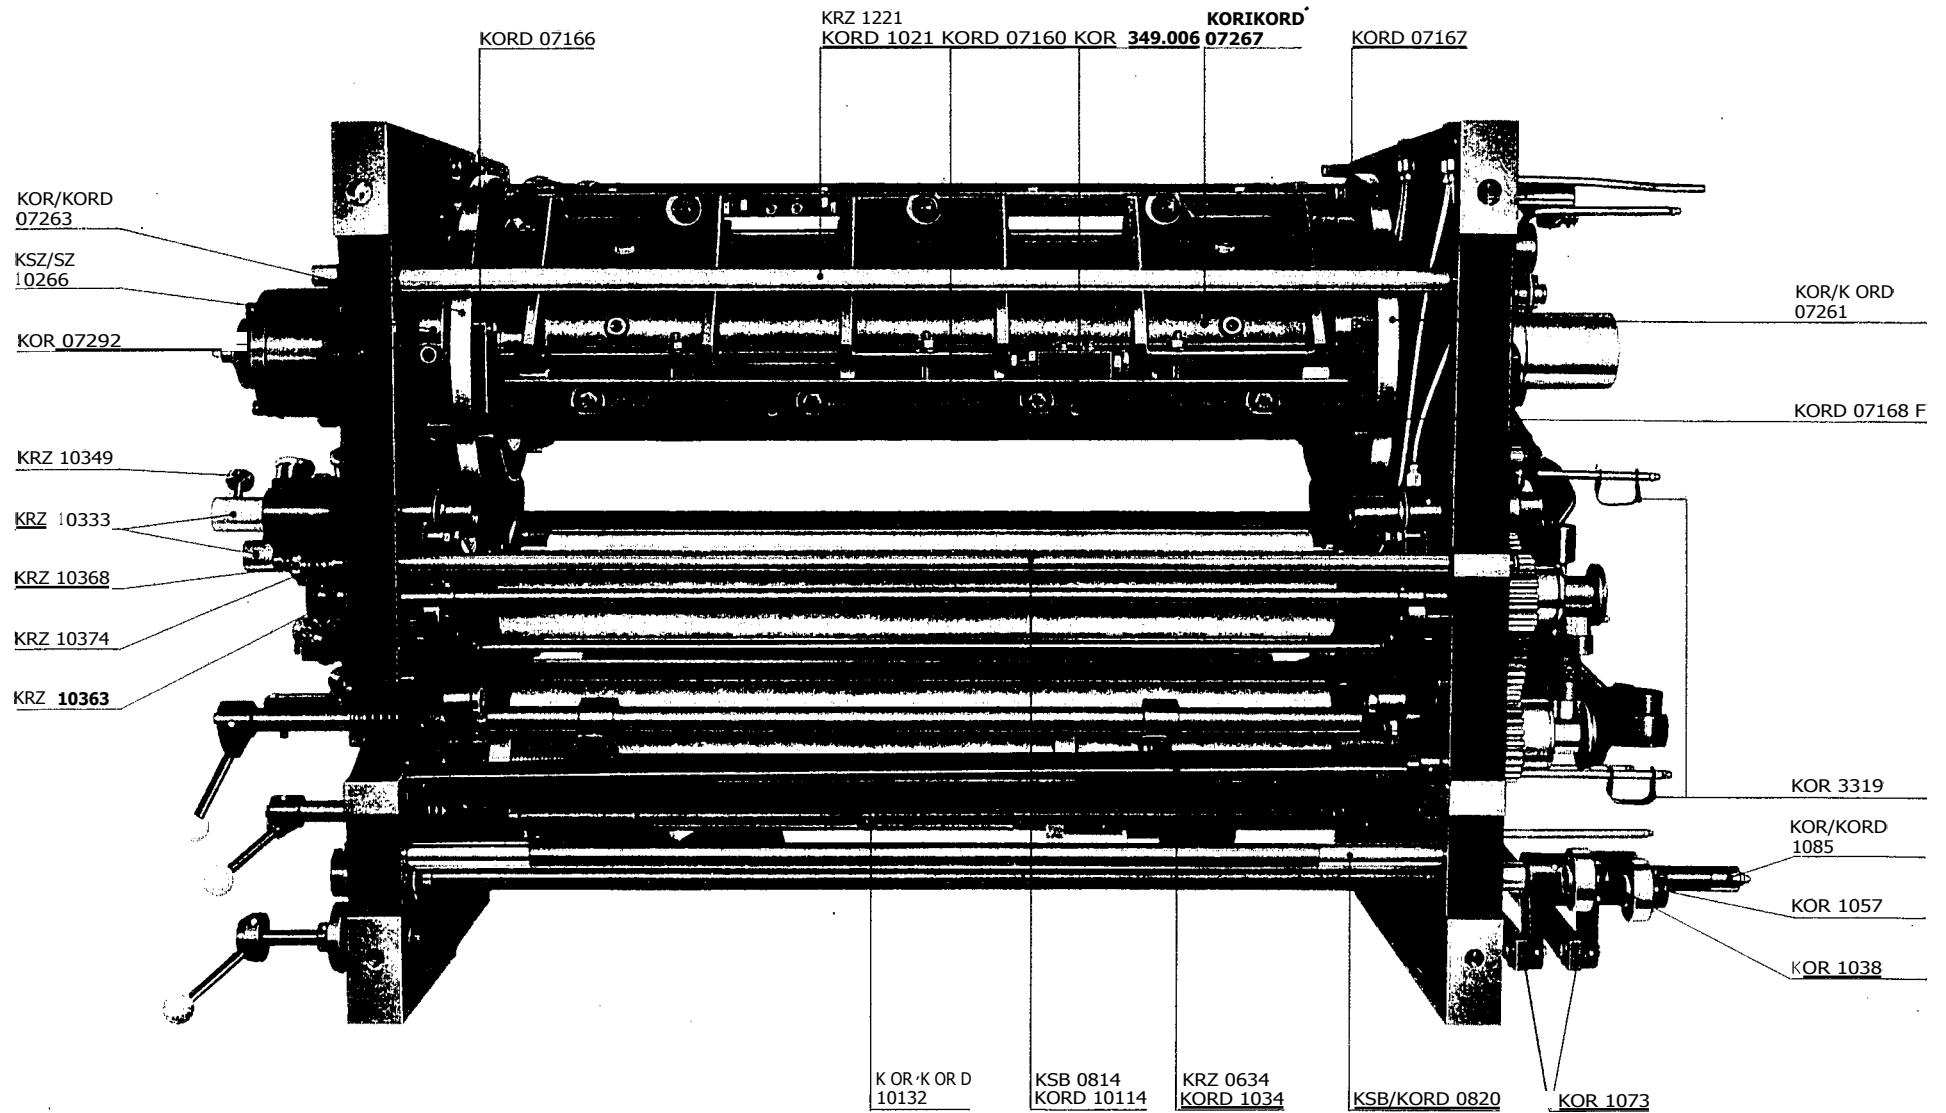

KRZ	0634	Distributor roller pan	KOR/KORA
KORD	07166	Plate clamp guide with scale	KORD/KORS
KORD	07167	Plate clamp guide bar	KORD/KORS
KORD	07168 F	Plate clamp, lower portion with: T 1212 compression spring T 1215 compression spring T0729 washer	
KORD	07169	Plate clamp, upper portion	
KOR	07261	}Plate cylinder bearer, D.S.	
KORD	07261		
KOR	07263	}Plate cylinder bearer, O.S.	
KORD	07263		
KOR	07267	Plate clamp segment	
KORD	07267		
KOR	07292	Bearing flange with: KOR 07294 shim washers in thicknesses 0.15 mm; 0.2 mm; 0.5 & 1.0 mm	
KSB	0814	Cross bar	KOR/KORA
KSB	0820	Cross bar	KOR/KORA
KORD,	0820	Cross bar	
KORD	1021	Guard bar	
KORD	1034	Distributor roller pan	
KOR	1057	Lever with: HK 2016 needle bearing KRZ 1072 bearing stud 6303 ball bearing GTP 5691 bearing stud KS 1234 washer	
KOR	1058	Lever with: KRZ 1072 bearing stud 6303 ball bearing GTP 5691 bearing stud KS 1234 washer	
KOR	1073	Connecting rods with: HK 1210 needle bearing	
KOR	1085	}Shaft	
KORD	1085	with: HK 2216 needle bearing KSZ 1056 washer	
KORD	10114	Cross bar	
KOR	10132	Guard for 53 0 distributor roller	KOR/KORA/KORD 62
KORD	10132	Guard for 53 0 distributor roller	KORD 64

KSZ	10266	Plate shell locking ring	KOR/KORA
SZ	10266	Plate shell locking ring	KORD/KORS
KRZ	10349	Lock screw	
KRZ	10353	Plate Inking roller journal box inserts, O.S. Rollers: red, blue, white & brown with: 18504 needle bearing KS 1032 bearing disc KRZ 10370 shouldered screw S 1035 locking knob S 1036 compression spring	
KRZ	10363	Gear	
KRZ	10368	Lock screw with: KRZ 10369 pressure disc	
KRZ	10374	Compression spring	
KRZ	1221	Guard bar	KOR/KORA
KOR	3319	Strap	
KOR	349.006	Adjustment block with: KOR' 349.007 socket head screws	

For KORS check list below. If part is not listed, then refer to general listing.

KORS Parts		Illustration shown as
KORS	07168 F	Plate clamp, lower portion with: same as KORD 07168 F KORD 07168 F
KORS	07169	Plate clamp, upper portion KORD 07169
KORS	07261	Plate cylinder bearer, D S KOR/KORD W261
KORS	07263	Plate cylinder bearer, , O S KOR/KORD 07263
KORS	07267	Plate clamp segment KOR/KORD 07267
KORS	0820	Cross bar KSB/KORD 0820
KORS	1021	Guard bar KRZ 1221/KORD 1021
KORS	1034	Distributor roller pan KRZ 0634/KORD 1034
KORS	1085	Shaft with: same as KOR/KORD 1085 KOR/KORD 1085
KORS	10114	Cross bar KSB 0814/KORD 10114
KORS	10132	Distributor roller guard KOR/KORD 10132

DIN 7 10h 8x50
KS8Z 10264 F
KORD 07264 F

KOR 10356

KOR 10357


KRZ 10361

KRZ 10365


KS 1519

KRZ 1039

KRZ 0647

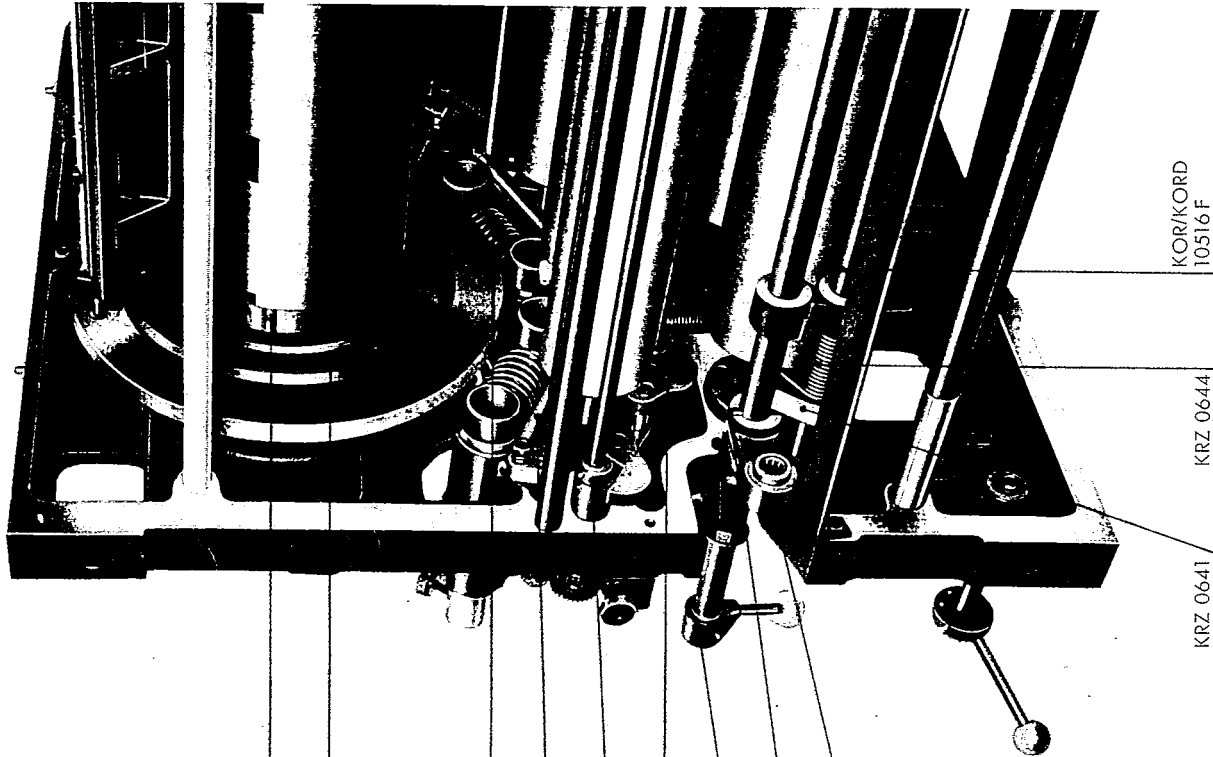

U
V

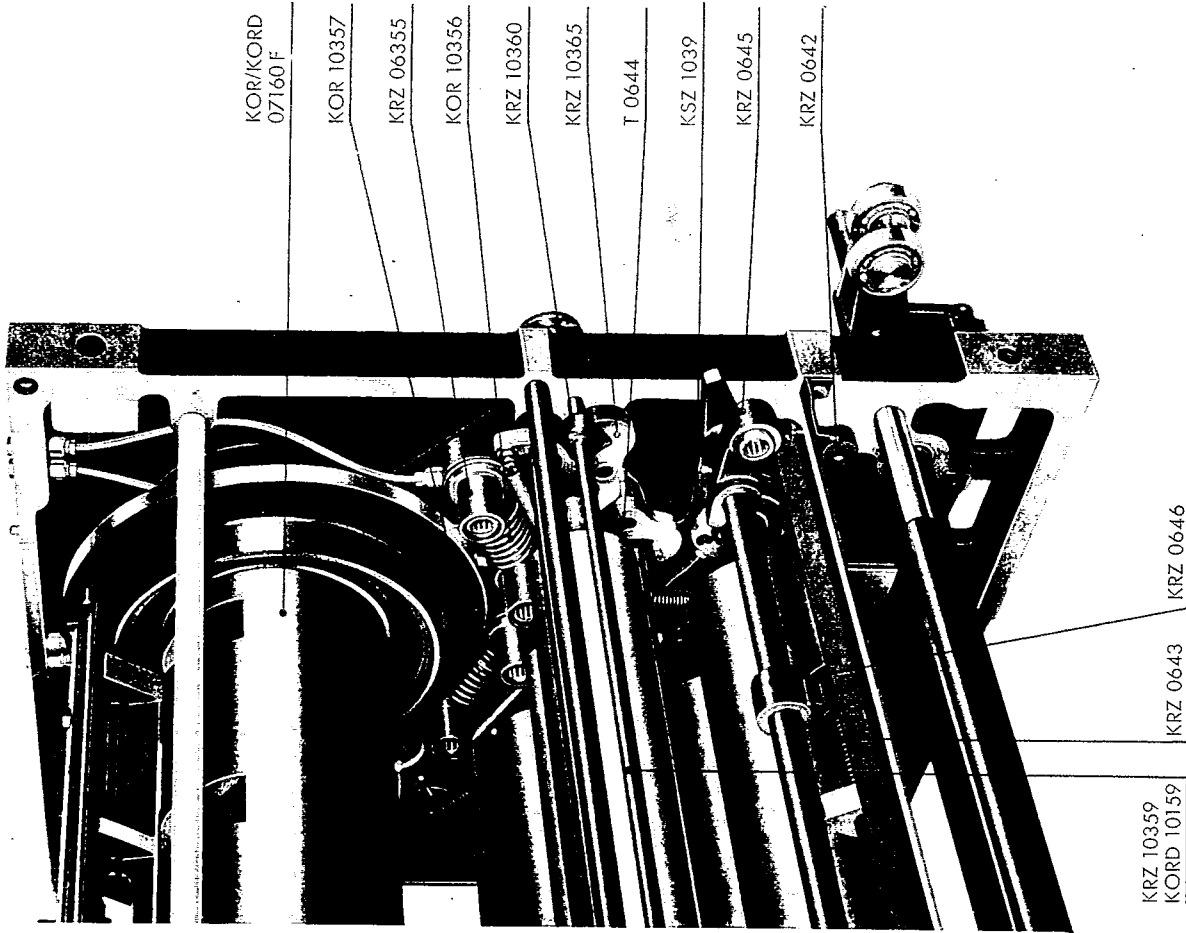


KRZ	0641	Stop lever	
KRZ	0642	Lever	
KRZ	0643	Torsion spring, D.S.	
KRZ	0644	Torsion spring, O.S. (for KORS: KRZ 0643)	
	0644	Pin	
KRZ	0645	Journal box lever, D.S. with: 18504 needle bearing	
KRZ	0646	Shaft support link	
KRZ	0647	Journal box lever, O.S. with: 18504 needle bearing	
KRZ	06355	Journal box insert, D.S. with: 18504 needle bearing KS 1032 bearing disc	
KOR	07160 F	Plate cylinder shaft with: KSBZ 10260 plate cylinder up to No. 311398 KOR 07160 plate cylinder shaft from No. 311400 KOR 07162 ductor roller cam KOR 07168 flange up to No. 311398 KOR 07261 bearer, D.S. KOR 07363 bearer, O.S. KOR 07267 plate clamp segment KOR 07287 disc KSBZ 10264 F locking ring pressure plate KSZ 10266 locking ring SW 65 spring ring	
KORD	07160 F	Plate cylinder shaft with: KORD 07160 plate cylinder shaft KORD 07261 bearer, D.S. KORD 07263 bearer, O.S. KORD 07264 F locking ring pressure plate. KORD 07267 plate clamp segment KOR 07162 ductor roller cam KOR 07287 disc SZ 10266 locking ring SW 65 spring ring	KORD/KORS
KORD	07264 F	Locking ring pressure plate	KORD/KORS
KRZ	1039	Flanged bearing housing, O S with: RLF 25x36x45 ball bearing	KOR/KORA/KORD (for KORS, see illust. sect. C 9)
KSZ	1039	Flanged bearing housing, D S with: RLF 25x36x45 ball bearing CrCi. F5'O	KOR/KORA/KORD (for KORS, see illust. sect. C9)
KORD	10159	Plate roller adjustment shaft	

KSBZ	10264 F	Locking ring pressure plate	KOR/KORA
KOR	10356	Tension spring	
KOR	10357	Tension spring	
KRZ	10359	Plate roller adjustment shaft	KOR/KORA
KRZ	10360	Eccentric collar, D.S.	
KRZ	10361	Eccentric collar, O.S.	
KRZ	10365	Forked lever	
KOR	10516 F	Distributor roller supportshaft	
KORD	10516 F		
		with: KRZ 0636 shaft KORD 1036 shaft KRZ 0638 extension KRZ 0641 stop lever KRZ 0642 lever KRZ 0643 torsion spring, D.S. KRZ 0644 torsion spring, O.S. KRZ 0646 shaft support link KOR 1040 distance piece	KOR/KORA
KS	1519	Lever with: KSZ 1296 ball handle rod	
DIN 7,10 h 8x50		Guide pin with: KS 1236 compression spring	

For KORS check list below. If part is not listed, then refer to general listing.

KORS Parts			Illustration shown as
KORS	1044	Torsion spring, D.S.	KRZ 0643
KORS	07160 F	Plate cylinder shaft with: KORS 07160 plate cylinder shaft KORS 07261 bearer, D.S. KORS 07263 bearer, O.S. KORS 07267 plate clamp segment balance same as KORD 07160 F	KOR/KORD 07160 F
KORS	10159	Plate roller adjustment shaft	KRZ 10359/KORD 10159
KORS	10516 F	Distributor roller support shaft with: KORS 1036 shaft KORS 1044 torsion spring, D.S. KRZ 0643 torsion spring, O.S. balance same as KOR/KORD 10516 F	KOR/KORD 10516 F

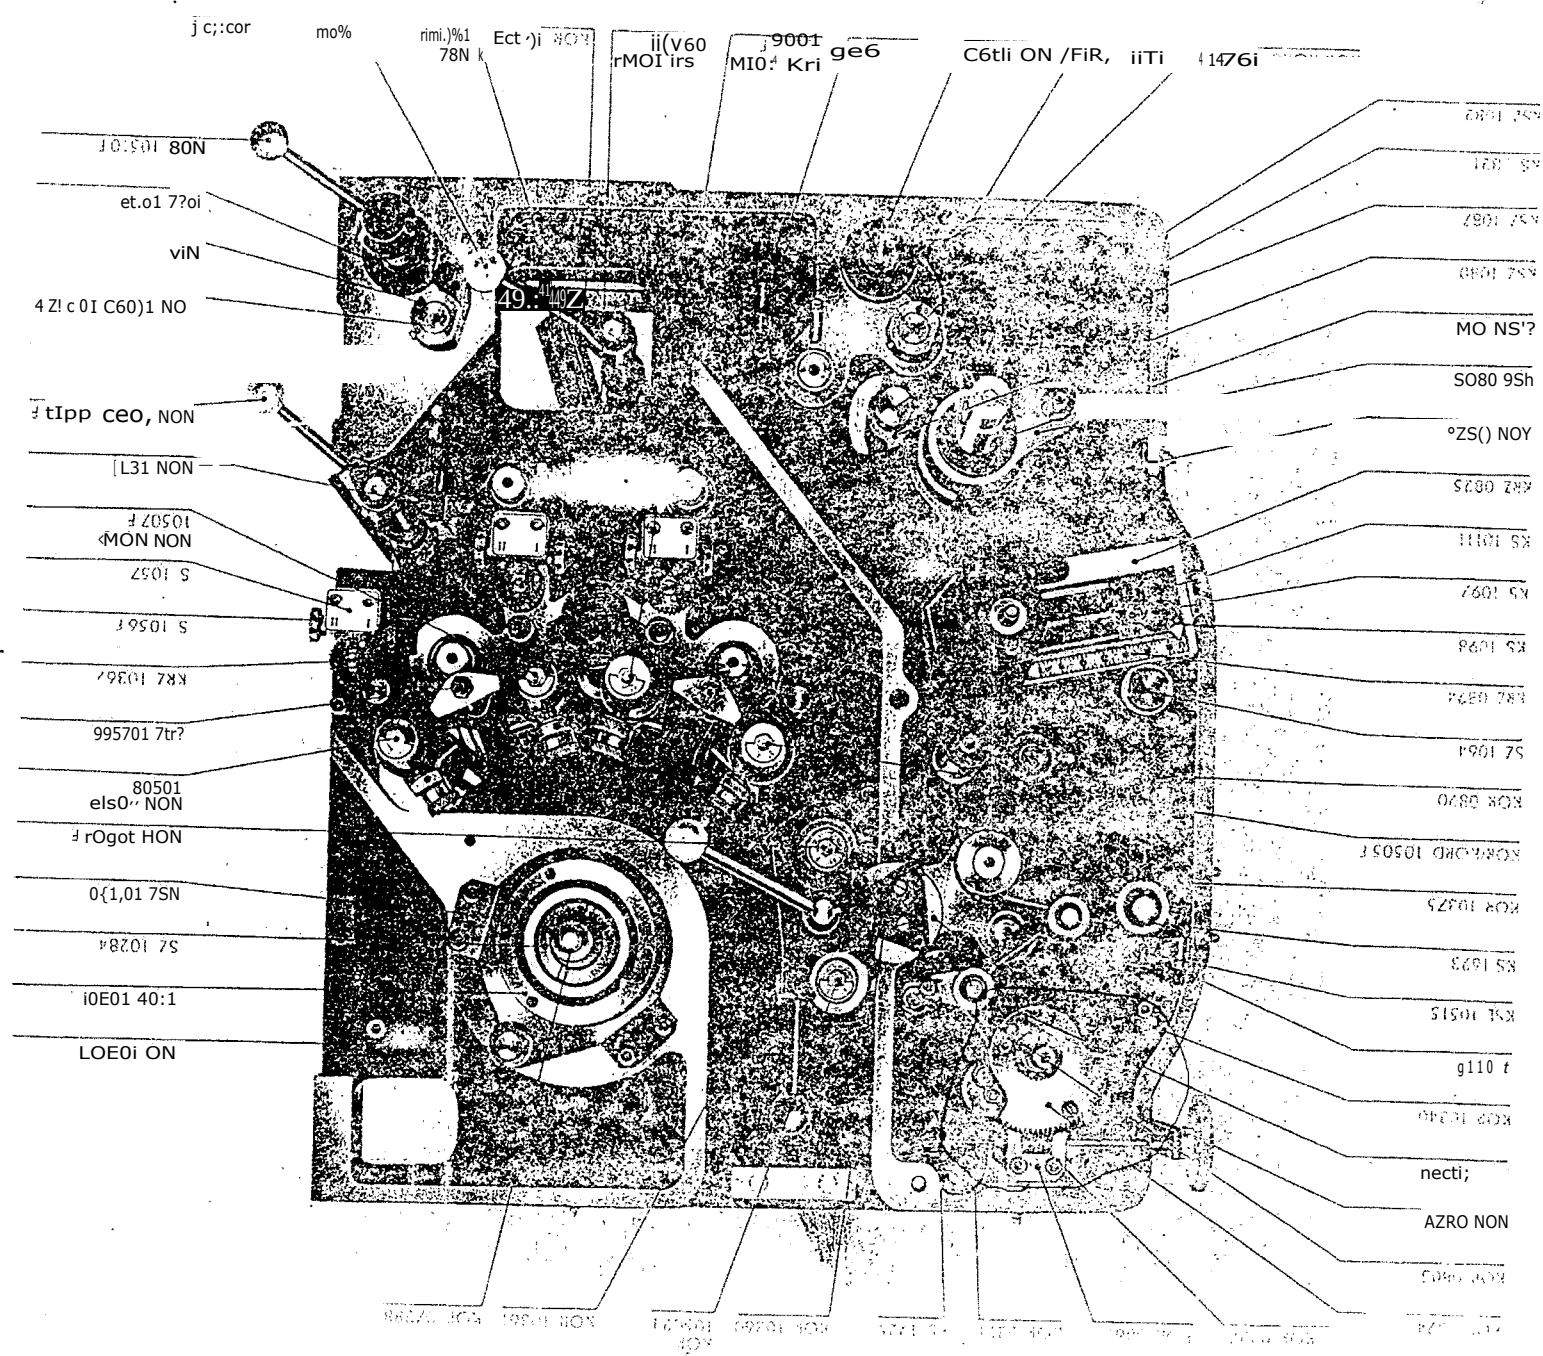

j c: cor

mo%

riml.)%1
78N

Ect -ji

ii(V60
rMOI lrs

9001
MI0: Kri

ge6

C6tli ON /FIR, iiTi

4476i

10:501 80N

et.o1 77oi

viN

4 Zi c 01 C60)1 NO

3 tipp ceo, NON

[L31 NON

10507 f
MON NON

S 1057

S 1056 f

KR7 10367

995701 7tr?

80501
els0 NON

3 rOgot HON

0{1,01 7SN

S7 10284

10E01 40:1

LOE0i ON

0891 75N

1201 75N

2901 75N

0801 75N

MO NS'2

S080 9Sh

°ZS() NOY

S700 75N

KS 10111

KS 1097

KS 1098

KR7 0374

S7 1064

KOR 0870

KOR-ORD 10505 f

KOR 10275

KS 1073

KS 10515

g110 f

KOR 10340

necti;

AZRO NON

KOR 10405

KOR 10405

KOR 10405

KOR 10405

80501 75N

10501 75N

10501 75N

10501 75N

10501 75N

10501 75N


10501 75N

10501 75N

10501 75N

10501 75N

10501 75N

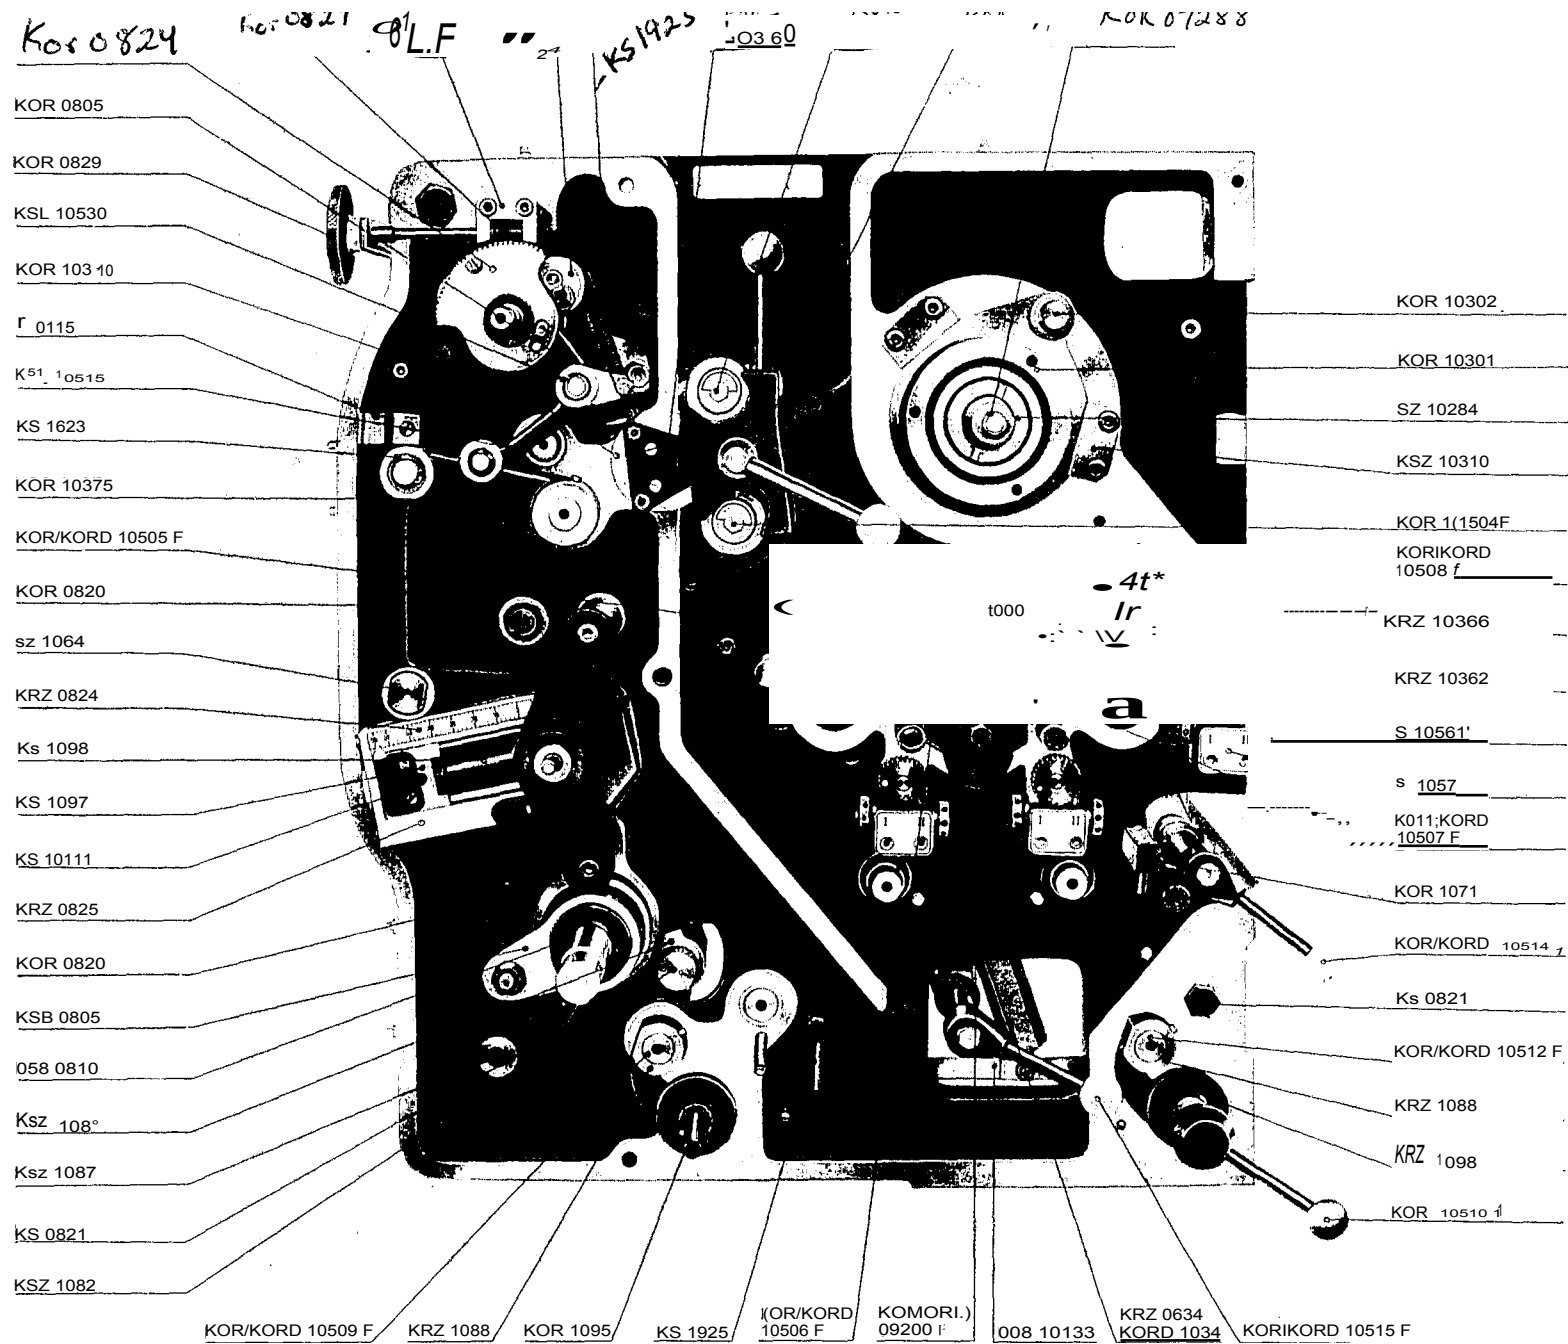

KOR 10375 Lever
 with: S 0806 bearing stud
 GTP 5691 bearing stud
 KS 1623 washer

KOR 10502 F No. 1 Plate dampening roller journal box, 0.S.
 with: KOR 10335 Journal box insert
 18503 needle bearing
 KOR 10341 journal box housing
 KS 10182 shouldered stud
 KRZ 10370 shouldered screw
 S 1035 locking knob
 S 1036 compression spring
 KS 1032 bearing disc

KOR 10504 F No. 2 Plate dampening roller journal box, 0.S.
 with: KOR 10335 journal box
 18503 needle bearing
 KOR 10343 journal box housing
 KS 10182 shouldered stud
 KRZ 10370 shouldered screw
 S 1035 locking knob
 S 1036 compression spring
 KS 1032 bearing disc

KOR 10505 F No. 1 Plate inking roller journal box, 57 0
KORD 10505 F } with: KRZ 10353 journal box insert, 0.S., blue
 KRZ 06355 journal box insert, D.S.
 18504 needle bearing
 KOR 10352 journal box housing, 0.S.
 KOR 10380 journal box housing, D.S.
 KRZ 10358 shaft KOR/KORA
 KORD 10158 shaft

KOR 10506 F No. 2 Plate inking roller journal box, 53 0
KORD 10506 F } with: KRZ 10353 journal box insert, 0.S., white
 KRZ 06355 journal box insert, D.S.
 18504 needle bearing
 KOR 10351 journal box housing, 0.S.
 KOR 10380 journal box housing, D.S.
 KRZ 10358 shaft KOR/KORA
 KORD 10158 shaft

KOR 10507 F No. 3 Plate inking roller journal box, 51 0
KORD 10507 F 1 with: KRZ 10353 journal box insert, 0.S., red
 KRZ 06355 journal box insert, D.S.
 18504 needle bearing

KOR 10352 journal box housing, 0.S.
 KOR 10381 journal box housing, D.S.
 KRZ 10358 shaft
 KORD 10158 shaft
 KOR/KORA

KOR 10508 F } No. 4 Plate inking roller journal box, 55 0
KORD 10508 F with: KRZ 10353 journal box insert, 0.S., brown
 KRZ 06355 journal box insert, D.S.
 18504 needle bearing
 KOR 10351 journal box housing, 0.S.
 KOR 10381 journal box housing, D.S.
 KRZ 10358 shaft
 KORD 10158 shaft
 KOR/KORA

KOR 10509 F 1 Ink ductor roller trip shaft
KORD 10509 F with: KOR/KORD 1079 shaft
 KRZ 1088 trip cam lever
 KS 1078 lever
 KSZ 1081 stop collar
 HK 2216 needle bearing

10510 F Water ductor trip lever (blue ball handle)
 with: KOR 1095 trip lever shaft
 KRZ 1098 trip cam with S 10130 studs
 KRZ 1096 trip lever with KSZ 1296 ball rod
 T 1215 compression spring and
 T 1222-plunger

KOR 10512 F kWater ductor roller trip shaft
KORD 10512 F with: KOR/KORD 1085 shaft
 KRZ 1088 trip cam lever
 KOR 1058 lever with
 KRZ 1072 and GTP 5691 bearing studs

KOR 10514 F 1 Distributor roller journal box shaft, 57 0
KORD 10514 F 1 with: KOR/KORD 1039 shaft
 KS 1220 washer .
 KRZ 0645 journal box lever, D.S.
 KRZ 0647 journal box lever, 0.S.
 S 1034 compression spring
 KS 1519 lever
 KSZ 1296 ball handle rod
 18504 needle bearing
 KS 1032 bearing disc

KSL 10515 Connecting link
 with: HK 1210 needle bearing

	0115	Pipe clip	
KRZ	0634	Distributor roller pan	KOR/KORA
KOR	07288	Thrust shaft with: ARK 3047 thrust bearing (new number K 81106) LS 3047 thrust bearing washer	
KOR	0805	Control lever with: KOR 0806 pin KOR 0807 bushing GTP 5691 pivot screw	
KSB	0805	Over-running clutch lever with: KSB 0807 bushing (in lever) KSB 0808 clutch sleeve (on fountain shaft) KSB 0806 over-running clutch	
KSB	0810	Clutch cover plate	
KOR	0820	Connecting link with: NK 1416 needle bearing	
KOR	0821	Feed collar with: HK 0810 needle bearing T 1310 roller stud T 1311 roller	
KS	0821	Fitted bolt	
KOR	0824	Segment gear with: KOR 0825 pivot stud	
KRZ	0824	Guide piece	
KRZ	0825	Guide piece	
KOR	0827	Feed adjusting worm gear with: GT 0730 spring washer	
KOR	0829	Hand wheel	
KOR	0861 F	Worm gear housing	
KOR	09200 F	Intermediate distributor roller (steel) 45 0:2	
KORD	09200 F	with: KOR/KORD 0971 distributor roller with 6203 Z ball bearing KOR/KORD 0972 shaft with KOR 0973 swing lever and KOR 0974/KRZ 10366 operating bolt KOR 0975.spring rod with KOR 0976 compression spring KOR 0977 washer and KOR 0979 spring rod head KOR 0978 angle plate	
KORD	1034	Distributor roller pan	
	1056 F	Roller adjusting worm gear	
	1057	Worm gear housing	
SZ	1064	Bearing bolt	

KOR	1071	Ink flow selector lever, 57 O	
KSZ	1080	Ductor roller lever, O.S. with: KS 10182 shouldered stud	
KSZ	1082	Ductor roller journal box with: 18504 needle bearing KS 1032 bearing disc . KSZ 1083 shouldered screw KSZ 1084 locking knob KS 1062 compression spring	
KSZ	1087	Spring rod support	
KRZ	1088	Ductor trip cam lever	
KOR	1095	Trip lever shaft (see KOR 10510 F)	
KS	1097	Guide block with: KS 10100 hexagon nut	
KRZ	1098	Duxtor trip cam , with: S 10130 bearing stud	
KS	1098	Threaded spindle with: KS 1091 bevel gear KS 10103 collar	
KS	10111	Indicator plate	
KOR	10133	Distributor roller pan support	
SZ	10284	Threaded adjusting (from Serial No. 323871: KOR 07298 with 10 disc springs K 6204)	
KOR	10301	Eccentric bushing, O.S. with: F-7b-6643 needle bearing KSZ 10287 washer	
KOR	10302	Bearing stud	
KSZ	10310	Guide block with: KSBZ 10313 shim	
KOR	10340	Flanged bushing with: FIK 2030/HK 2020 K ball bearing T 1431 spacer ring G 20x26x4 oil seal	
KOR	10360	Support bracket with: KOR 10359 dowel pin	
KOR	10361	Selector safety lever with: KOR 10358 handle rod F 25 red ball handle T 1212 compression spring 3/8" ball	
KRZ	10362	Gear	
KRZ	10366	Disengaging bolt with: KRZ 10364 disengaging cam KRZ 10367 bolt retainer	

KOR 10515 F Distributor roller journal box shaft, 53 O
KORD 10515 F with: same as KOR/KORD 10514 F
KSL 10530 Washer
KS 1623 Washer
KS 1925 Tension spring

For KORS check list below. If part is not listed, then refer to general listing.

KORS Parts		Illustration shown as
KORS 09200 F	Intermediate distributor roller (steel), 45 O with: KORS 0971 distributor roller KORS 0972 shaft balance same as KOR/KORD 09200 F	KOR/KORD 09200 F
KORS 1034	Distributor roller pan	KRZ 0634/KORD 1034
KORS 10340	Flanged bushing with: AS 20-26-4/7 oil seal	KOR 10340
KORS 10502 F	No. 1 Plate dampening roller journal box, O.S. . with: KORS 10341 journal box housing balance same as KOR 10502 F	KOR 10502 F
KORS 10504 F	No. 2 Plate dampening journal box, O.S. with: KORS 10343 journal box housing balance same as KOR 10504 F	KOR 10504 F
KORS 10505 F	No. 1 Plate inking roller journal box, 57 O with: KORS 10158 shaft balance same as KOR/KORD 10505 F	KOR/KORD 10505 F
KORS 10506 F	No. 2 Plate inking roller journal box, 53 O with: KORS 10158 shaft balance same as KOR/KORD 10506 F	KOR/KORD 10506 F
KORS 10507 F	No. 3 Plate inking roller journal box, 51 O with: KORS 10158 shaft balance same as KOR/KORD 10507 F	KOR/KORD 10507 F
KORS 10508 F	No. 4 Plate Inking roller journal box, 55 O with: KORS 10158 shaft balance same as KOR/KORD 10508 F	KOR/KORD 10508 F
KORS 10509 F	Ink ductor roller trip shaft with: KORS 1079 shaft balance same as KOR/KORD 10509F	KOR/KORD 10509 F
KORS 10512 F	Water ductor roller trip shaft with: KORS 1085 shaft balance same as KOR/KORD 10512 F	KOR/KORD 10512 F
KORS 10514 F	Distributor roller journal box shaft, 57 O with: KORS 1039 shaft balance same as KOR/KORD 10514 F •	KOR/KORD 10514 F

KORS 10515 F Distributor roller journal box shaft, 53 O
with: same as KOR/KORD 10514 F

KOR/KORD 10515*



Pages

roller

the

12t's°

Jose

KOR 07162

KOR 07287

KOR 10116

KOR 1013 0913

KOR/KORD 0915 F

KSB 0928

KOR/KORD 0916 F

T 0675

KS 2055

KOR 1010

KSB 0913

KOR/KORD 0920 F

KOR 10116

KSB 0913

KOR/KORD 0915 F

KSB 0928


KOR/KORD 0916 F

KS 1015

KS 1018

KOR/KORD 0917 F

KRZ 0924

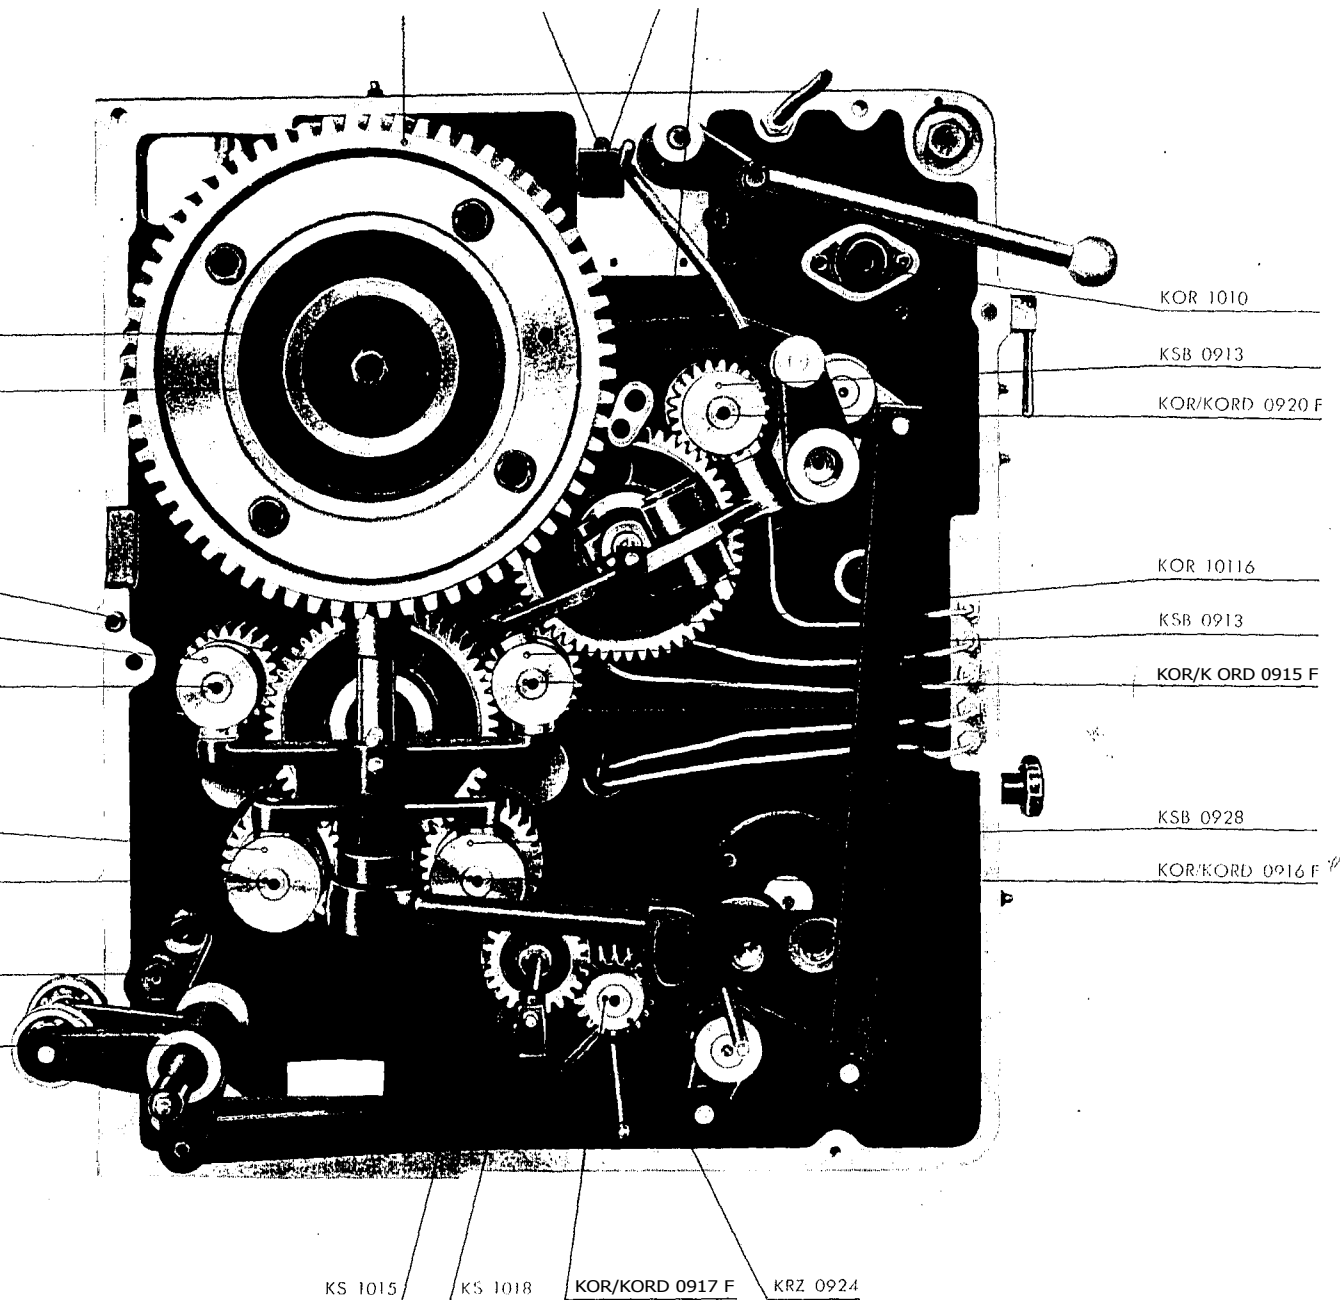


• T	0675	Fitted bolt
KOR	07162	Fountain driving cam
KOR	07170	Plate cylinder gear with: S 801.007 washer
KOR	07287	End plate
KSB	0913	Gear
KOR	0915 F	Distributor cylinder 66 0
KORD	0915 F	
KOR	0916 F	Distributor cylinder 84 0
KORD	0916 F	
KOR	0917 F	Distributor cylinder 54 0 fl
KORD	0917	Distributor cylinder 54 0 fl with: F-24509 needle bearing KRZ 0932 washer
KOR	0920 F	Dampening distributor roller
KORD	0920	
KRZ	0924	Gear
KSB	0928	Gear
KOR	1010	Cap
KS	1015	Intermediate gear with: 6004 ball bearing KS 1016 spacer ring KS 1017 cover washer
KS	1018	Intermediate gear shaft
KOR	10116	Intermediate gear with: 6004 ball bearing KS 1016 spacer ring KS 1017 cover washer
KOR	10339	Flanged bushing with: HK 2030/HK 2020 K ball bearing T 1431 spacer ring G 20x26x4 oil seal
GT	2007	Pin
KS	2055	Washer
KOR	3307	Switch bracket

ruTo

For KORS check list below. If part is not listed, then refer to general listing.

KORS Parts		Illustration shown as
KORS	•0915 F	Distributor cylinder 66 0
		KOR/KORD 0915 F
KORS	0916 F	Distributor cylinder 84 0
		KOR/KORD 0916 F
KORS	0917 F	Distributor cylinder 54 0
		KOR/KORD 0917 F
		with: same as KOR/KORD 0917 F
KORS	0920 F	Dampening distributor cylinder
		KOR/KORD 0920 F
KORS	1018	Intermediate gear shaft
		KS 1018
KORS	10339	Flanged bushing
		KOR 10339
		with: AS 20-26-4/7 oil seal

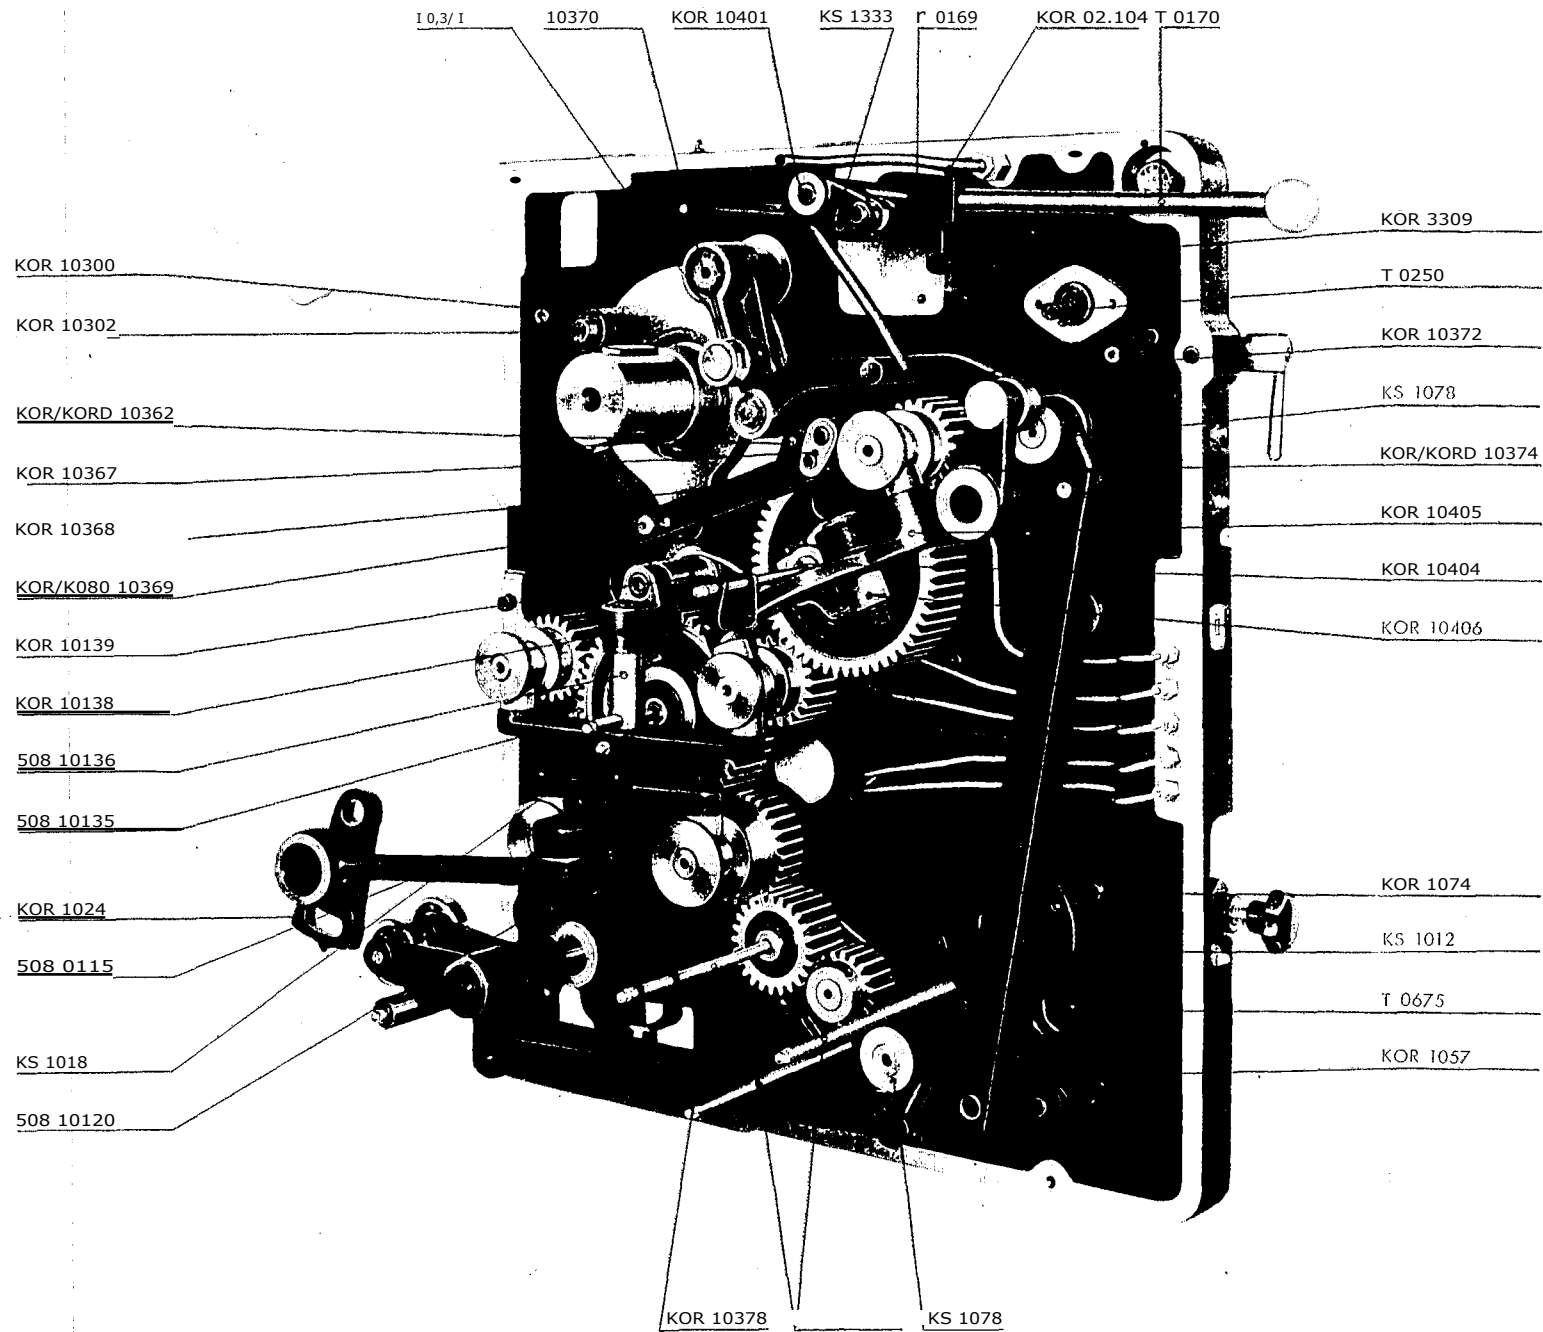



•	0169	Inch lever Folder	
•	0170	Inch lever rod	
•	0250	Compress'On spring	
•	0675	Fitted bolt with: KSB d820 cross bar	KOR/KORA
		KORD 0820/KORS 0820 cross bar	
KOR	02104	Water tube	
KS	1012	Fountain r Iler bushing	
KS	1018	Intermedia e gear shaft with: KOR 10377 oil tube	
KOR	1024	Oscillation regulating lever with: KS 1025 bearing stud KS 1075 washer	
KOR	1057	Lever with: GTP 691 bearing stud HK 2016 needle bearing	
KOR	1074	Connecting link with: . HK 1210 needle bearing	
KS	1078	Lever with: KOR 1072 bearing stud KS 1234 washer	
KOR	10115	Connecting link with: 1202 ball bearing KS 1027 spacer ring KS 1028 cover plate	
KOR,,	10120	Support bracket	
KOR 1,0135		Oscillationiever with: KS 1025 bearing stud S 10151 roller S 10152 shouldered stud NK 1820 needle bearing	
KOR	10136 ;10"	Shaft with: S 1433 washer	
KOR	10138	Bearing housing	
KOR	1639	SuppOrt Aolt	
KOR	10300	Eccent* bushing, D.S. with: #=.7b-6643 needle bearing KSZ 10287 washer	
•			
KOR	10302	Bearing atUd	
KOR	10362	Stop bolt	
KORD	10362	Stop bolt	KORD/KORS "

KOR	10367	Lever with: GTP 5691 bearing stud	
KOR	10368	Connecting link	
KOR	10369	Bearing stud with: KS 1234 washer	
KORD	10369	Bearing stud with: KSL 10530 washer	KORD/KORS
KOR	10370	Lever support stud with: KS 2055 washer	
KORD	10370	Lever support stud with: KS 2055 washer	KORD/KORS
KOR	10371	Cam lever with: KS 1111 roller KS 1113 roller stud S 0806 bearing stud KS 1623 washer HK 2016 needle bearing	
KORD	10371	Cam lever with: same as KOR 10371	KORD/KORS
KOR	10372	'Connecting link with: NK 1416 needle bearing	
KOR	10374	Lever with: S 0806 bearing stud KS 1623 washer	
KORD	10374	Lever with: same as KOR 10374	KORD/KORS
KOR	10376	Oil tube	
KOR	10378	Oil tube	
KOR	10401	Inch lever shaft	
KOR	10404	Intermediate shaft with: KOR 10379 oil tube	
KOR	10405	Oscillation lever with: S 10151 roller S 10152 roller stud NK 1616 needle bearing	
KOR	10406	Lever bracket clamping with: KS 1069 shouldered bolt	
KS	1333	Lever with: GTP 5691 bearing stud KSL 10530 washer	
KOR	3309	Cam	

For KORS check list below. If part is not listed, then refer to general listing.


KORS Parts		Illustration shown as
KORS 1018	Intermediate gear shaft	KS 1018
KORS 1068	Inch lever holder	T 0169
KORS 1070	Inch lever rod	T0170
KORS 10115	Connecting link with: 1205 ball bearing SOR 7251 cover washer SOR 7250 cover washer with oil hole	KOR 10115
KORS 10136	Shaft with: S 433 washer	KOR 10136

C9

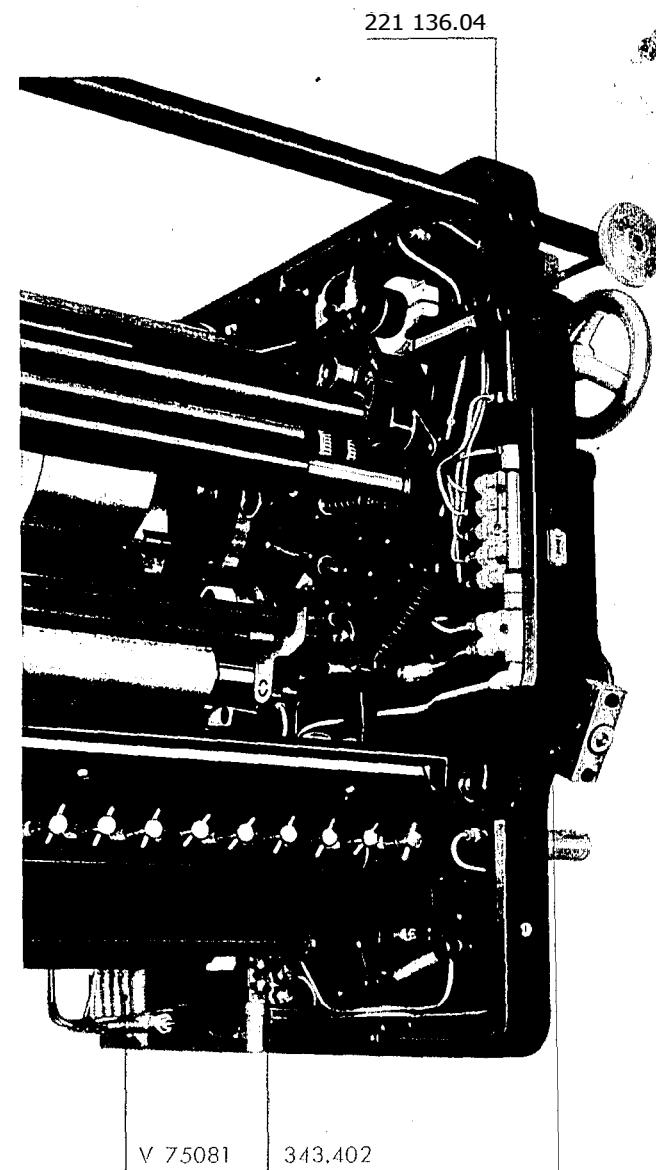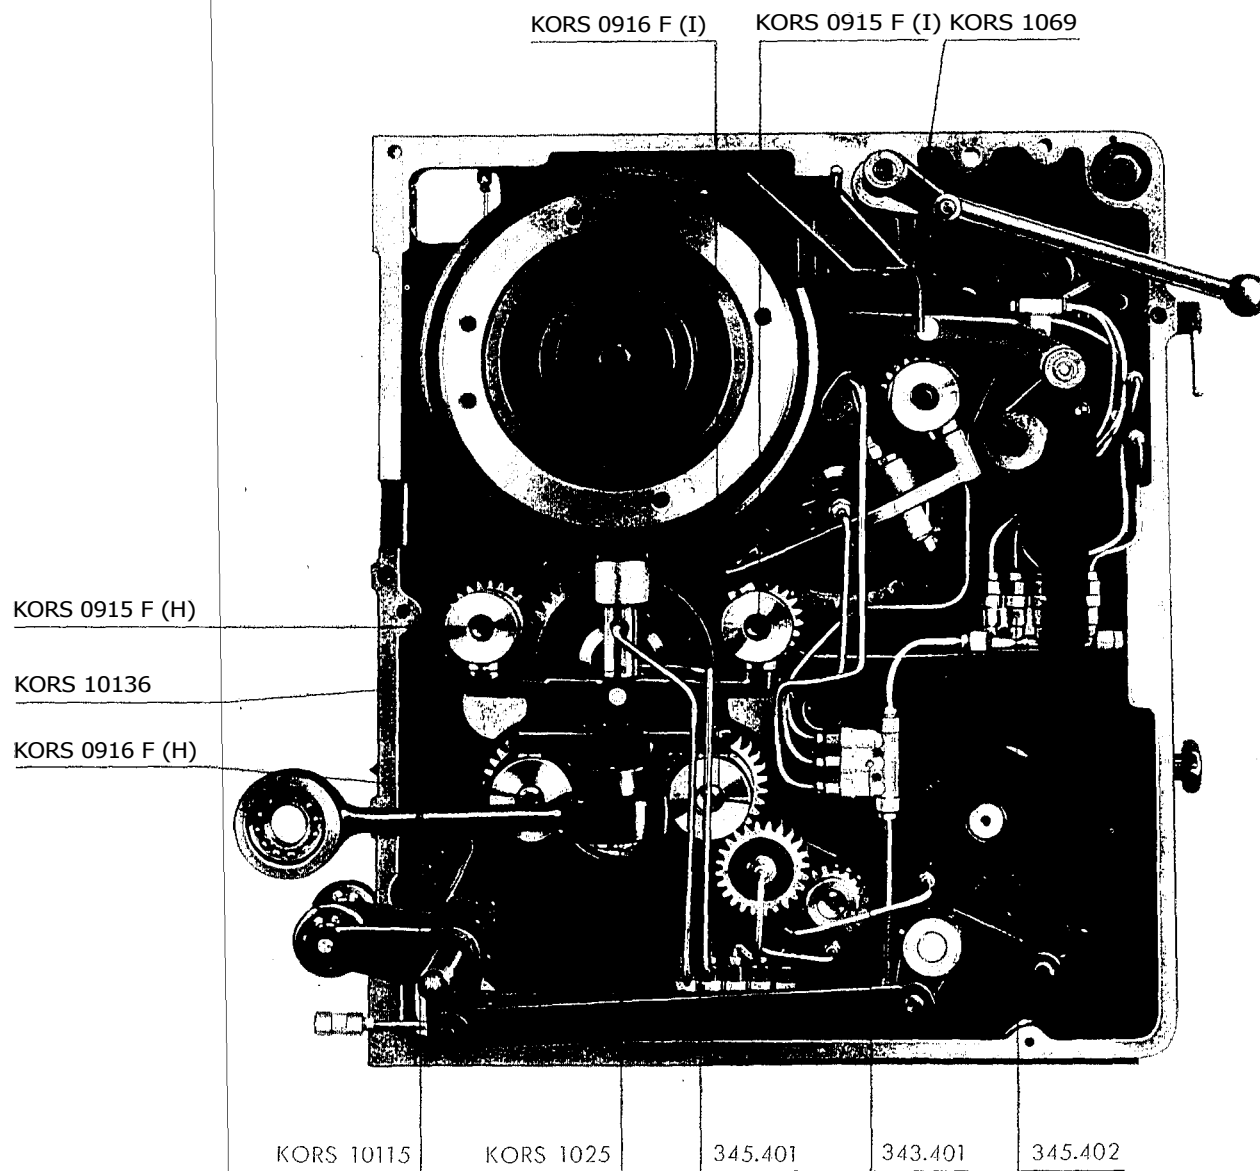

KORS 0915 F (I)	Distributor cylinder 66 0 with: KORS 1037 bearing KSZ 1039 flange
KORS 0915 F (II)	Distributor cylinder 66 0 with: KORS 1037 bearing KSZ 1039 flange, D. S. KSZ 1049 flange, O. S.
KORS 0916 F (I)	Distributor cylinder 84 0 with: KORS 1037 bearing KSZ 1039 flange
KORS 0916 F (II)	<u>Distributor cylinder 84</u> <u>with: NNW 1037 beari</u> ..), <53- 163 7 <u>KSZ 1039 flange O. S.</u> <u>C4SZ.1049</u>
KORS 1025	Shouldered bearing stud
KORS 1069	Shouldered bearing bolt
KORS 10115	Connecting link with: SOR 7250 cover washer with oil hole SOR 7251 cover washer 1205 ball bearing
KORS 10136	Shaft
V 75081	Lubrication distributor unit
221 136. II 4	Lubrication distributor unit
343.401	Lubrication distributor unit
343.402	Lubrication distributor unit
345.401	Lubrication distributor unit with: V 75082 inside unit
345.402	Lubrication distributor unit



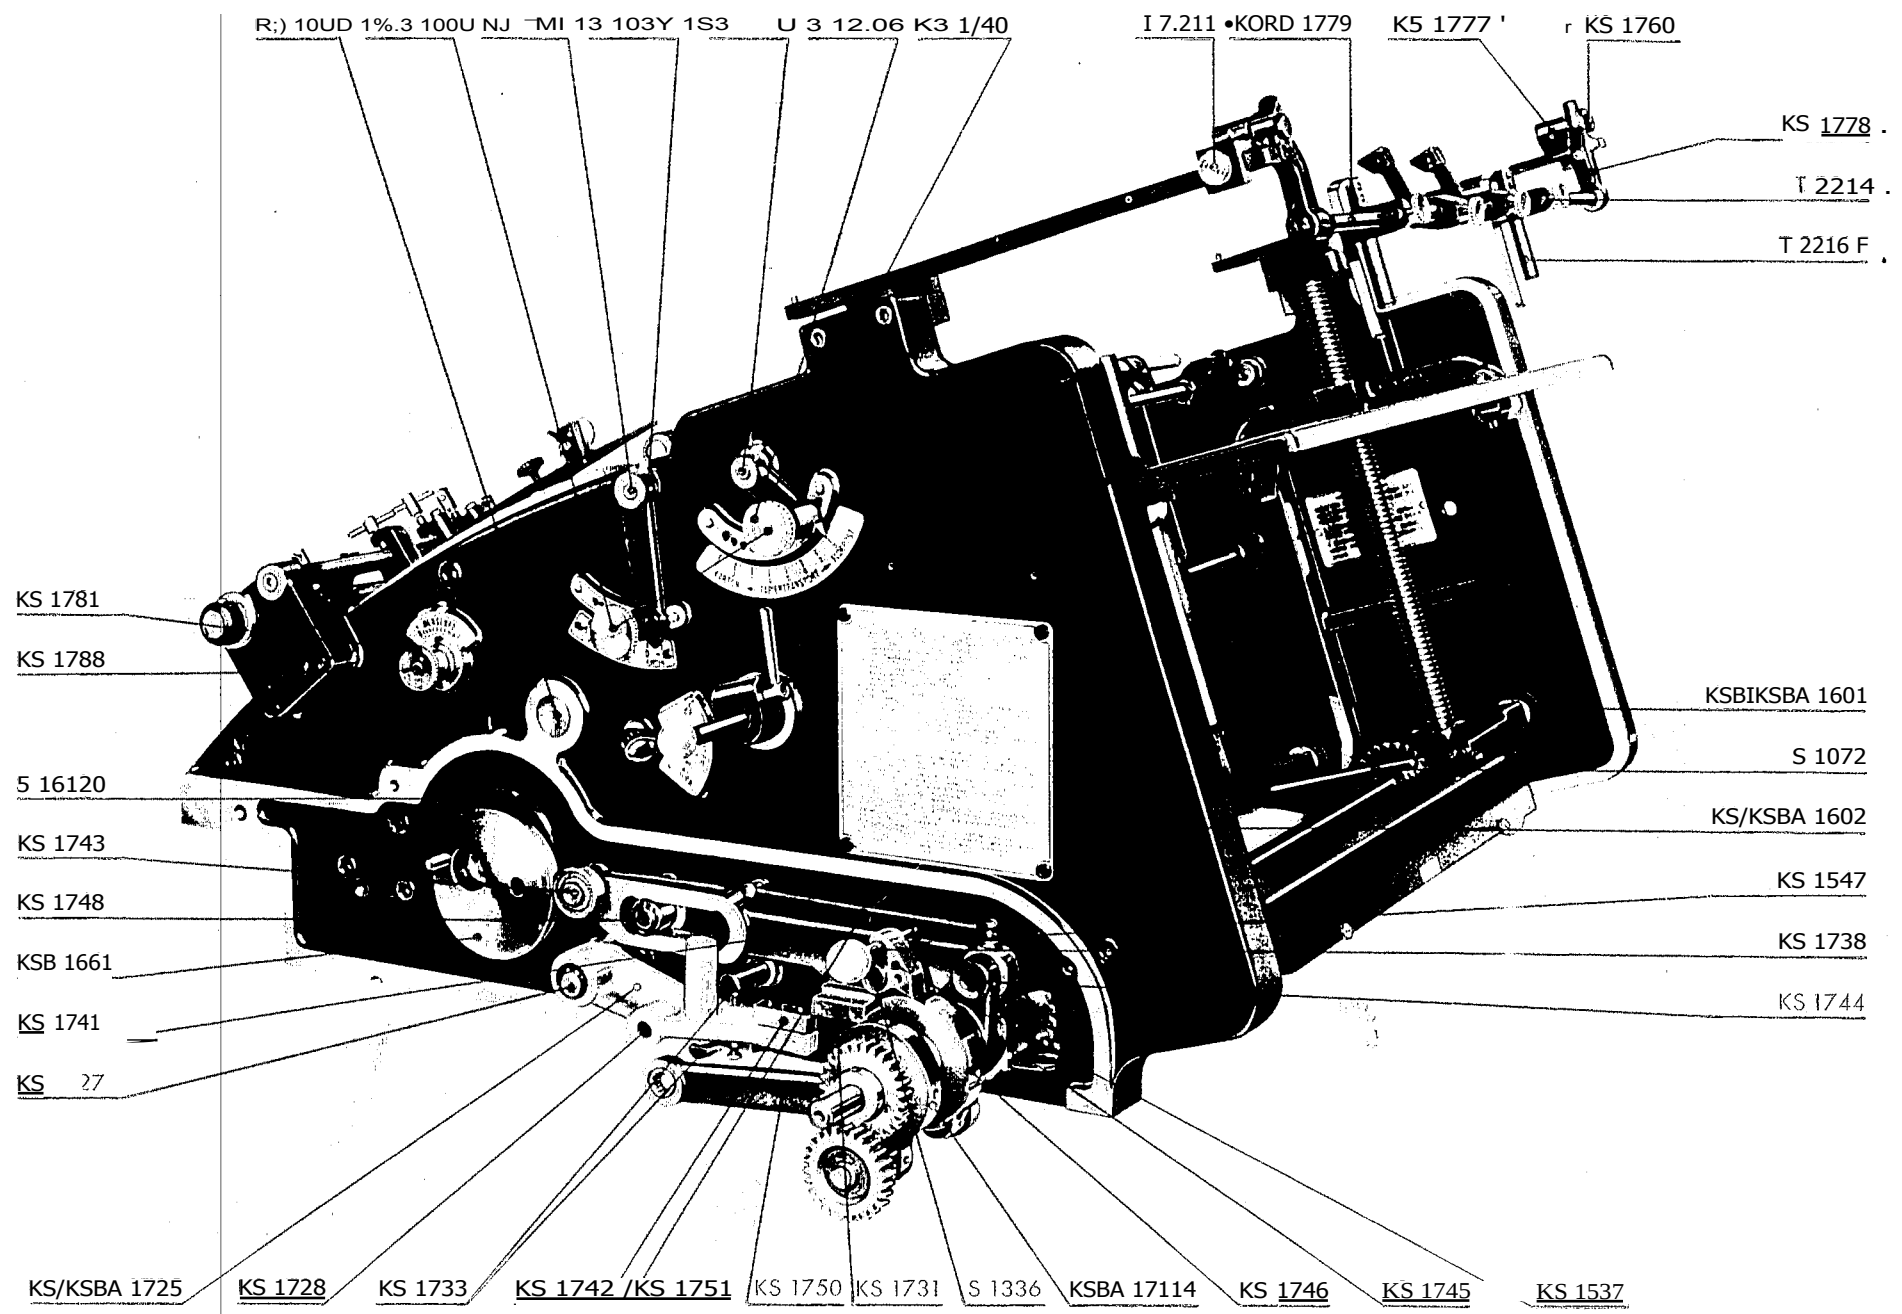


•	1072	Rod	
•	1266	Knurled knob	
•	1336	Ratchet pawl stud	
KS	1537	Ratchet pawl with: KS 1543 spring screw K 12/13 needle bearing (new number: K 12x15x13)	
KS	1 47	Tension spring	
KSB	1601	Side frame, D. S with: KS 1639 bearing	KOR
KSBA	1601	Side frame, D. S with: same as KSB 1601	KORA/KORD
KS	1602	Side frame, O. S	KOR
KSBA	1602	Side frame, O. S	KORA/KORD
KS	1605	Cover plate	
KS	1631	Sucker bar tilt lever shaft	
KS	1659	Sucker bar tilt control lever	
KS	1660	Plunger with: T 0234 compression spring	
KSB	1661	Feed table lift cam	
•	16 20	Cover plate	
KS	1725	Tripping lever with: KS 1722 spring plunger KS 1723 compression spring HK 1412 needle bearing	KOR
KSBA	1725	Tripping lever with: same as KS 1725	KORA/KORD/KORS
KS	1727	Bearing stud with: KS 1623 washer KS 1726 stop lever KSBA 1726 stop lever HK 1412 needle bearing	KOR KORA/KORD/KORS
KS	728	Stud	
KS	1T30	Feed table height lever shaft	
KS	731	Trip block	
KS	1T33	Adjustment stop	
KS	1738	Ball handle rod	
KS	740	Feed table height control lever	
KS	741	Ratchet operating link with: NK 1416 needle bearing	
KS	1742	Trip block	

KS	1743	Bearing stud with: 6202 ball bearing	
KS	1744	Shouldered stud	
KS	1745	Ratchet lever with: HK 3520 needle bearing KS 1022 bearing stud KS 1543 spring screw	
KS	1746	Ratchet wheel	
KS	1748	Roller stud with: NK 1416 needle bearing KS 1623 washer	
KS	1750	Connecting link with: HK 1412 needle bearing	
KS	1751	Tension spring	
KS	j7.60		
KS	1777	Guid ce	
KS		a•piece	
KSB	1779	Sheet steadier bar	KOR/KORA/KORD 62
KORD	1779	Sheet steadier bar	KORD 64/KORS
KS	1781	Knurled knob with: T 1215 compression spring	
KS	1788	Blast control shaft	
KSBA	17114	Bearing housing	KORA/KORD/KORS
•	2211	Knurled screw	
•	2214	Sheet steadier holder with: T 2211 knurled screw	
•	2216 F	Sheet steadier	

For KORS check list below. If part is not listed, then refer to general listing.

KORS Parts			Illustration shown as
KORS	1601	Side frame, D. S. with: same as KSB 1601	KSB/KSBA 1601
KORS	1602	Side frame, O. S.	KS/KSBA 1602
KORS	1781	Knurled knob with: T 1215 compression spring	KS 1781

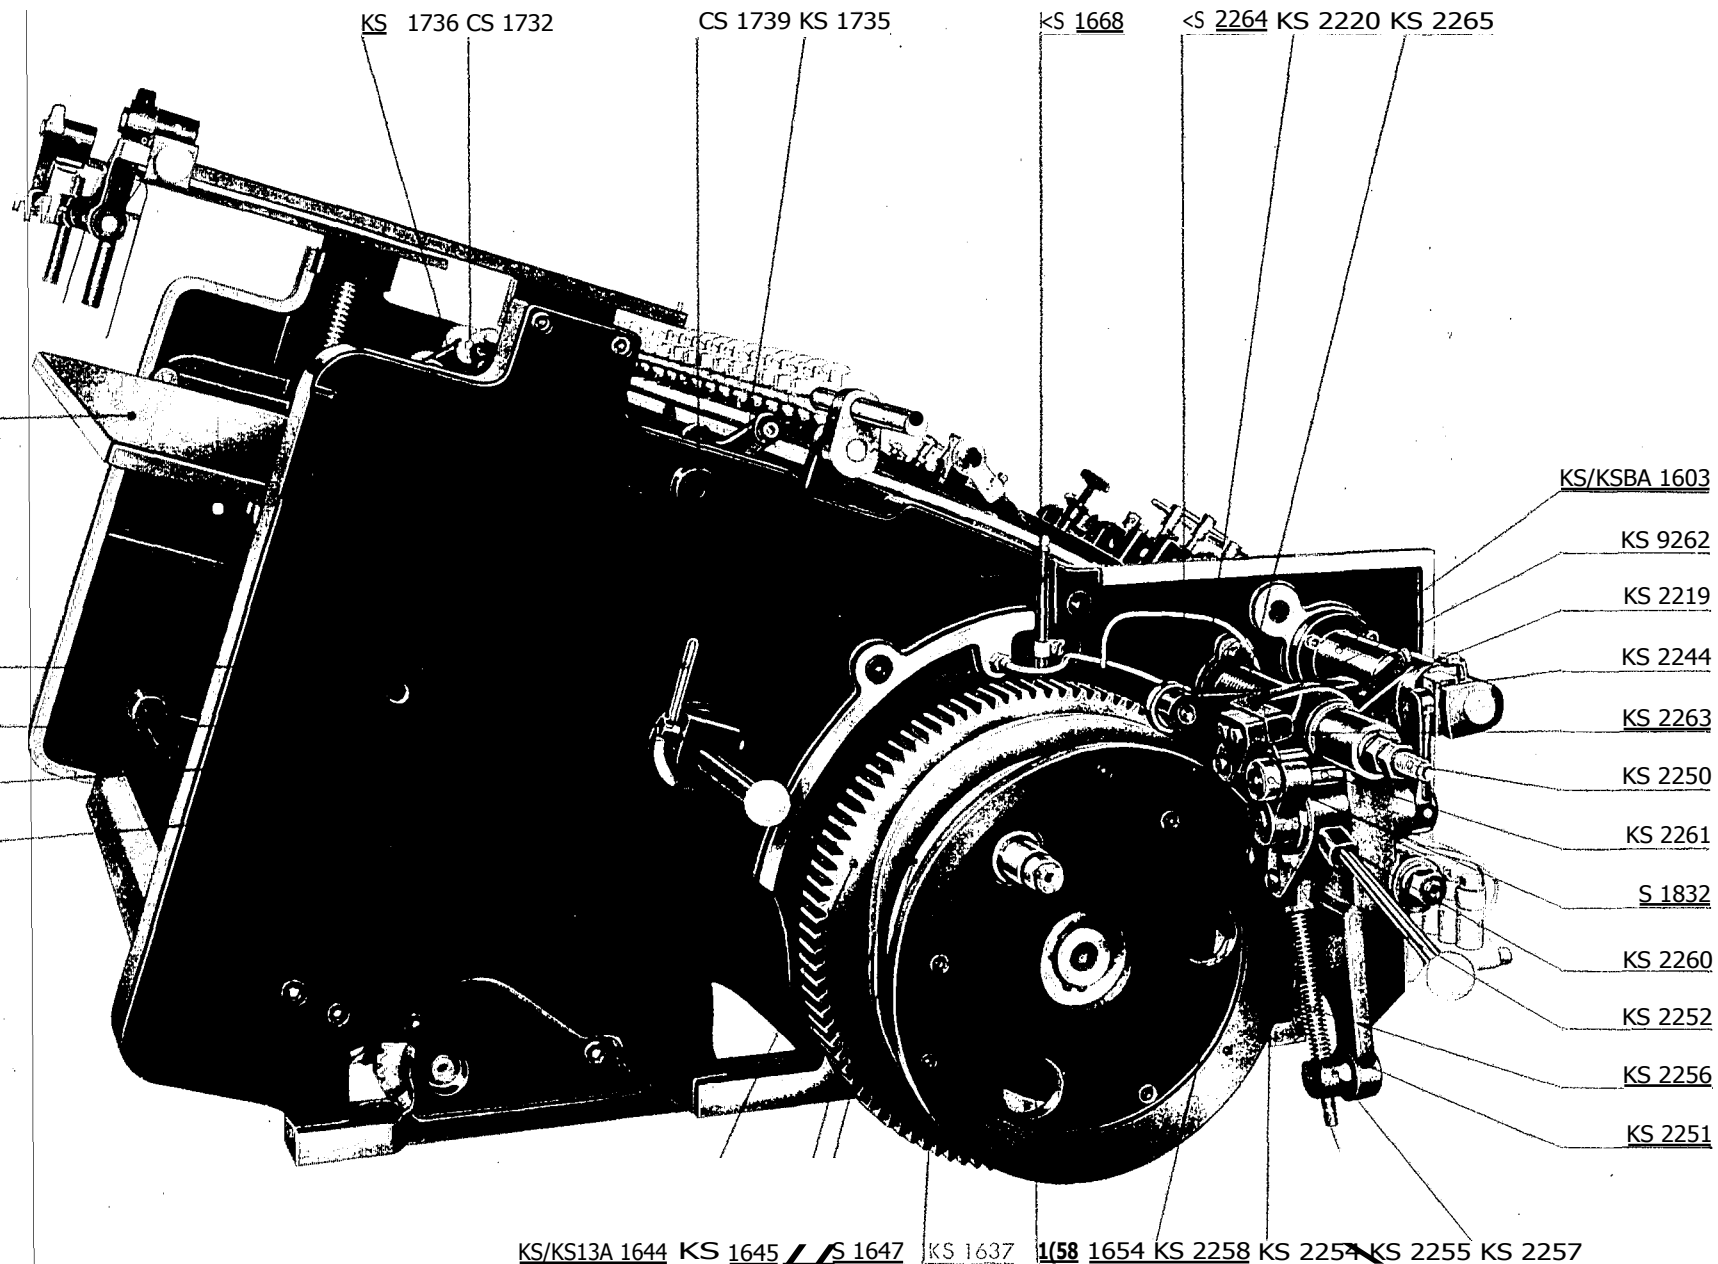

SBB	1430	Pin handle	
KS	1603	Bearing sleeve	KOR up to No. 325235
			KORA/KORD/KORS
KSBA	1603	Bearing sleeve	KOR from No. 325236
KS	1637	Side guide cam	
KS	1644	Drive gear	KOR
KSBA	1644	Drive gear	KORA/KORD/KORS
KS	1645	Side guide raising and lowering cam	
KS	1647	Air valve cam	
KSB	1654	Pump crank stud	
KS	1668	Oil tube	
KS	1732	Eccentric shaft	
KS	1735	Height control bar lever, D. S.	
KS	1736	Height control bar lever, O. S. with: HK 1210 needle bearing	
KS	1739	Lever bearing stud with: HK 1010 needle bearing	
KSB	1763 F	Feed table	KOR
KSBA	1763 F	Feed table	KORA
KORD 1763 F		Feed table	KORD
KS	1766	Guiding block	KOR
KSBA	1766	Guiding block	KORA/KORD/KORS
KS	1767	Locking bolt	
KS	1771	Side standard guide bar with: KS 1797 washer	
	1832	Cam roller	
KS	2219	Lever with: KS 2221 bearing stud	
KS	2220	Cam lever with: HK 1816 needle bearing	
KS	2244	Guide block	
KS	2250	Bolt	
KS	2251	Side guide mechanism bracket with: K14/17 needle bearing (new number: K 14x18x17) HK 1612 needle bearing	
KS	2252	Shifting lever With: HK 3020 needle bearing	
KS	2254	Pin	
KS	2255	Spring rod with: HK 1010 needle bearing	
KS	2256	Compression spring	

KS	2257	Spring rod guide
KS	2258	Shaft
KS	2260	Cam lever
KS	2261	Bearing stud
KS	2262	Cam lever with: HK 1816 needle bearing KS 2264 bearing stud 6002 ball bearing
KS	2263	Guide pawl
KS	2264	Bearing stud with: 6002 ball bearing
KS	2265	Torsion spring

For KORS check list below. If part is not listed, then refer to general listing.

KORS Parts		Illustration shown as
KORS	1637	Side guide cam
KORS	1645	Side guide raising and lowering cam
KORS	1763 F	Feed table
		KS 1637
		KS 1645
		KSB/KSBA/ KORS 1763 F

[illegible]


	0263	0val headed screw	
KS	1140	Tapered pin	
KS	1603	Bearing sleeve	KOR up to No. 325235
			KORA/KORD/KORS!
KSBA	1603	Bearing sleeve	KOR from No. 325236
KS	1604	Bearing bracket	KOR
KSBA	1604	Bearing bracket	KORA/KORD/KORS
KS	1623	Washer	
KS	1729	Gear	
	1730 F	St•eet holder	
KSB	2001 F	Feed board	KOR
KORA	2001 F	Feed board	KORA/KORD 62
KORD	2001 F	Feed board	KORD 64
KSB	2203 F	Side guide mounting bracket with: KS 2231 key	
KS	2204	Lower guide plate bracket, D. S.	KOR
KSBA	2204	Ldwer guide plate bracket, 0. S.	KORA/KORD
	2204F	Clamping screw	
KS	2205	Ldwer guide plate bracket, 0. S.	KOR
KSBA	2205	Lower guide plate bracket, D. S.	KORA/KORD
KSB	2209	Side guide shaft	KOR
KSBA	2209	Sile guide shaft	KORA/KORD 62
KORD	2209	Side guide shaft	KORD 64
KSB	2210	Collar	
KS	2215	Guide block collar	
KS	2217	Center guide nut	
KS	2218	Center guide screw	
KSB	2223 F	Sheet smoother shaft	KOR
KSBA	2223 F	Sheet smoother shaft	KORA/KORD 62
KORD	2223 F	Sheet smoother shaft	KORD 64
KS	2224 F	Sheet smoother	KOR
KSBA	2224 F	Sheet smoother	KORA/KORD
KS	2225 F	Clamping nut	
KS	2228 F	Side guide	
	2236 F	Sheet brake_)	
KS	2238	Spring tongue 	
	2239	Clamping screw w th: T 2207 cross bar	
KS	2246 F	Sheet smoother	KOR

KSBA	2246 F	Sheet smoother	KORA/KORD
	2248	Spring tongue	
KS	2253	Shifting lever rod	
KS	2259	Side guide lever	
KS	2266 F	Sheet caliper	
	75032	Lubrication distributor unit .	

For KORS check list below. If part is not listed, then refer to general listing.

KORS Parts			Illustration shown as
KORS	2001 F	Feed board	KSBA/KORA/ KORD 2001 F
KORS	2204	Lower guide plate bracket, 0.S.	KS 2205/KSBA 2204
KORS	2205	Lower guide plate bracket, D.S.	KS 2204/KSBA 2205
KORS	2209	Side guide shaft	KSBA/KSBA/KORD 2209
KORS	2223 F	Sheet smoother shaft	KSBA/KSBA/ KORD 2223 F
KORS	2224 F	Sheet smoother	KS/KSBA 2224 F
KORS,	2246 F	Sheet smoother	KS/KSBA 2246 F


D4

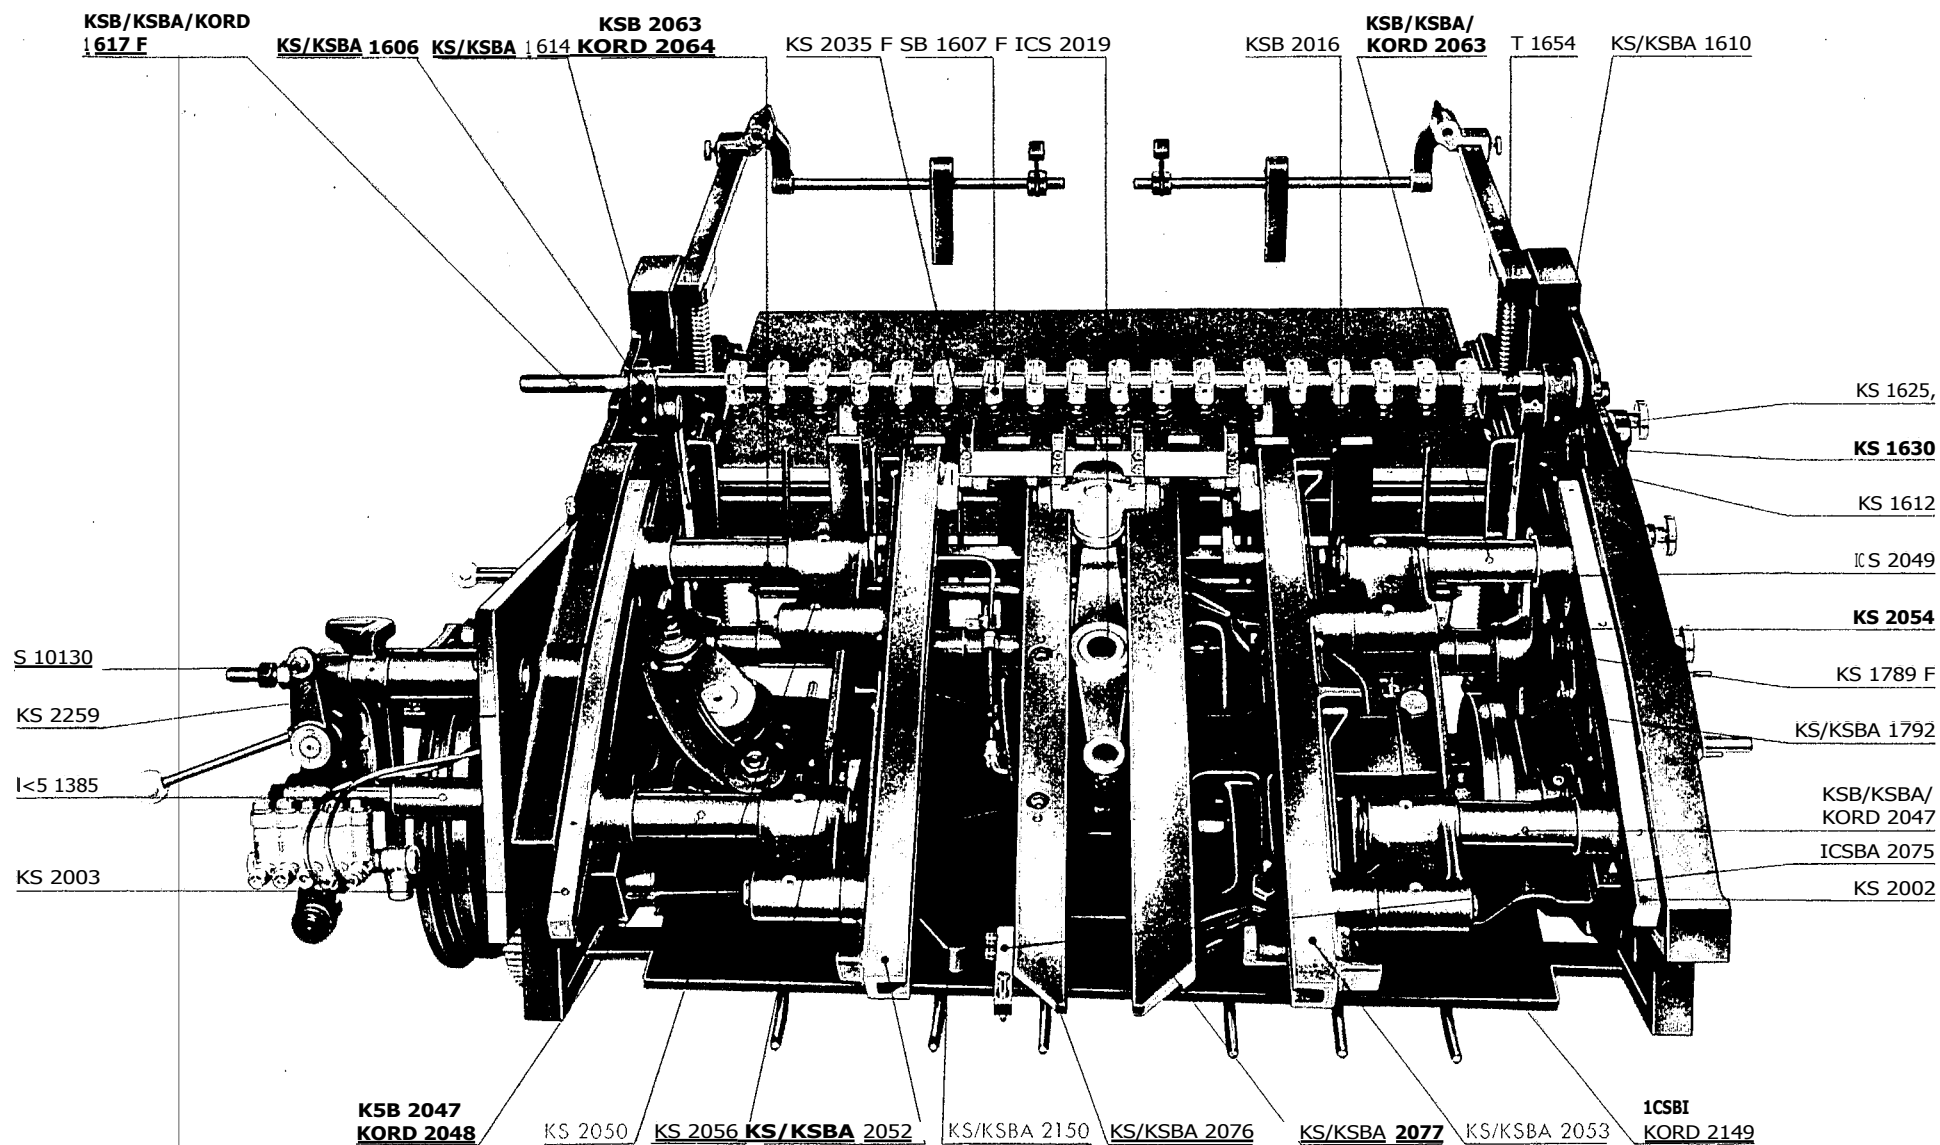

	10130	Gu de block stud	
KS	1385	Bo t	
KS	1606	Sucker bar carrier, D.S. KS 1626 shouldered stud	KOR
KSBA	1606	Su&er bar carrier, D.S. witi: KSBA 1626 shouldered stud	KORA/KORD/KORS
SB	1607 F	Sucker with: KS 1671 molded rubber sucker, deep P-7/ 551. S 16106 tissue slide S 1630 plain rubber sucker' -75 S 16123 tissue slide	
KS	1610	Sucker bar carrier, O.S. wit: KS 1626 shouldered stud KS 1625 connecting link stud	KOR
KSBA	1610	Sucker bar carrier, OS. witi: KSBA 1626 shouldered stud KS 1625 connecting link stud	KORA/KORD/KORS
KS	1612	Sucker bar tilt lever witi: KS 1629 bearing stud HK 1010 needle bearing	
KS	1614	Sucker bar lever witi: KS 1628 bearing stud NK 1520 needle bearing HK 1210 needle bearing	KOR
KSBA	1614	Sucker bar lever KSBA 1628 bearing stud HK 1512 needle bearing	KORA/KORD
KS	1617 F	Sucker bar	KOR
KSBA	1617 F	Sucker bar	KORA/KORD 62
KORD	1617 F	Sucker bar	KORD 64
KS	1625	Coinecting link stud	
KS	1630	Till connecting lever wit HK 1010 needle bearing	
	1654	Air stop ring	
KS	1789 F	Lever	
KS	1792	Connecting link	KOR
KSBA	1792	Connecting link	KORA/KORD
KS	2002	Feed board bracket,	
KS	2003	Feed board bracket, D.S.	
KSBA	2016	Washer KSB 2017 screw	
KS	2019	Retaining washer	

KS	2035 F	Gripper with: KS 2045 backing plate	
KSBA	2047	Angle lever shaft with: KS 2055 washer	KOR/KORA/KORD 62
KSBA	2047	Angle lever shaft with: KS 2055 washer	KORA/KORD 62
KORD	2047	Angle lever shaft with: KS 2055 washer	KORD 64/KORS
KORD	2048	Angle lever shaft	KORD 64
KS	2049	Angle lever with: HK 2016 needle bearing	
KS	2050	Angle lever with: HK 2016 needle bearing	
KS	2052	Guide rail, D S	KOR
KSBA	2052	Guide rail, D.S.	KORA/KORD
KS	2053	Guide rail, Q S	KOR
KSBA	2053	Guide rail, Q S	KORA/KORD
KS	2054	Guide rail lever stud with: KS 1623 washer	
KS	2056	Connecting link with: S 10151 roller 10152 roller stud HK 1412 needle bearing KS 1022 shouldered stud	
KSBA	2063	Angle lever shaft	KOR/KORA/KORD 62
KSBA	2063	Angle lever shaft	KORA/KORD 62
KORD	2063	Angle lever shaft	KORD 64/KORS
KORD	2064	Angle lever shaft	KORD 64
KSBA	2075	Support bracket	KORA/KORD
KS	2076	Guide rail	KOR
KSBA	2076	Guide rail	KORA/KORD
KS	2077	Cross guide rail	KOR
KSBA	2077	Cross guide rail	KORA/KORD
KSBA	2149	Oil drip pan	KOR/KORA/KORD 62
KORD	2149	Oil drip pan	KORD 64
KS	2150	Oil splash guard	KOR/KORS
KSBA	2150	Oil splash guard	KORA/KORD
KS	2259	Side guide lever	

D 4 continued

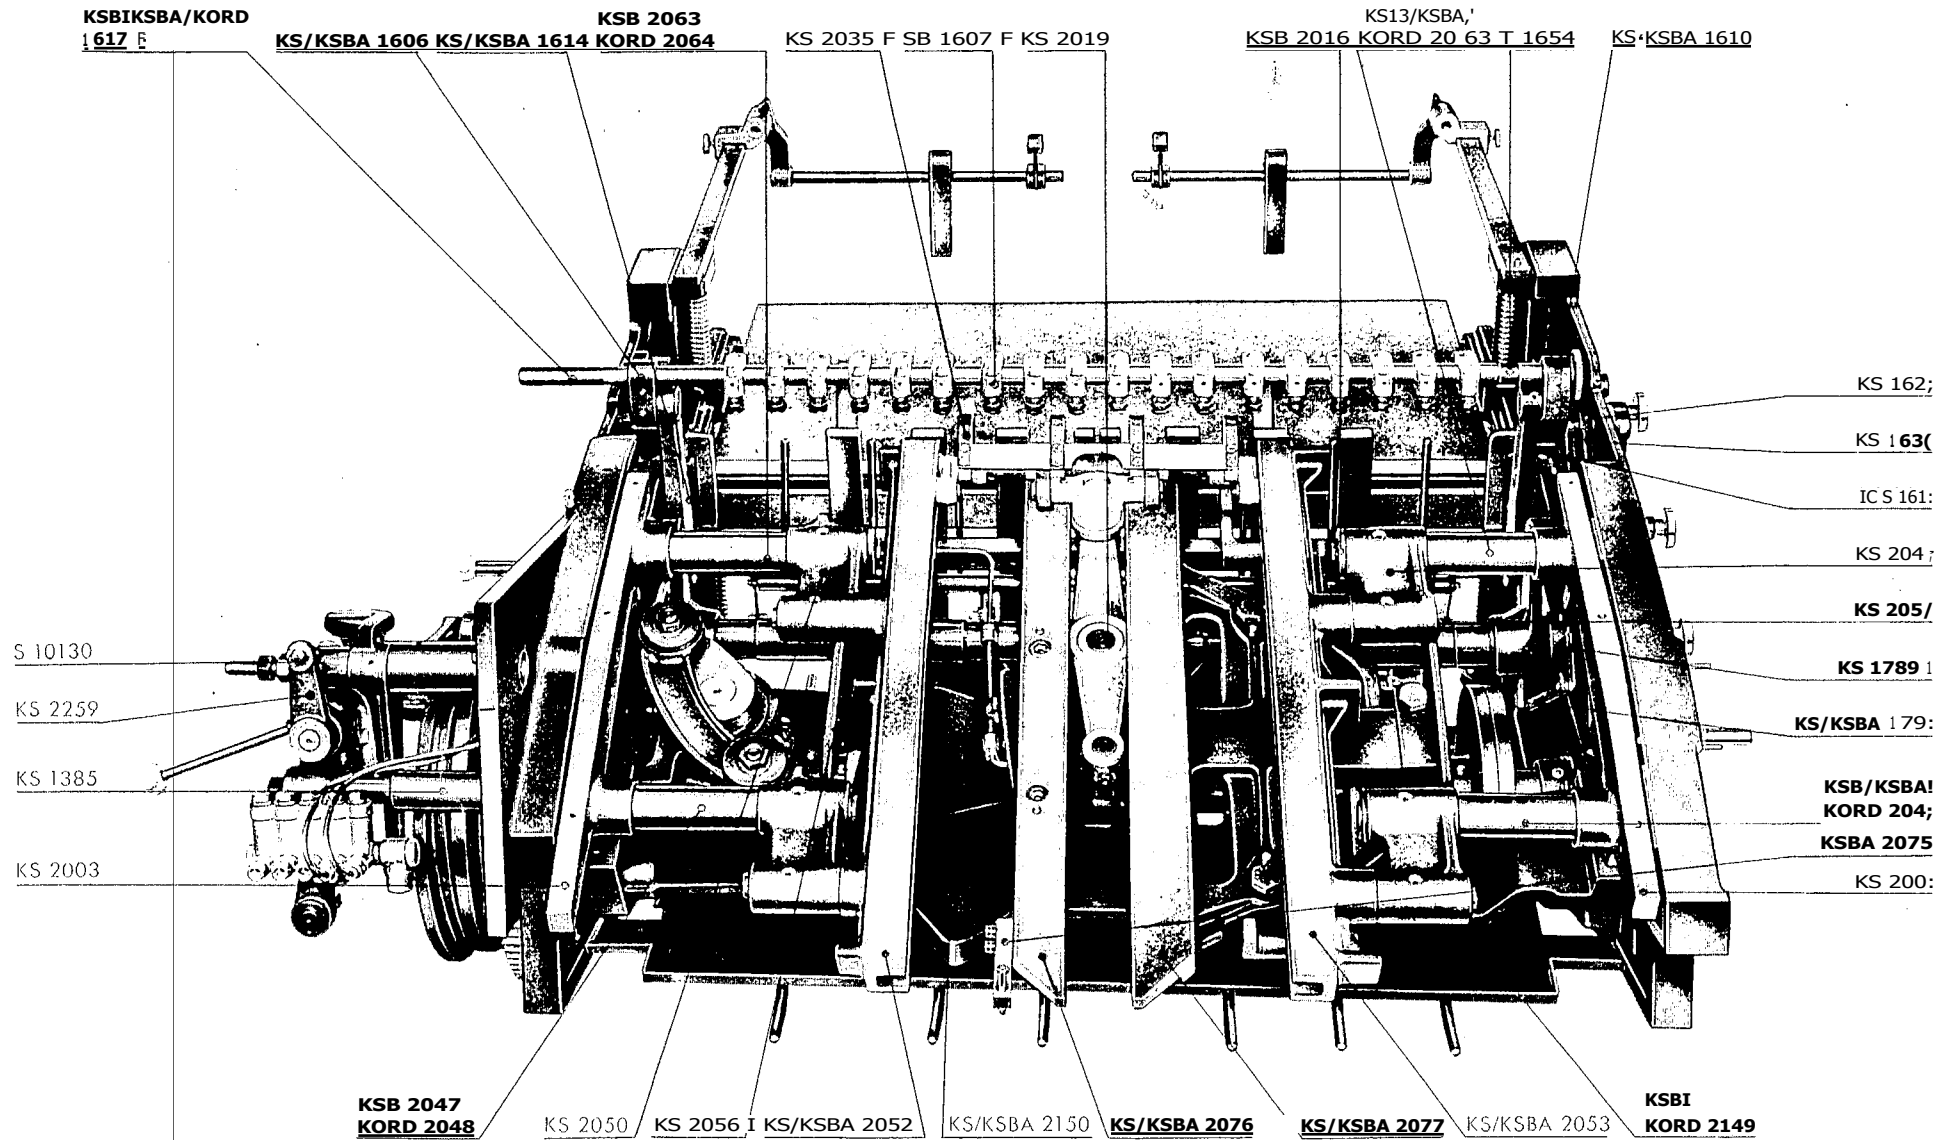


For KORS check list below. If part is not listed, then refer to general listing.

KORS Parts		Illustration shown as
KORS 1607 F	Sucker with: QRS 1672 molded rubber sucker, shallow balance same as SB 1607 F	SB 1607 F
KORS 1614	Sucker bar lever with: same as KSBA 1614	KS/KSBA 1614
KORS 1617 F	Sucker bar	f KSB/KSBA/ KORD 1617 F
KORS 2002	Feed board bracket, O.S.	KS 2002
KORS 2003	Feed board bracket, D.S.	KS 2003
KORS 2016	Washer	KSB 2016
KORS 2050	Angle ever with: HK 2016 needle bearing	KS 2050
KORS 2051	Angle lever shaft	KSB 2047/KORD 2048
KORS 2052	Guide rail, D.S.	KS/KSBA 2052
KORS 2053	Guide rail O.S.	KS/KSBA 2053
KORS 2056	Connecting link with: same as KS 2056	KS 2056
KORS 2058	Guide rail lever stud, O S D.S.: KORS 2054	KS 2054
KORS 2064	Angle lever shaft	KSB 2063/KORD 2064
KORS 2076	Guide rail with: KSB 2075 support bracket KSB 2079 support bolt	KS/KSBA 2076
KORS 2077	Cross guide rail with: KSB 2078 support bracket KSB•2079 support bolt	KS/KSBA 2077
KORS 2149	Oil dri pan	KSB/KORD 2149

D5

KS 2009 KS 1641 KS 1662 KS 1715 KS 1790 F KS 2078 KS/KSBA 1617 KS/KSBA 2021 KORD1638 KS 2060 KS 1714 KS/KSBA/KORD1650 F

KS 16
I AZ?

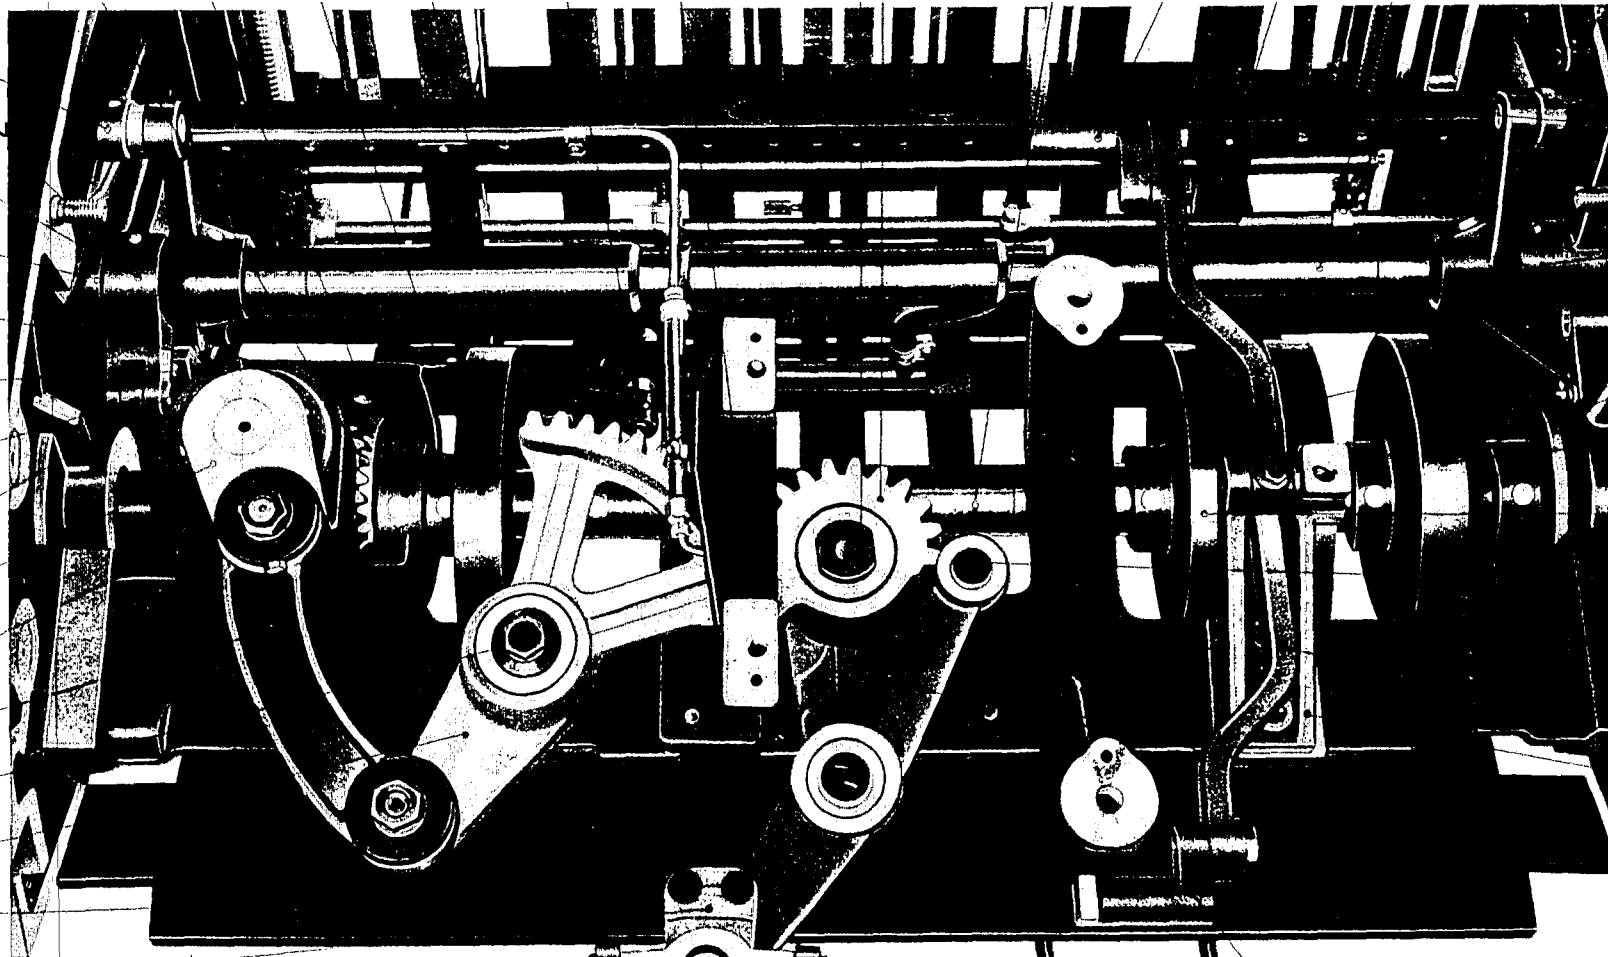

KS/KSBA 1609

KS 2062

KS/KSBA 1620

KS/KSBA 1619

KS 1634

CT 0109

KS 1633

KS 1632

KS 2010 F

KS/KSBA 2024

KS/KSBA 2020

KS 2025

KS/KSBA 2013 F

KS 2042

KS 2041

KS 2040

KS 2038

S 10151

KS 2033

KS 2039 F

KS 2030

KS 2034

KS 2032

KS 2037 ICS 2048

ICS 2046

T 1311

OR 2145

KS 2061

KS/KSBA 16
1 1/2 T

KS/KSBA 16
1/4 it

KS 16
16 tsg

KSB 16

KS 16

KS 16
1/2 ef

KS 227

KS/KSBA
KORD 2025

KS/KSBA 2057

KS/KSBA 207

KS/KSBA 2025

GT	0109	Compression spring	
S	10151	Roller with: S 10152 roller stud K 12/10 needle bearing (new number: K 12x15x10) KS 2044 spacer ring	
	131	Roller with: 11680 roller stud	
KS	160	Connecting link With: HK 1412 needle bearing	KOR
KSBA	160	Connecting link with: HK 1412 needle bearing	KORA/KORD
KS	161	Lever with: KS 1622 bearing stud	KOR
KSBA	1611	Lever with: KSBA 1626 bearing stud	KORA/KORD
KS	1619	Cam lever with: KS 1111 roller KS 1113 roller stud	KOR
KSBA	1619	Cam lever with: KS 1111 roller KSBA 1613 roller stud	KORA/KORD
KS	1620	Angle lever with: KS 1622 bearing stud	KOR
KSBA	1620	Angle lever with: KSBA 1626 bearing stud	KORA/KORD
KS	1628	Bearing stud	KOR
KSBA	1628	Bearing stud	KORA/KORD/KORS
KS	1629	Stud	
KS	1632	Link pin	
KS	1633	Spring rod with: HK 1210 needle bearing	
KS	1634	Spring rod support	
KSB	1638	Cam shaft with: 6206 ball bearing, O.S. KS 1639 flanged bearing housing with 2207 self aligning ball bearing, D.S. NU 1009 roller bearing for 45 Ø shaft	KOR/KORA/KORD 62
KORD	1638	Cam shaft with: 6206 ball bearing, DS. KS 1639 flanged bearing housing with ' NU 1009 roller bearing, D.S.	KORD 64
KS	1641	Bevel gear	

KSB	1650 F	Lever shaft, outer with: HK 2520 needle bearing KS 1628 bearing stud S 10151 roller S 10152 roller stud KS 1621 lever shaft, inner	KOR
KSBA	1650 F	Lever shaft, outer with: I-1K 2520 needle bearing KS 1628 bearing stud KSBA 1622 shouldered stud S 10151 roller S 10152 roller stud KSB 1621 lever shaft, inner	KORA/KORD 62
KORD	1650 F	Lever shaft, outer with: HK 2520 needle bearing KS 1628 bearing stud KSBA 1622 shouldered stud S 10151 roller 10152 roller stud KORD 1621 lever shaft, inner	KORD 64
KS	1662	Feed board gripper raising and lowering cam, D.S.	
KS	1663	Feed board gripper raising and lowering cam, O.S.	
KS	1664	Feed board gripper opening and closing cam	
KS	1665	Feed table height control cam	
KSB	1666	Sucker bar movement cam	
KS	1714	Air blower guide plate	
KS	1715	Spacer and support bearing	
KS	1790 F	Air valve lever with: KS 1793 connecting link	
KSB	2006	Support bracket	KOR
KSBA	2006	Support bracket	KORA/KORD 62
KORD	2006	Support bracket	KORD 64
KS	2009	Bevel gear with: KS 2007 spacer ring 6006 ball bearing 6006 AV oil seal	
KS	2010 F	Crank lever with: KS 2015 bearing stud	
KS	2013 F	Segment gear with: KS 2012 bearing pivot stud KORS 2012 bearing stud KS 2008 spacer ring 6005 ball bearing 6005 AV oil seal	KOR/KORS KOR/KORA/KORD


KSBA	2013 F	Segment gear with: same as KS 2013 F	KORA/KORD
KS	2017	Bearing pivot stud	KOR
KSBA	2017	Bearing pivot stud	KORA/KORD
KS	2020	Connecting link with: 6202 ball bearing	KOR/KORS
KSBA	2020	Connecting link with: 6202 ball bearing	KORA/KORD
KS	2021	Segment gear with: KS 2018 control lever bearing stud KS 2019 washer KS 2008 spacer ring 6005 ball bearing 6005 AV oil seal	KOR
KSBA	2021	Segment gear with: same as KS 2021	 KORA/KORD
KS	2024	Colter washer	KOR
KSBA	2024	Coter washer	KORA/KORD/KORS
KS	2025	Washer	
KS	2027	Bering stud with: 6201 ball bearing 6201 AV oil senal	
KS	2028	,Co trol lever with: KS 2026 bearing stud 16004 ball bearing KS 2014 spacer ring 6003 ball bearing 6003 AV oil seal	KOR
KSBA	2028	Co itrol lever with: same as KS 2028	KORA/KORD
KS	2030	Gripper bar.	
KS	2032	To sion spring	
KS	2033	Ro er support link	
KS	2034	Co necting link wit h: K 10/10 needle bearing (new number: K 10x13x10)	
KS	2037	Torsion spring	
KS	2038	Gripper bar shaft	
KS	2039.F	Gripper foot	
KS	2040	Shouldered stud	
KS	2041	Bearing support housing wit : NKIB 5902 needle bearing 25x12.2x0.9 disc spring	

KS	2042	Roller stud with: KS 2043 roller K 10/10 needle bearing (new number: K 10x13x10)	
KS	2046	Tension lever	
KS	2048	Oil felt	
KS	2057	Lever bracket with: HK 1210 needle bearing KS 2058 bearing pin	KOR
KSBA	2057	Lever bracket with: same ae-KS 2057	KORA/KORD
KS	-2059	Double lever	KOR
KSBA	2059	Double lever	KORA/KORD
KS	2060	Opening cam, upper	
KS	2061	Opening cam, lower	
	2062	Fitted bolt	
KS	2078	Support bracket	
KOR	2145	Sheet guard	

For KORS check list below. If part is not listed, then refer to general listing.


KORS Parts		Illustration shown as
KORS	1609	Connecting link with: HK 1412 needle bearing
KORS	1611	Lever with: KSBA 1626 bearing stud
KORS	1619	Cam lever with: same as KSBA 1619
KORS	1620	Angle lever with: KSBA 1626 bearing stud
KORS	1638	Cam shaft with: same as KORD 1638
KORS	1641	Tapered pin
KORS	1650 F	Lever shaft, outer with: KORS 1621 lever shaft, inner balance same as KORD 1650 F
KORS	1663	Feed board gripper raising and lowering cam
KORS	1666	Sucker bar movement cam
KORS	2006	Support bracket
KORS	2017	Bearing pivot stud
KORS	2021	Segment gear with: same as KS 2021
KORS	2025	Washer
KORS	2028	Control lever with: same as KS 2028
KORS	2057	Lever bracket with: same as KS 2057
KORS	2059	Double lever
KORS	2145	Sheet guard

D6

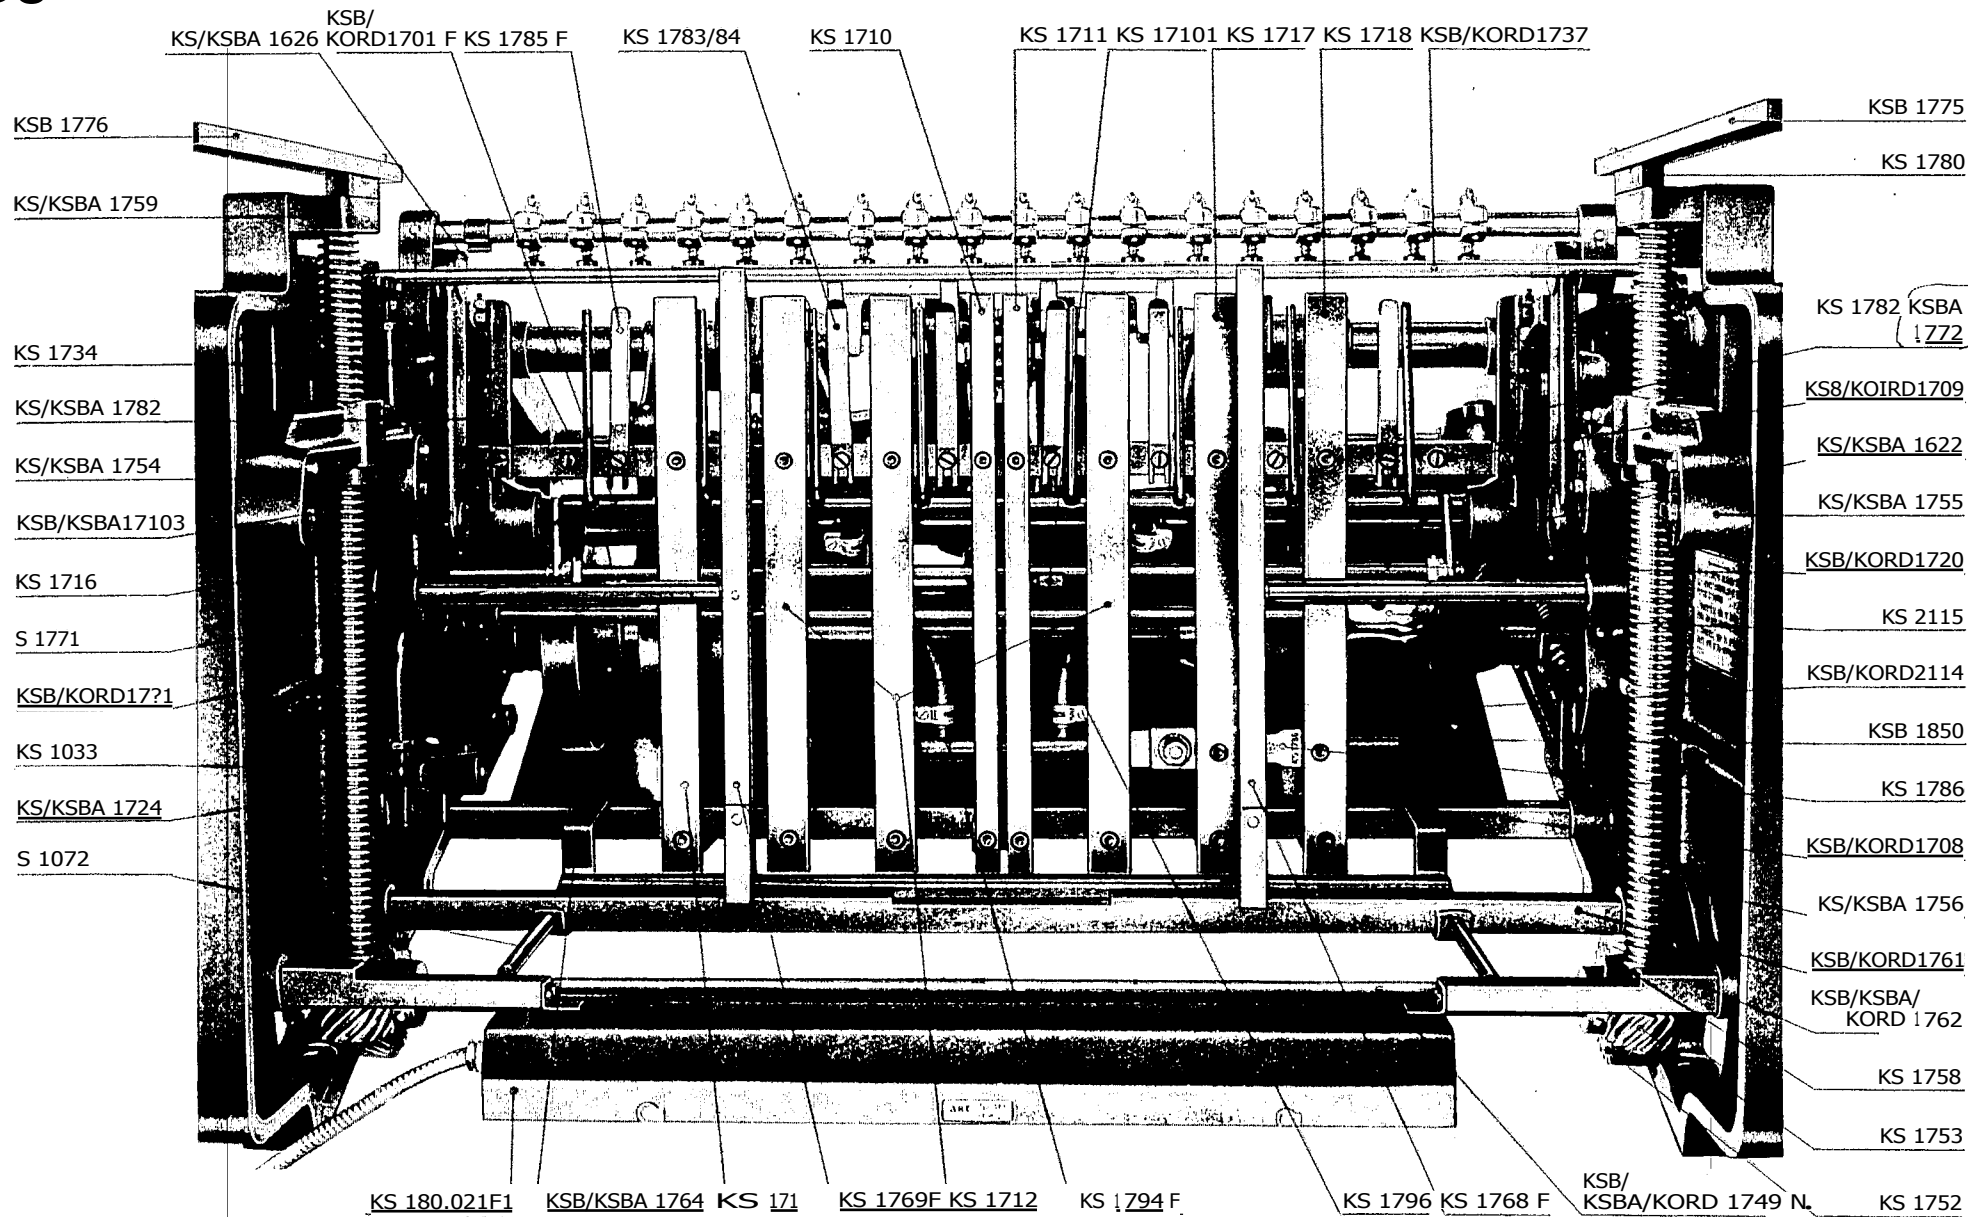

KS	1033	Washer	KORA/KORD/KORS	KSB	1749	Feed table drive shaft with: HK 2016 needle bearing	KOR
	1072	Safety rod		KSBA	1749	Feed table drive shaft with: HK 2016 needle bearing KSBA 17102 washer	KORA/KORD 62
KS	1622	Lever bearing stud	KOR	KORD	1749	Feed table drive shaft with: same as KSBA 1749	KORD 64
KSBA	1622	Lever bearing stud	KORA/KORD/KORS	KS	1752	Worm gear, large	
KS	1626	Lever bearing stud	KOR	KS	1753	Worm gear, small	
KSBA	1626	Lever bearing stud	KORA/KORD/KORS	KS	1754	Feed table bracket, O S with: KS 100.025 threaded bushing	KOR
KSB	1701 F	Blower bar with: tube for air blast regulation KSB 1707	KOR/KORA/KORD 62	KSBA	1754	Feed table bracket, O S with: KSBA 1757 threaded bushing	KORA/KORD
KORD	1701 F	Blower bar with: same as KSB 1701 F	KORD 64	KS	1755	Feed table bracket, D S with: KS 100.025 threaded bushing	KOR
)(SS	1708	Cross bar	KOR/KORA/KORD 62	KSBA	1755	Feed table bracket, D.S. with: KSBA 1757 threaded bushing	KORA/KORD
KORD	1708	Cross bar	KORD 64	KS	1756	Threaded elevator shaft	KOR
KSB	1709	Cross bar	KOR/KORA/KORD 62	KSBA	1756	Threaded elevator shaft	KORA/KORD
KORD	1709	Cross bar	KORD 64	KS	1758	Shaft bearing housing, lower with: HK 1512 needle bearing 51102 thrust bearing	
KS	1710	Front sheet standard, O.S. with: KSBA 1706 spacer	KORA/KORD	KS	1759	Shaft bearing housing, upper with: HK 1512 needle bearing	KOR
KS	1711	Front sheet standard, D.S. with: KSBA 1706 spacer	KORA/KORD	KSBA	1759	Shaft bearing housing, upper with: HK 1512 needle bearing	KORA/KORD/KORS
KS	1712	Front sheet standard with: KSBA 1706 spacer	KORA/KORD	KSB	1761	Cross bar	KOR/KORA/KORD 62
KS	1713	Front sheet standard with: KSBA 1706 spacer	KORA/KORD	KORD	1761	Cross bar	KORD 64
KS	1716	Connecting link		KSB	1762	Support bar	KOR
KS	1717	Front sheet standard with: KSBA 1706 spacer	KORA/KORD	KSBA	1762	Support bar	KORA/KORD 62
KS	1718	Front sheet standard with: KSBA 1706 spacer	KORA/KORD	KORD	1762	Support bar	KORD 64
KSB	1720	Blower height control rod	KOR/KORA/KORD 62	KSB	1764	Safety guard	KOR
KORD	1720	Blower height control rod	KORD 64	KSBA	1764	Safety guard	KORA/KORD
KS ,	1724	Feed table height control lever with: T 0682 bearing stud 6000 ball bearing	KOR	KS	1768 F	Side sheet standard, D.S.	KOR/KORA/KORD
KSBA	1724	Feed table height control lever with: 1 0682 bearing stud 6000 ball bearing	KORA/KORD	KS	1769 F	Side sheet standard, O.S.	KOR/KORA/KORD
KS	1734	Connecting link with: 1 0248 shouldered screw KSBA 1719 threaded stud T 1616 connecting piece	KOR KORA/KORD		1771	Control rod lever with: S 1772 stud	
KSB	1737	Feed table height control bar with: KS 1669 F snap-on sheet smoother S 16112 rubber sleeve	KOR/KORA/KORD 62		1712	Separator spring holder, D.S. with: T 1232/33/34 separator springs	KORA/KORD/KORS
KORD	1737	Feed table height control bar with: same as KSB 1737	KORD 64	KSB	1775	Sheet steadier support bar, D.S.	
				KSB	1776	Sheet steadier support bar, O.S.	

D 6 continued

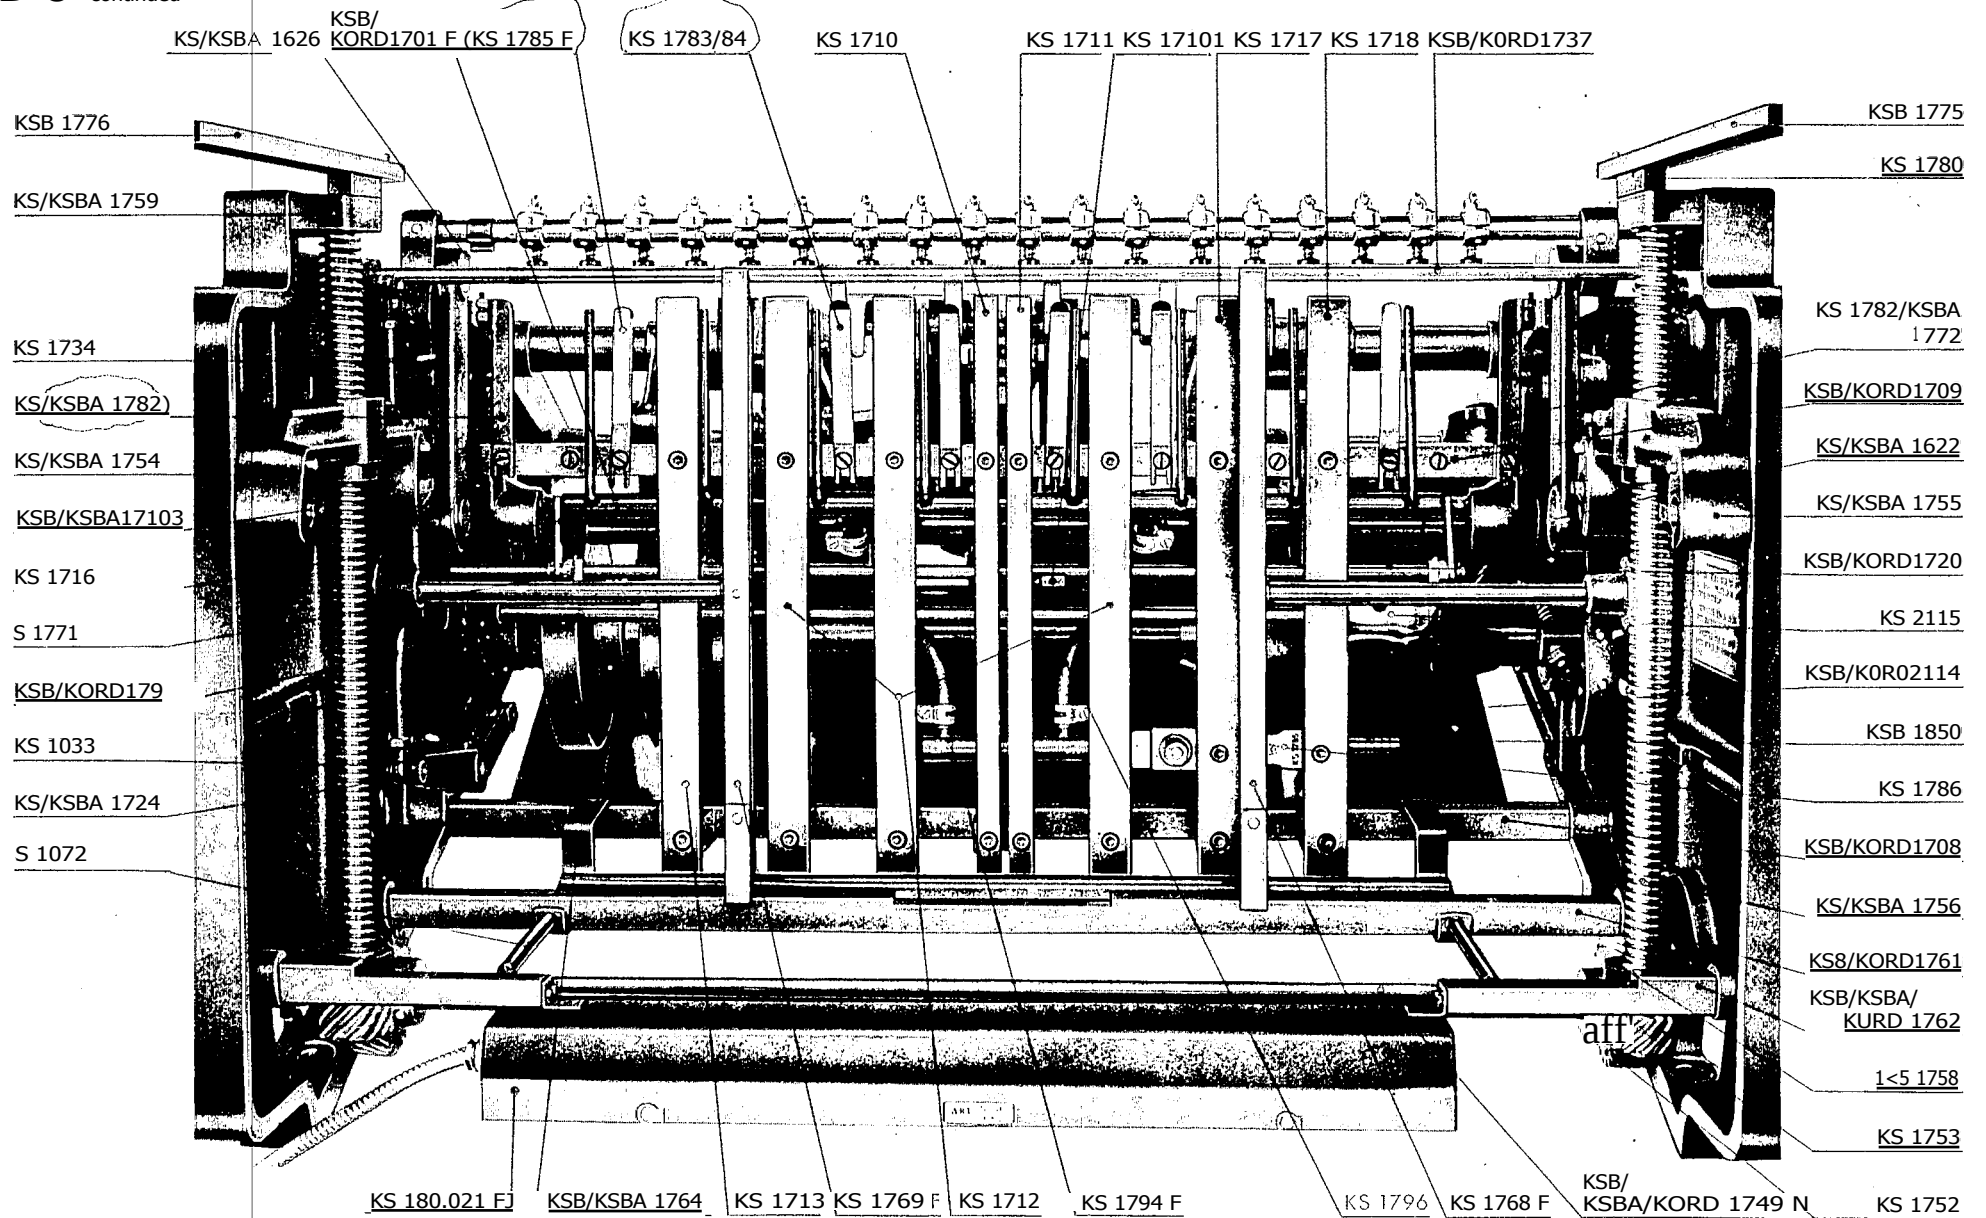


KS	1780	Spacer block	
KS	1782	Separator spring holder with: T 1232/33/34 separator springs	KOR
KSBA	1782	Separator spring holder, 0.S. with: T1232/33/34 separator springs	KORA/KORD/KORS
KS	1783	Sheet separator sprig. 	
KS	1784	Sheet separator spring 90°	
KS	1784 f	Thin.ppperseparator spring	
KS	1786	Blower control valve housing with: KS 1787 valve	
KSB	1791	Blower valve control rod	KQR/RORA/KORD 62
KORD	1791	Blower valve control rod	KORD 64
KS	1794 F	Connecting tube with: S 14124 nut	
KS	1796	Air hose	
KS	17101	Knurled screw	
KSB	17103	Feed table latch with: KSB 17104 compression spring KSB 17105 retaining ring	KOR
KSBA	17103	Feed table latch with: KSB 17104 compression spring KSBA 17105 retaining ring	KORA/KORD/KORS
KSB	1850	Hose nipple	
KSB	2114	Oil drip pan	KOR/KORA/KORD 62
KORD	2114	Oil drip pan	KORD 64
KS	2115	Bevel gear oil splash guard	
KS	180.021 F	Fluorescent lamp fixture with: KS 180.015, 14 Watt lamp tube	

For KORS check list below. If part is not listed, then refer to general listing.


KORS Parts			Illustration shown as
KORS	1701 F	Blower bar with: same as KSB 1701 F	KSB/KORD 1701 F
KORS	1708	Cross bar	KSB/KORD 1708
KORS	1709	Cross bar	KSB/KORD 1709
KORS	1720	Blower height control rod	KSB/KORD 1720
KORS	1724	Feed table height control lever with: same as KS 1724	KS/KSBA 1724
KORS	1734	Connecting link with: T 1616 connecting piece KSBA 1719 threaded stud	KS 1734
KORS	1737	Feed table height control bar with: same as KSB 1737	KSB/KORD 1737
KORS	1749	Feed table drive shaft with: same as KSBA 1749	KSB/KSBA/KORD 1749
KORS	1761	Cross bar	KSB/KORD 1761
KORS	1762	Support bar	KSB/KSBA/KORD 1762
KORS	1764	Safety guard	KSB/KSBA 1764
KORS	1768 F	Side sheet standard, D.S.	KS 1768 F
KORS	1769 F	Side sheet standard, 0.S.	KS 1769 F
KORS	1776	Sheet steadier support bar	KSB 1775/1776
KORS	1791	Blower valve control rod	KSB/KORD 1791
KORS	2114	Oil drip pan	KSB/KORD 2114
KORS	2115	Bevel gear oil splash guard	KS 2115
KORS	180.021 F	Fluorescent lamp fixture with: S 180.015, 20 Watt lamp tube	KS 180.021 F

D7

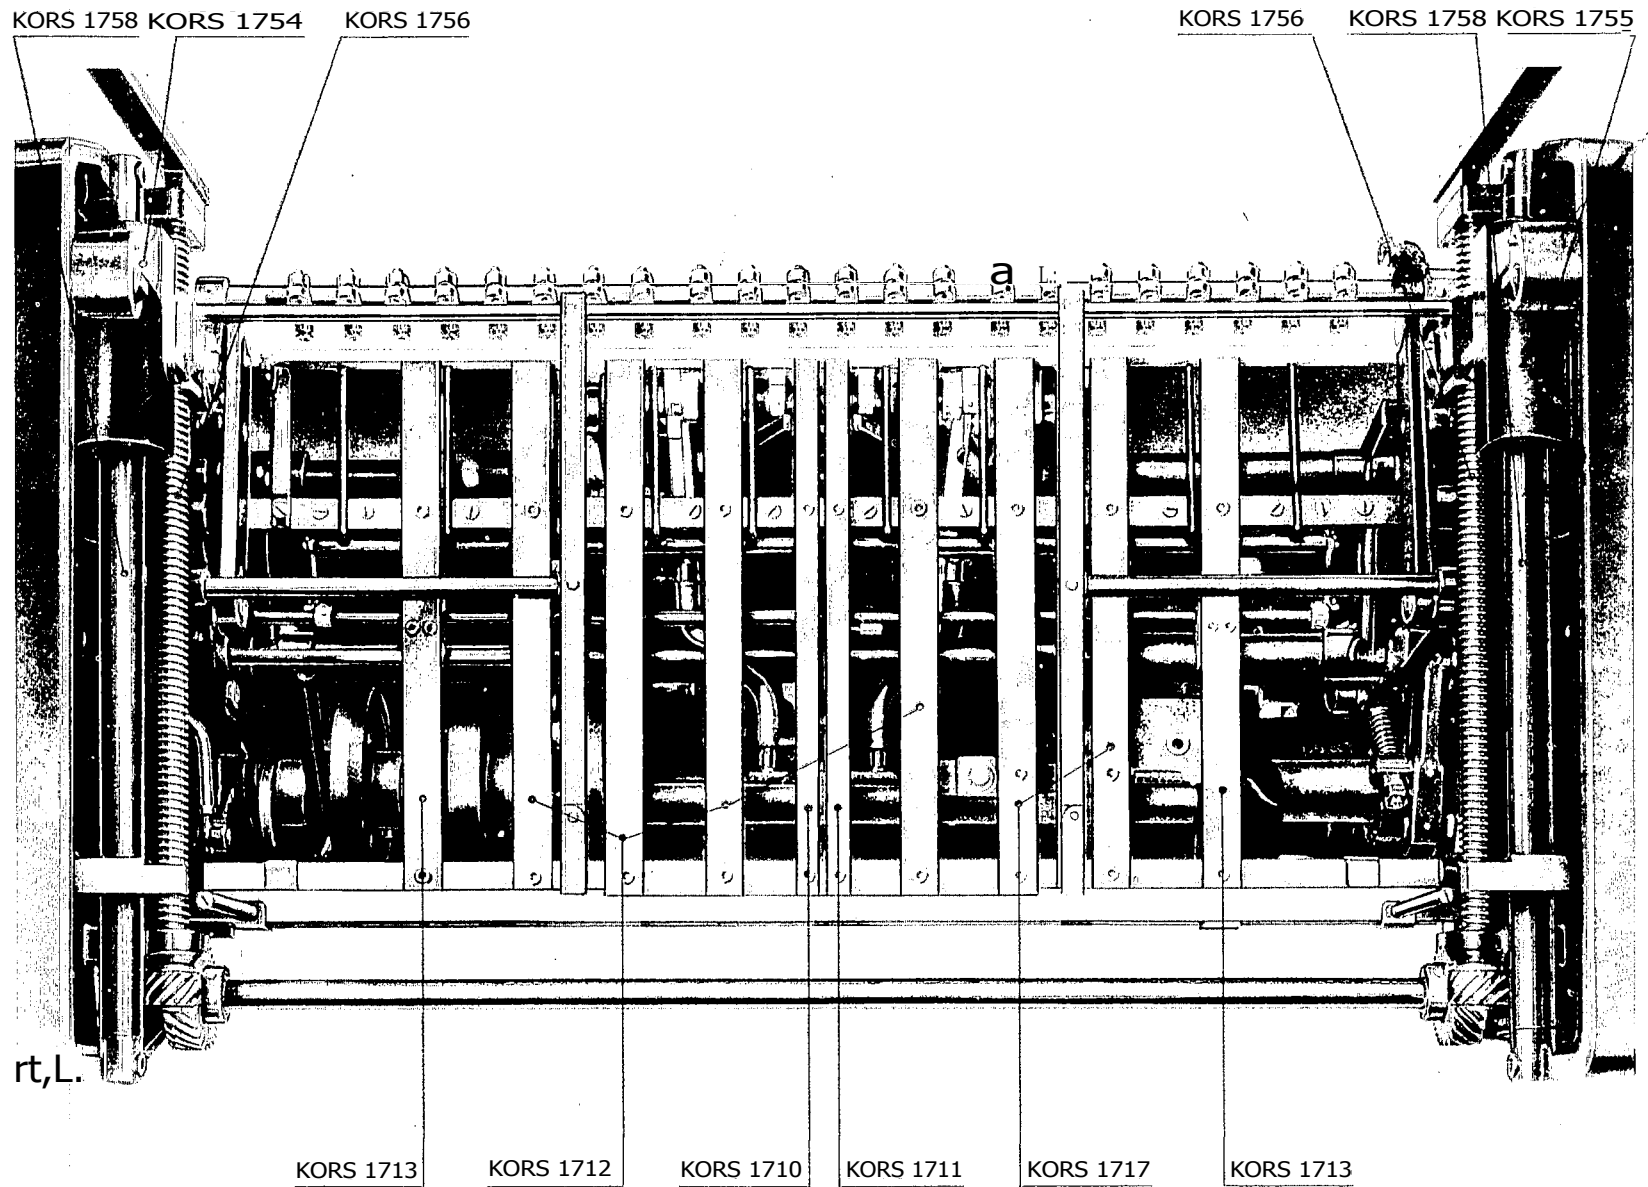

KORS	1710	Front sheet standard, O.S.
KORS	1711	Front sheet standard, D.S.
KORS	1712	Front sheet standards
KORS	1713	Front sheet standards
KORS	1717	Front sheet standards
KORS	1754	Feed table bracket, O.S. with: KORS 1757 threaded bushing KH 2540 ball bearing
KORS	1755	Feed table bracket, D.S. with: same as KORS 1754
KORS	1756	Threaded elevator shaft
KORS	1758	-Guide shaft


El

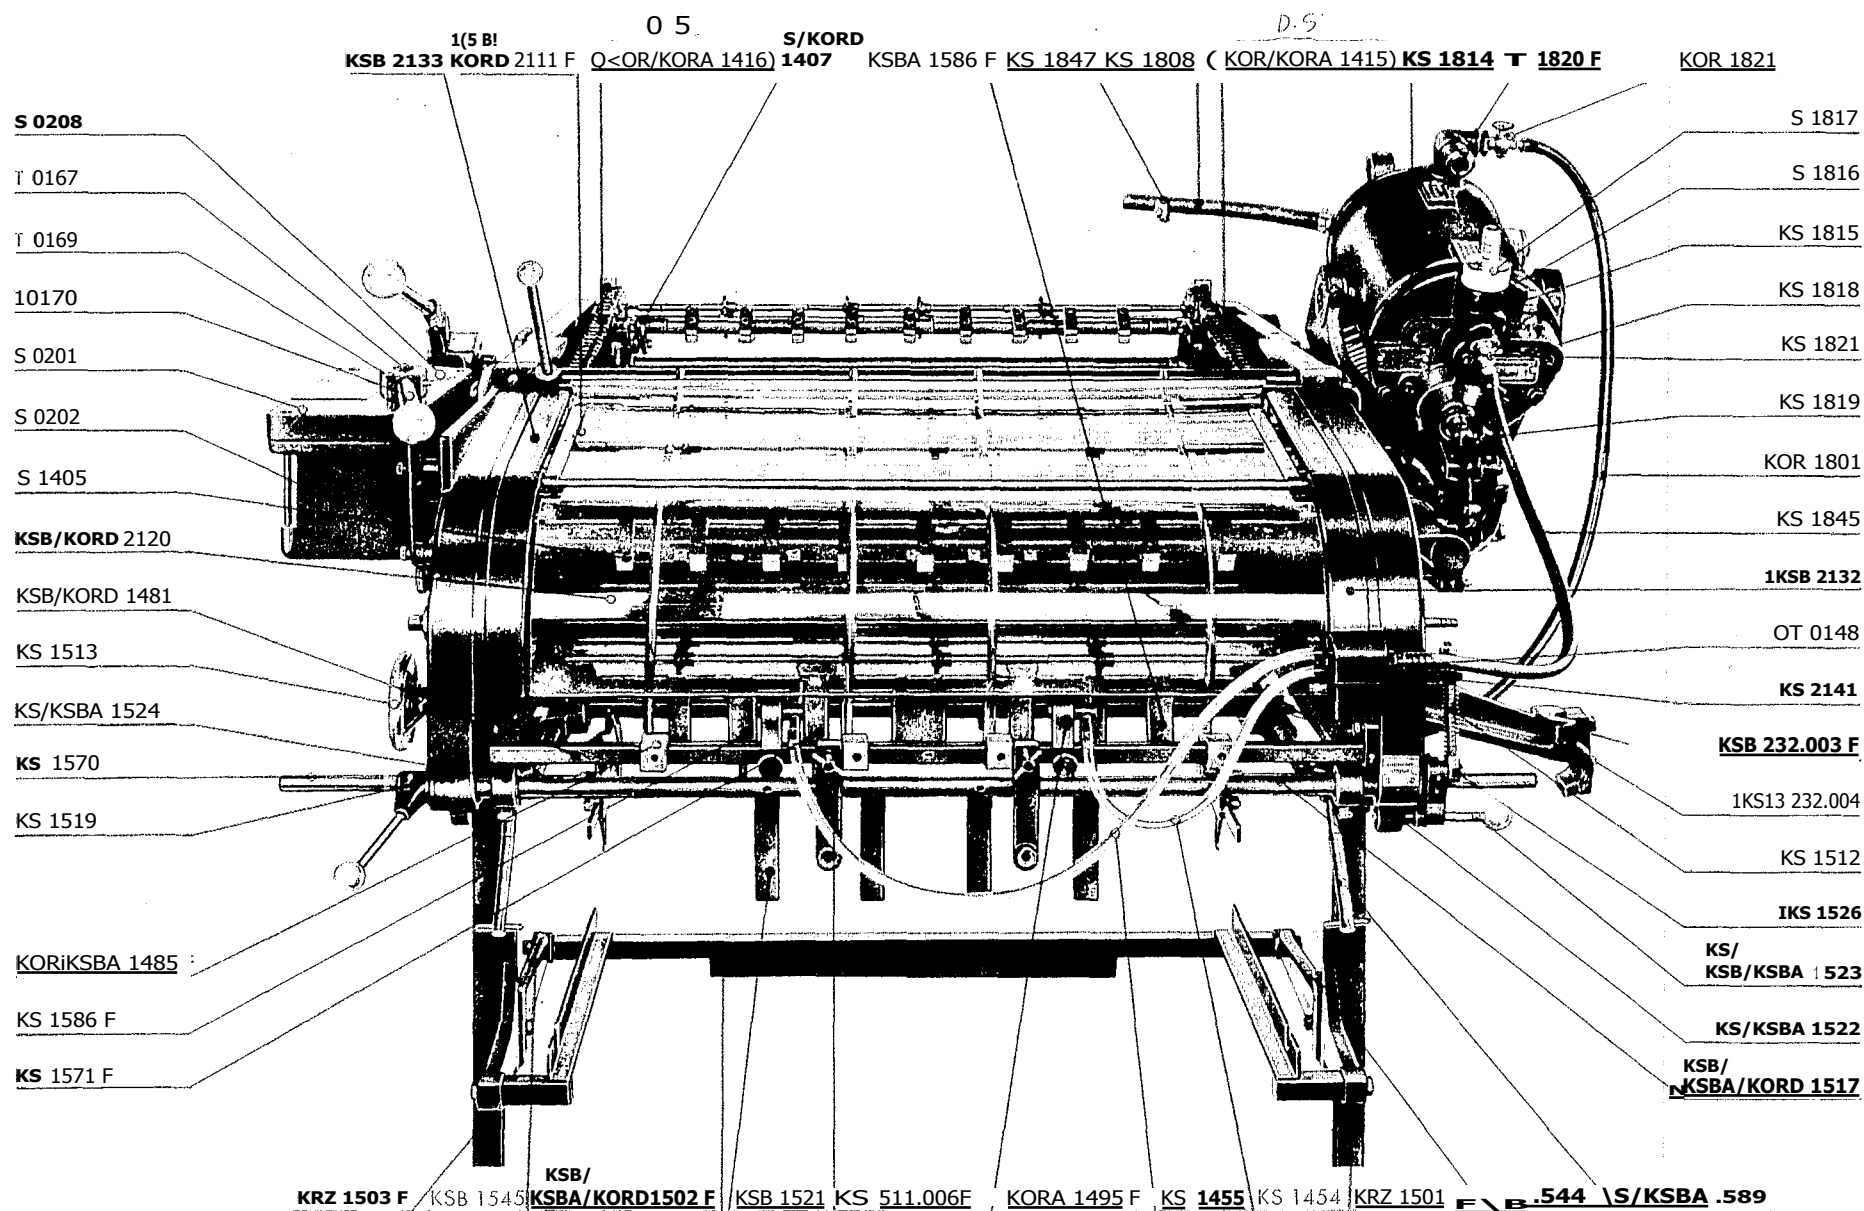

GT	0148	Hose nipple new no: KSB 1850	
	0167	Shaft with: S 0206 segment gear	
•	0169	Lever holder	
•	017	Operating lever with: F 32 ball handle, DIN 319, RED	
•	0201	Oil pump body with: S 0203 pump piston S 0204 F valve body S 0205 gasket P-10.16 filter	
•	0202	Oil reservoir with: P-50.11 sight glass	
•	0208	Cover with: T 0158 cover chain	
•	1405	Gripper holder	
•	1407	Gripper opening lever with: T 1310 roller stud GT 2027 roller	KOR/KORA/KORD 62/ I. KORS
KORD	1407	Gripper opening lever with: same as S 1407	KORD 64
KOR	1 15	Roller, chain, D. S.	KOR
KORA	1415	Roller chain, D. S.	KORA/KORD
KOR	116	Roller chain, 0. S.	KOR
KOR	1416	Roller chain, 0. S.	KORA/KORD
KS	1 54	Vacuum hose (short) Th	
KS	1455	Vacuum hose (long)	
KSB	1181	Sheet guide support bar	KOR/KORA/KORD 62
KORD	1 81	Sheet guide support bar	KORD 64
KOR	1 85 F	Sheet guide with: S 1262 compression spring	KOR/KORA*/KORD 64
KSBA	1 85 F	Sheet guide with: S 1262 compression spring	KORA/KORD 62
KORA	1195 F	Vacuum sheet brake	KORA/KORD 62
KRZ	1,01 F	Guide rail, D. S.	
KSB	1502 F	Delivery truck support bar with: KSB 1503 angle trip foot	KOR
KSBA	1502 F	Delivery truck support bar with: KSB 1503 angle trip foot	KORA/KORD 62

KORD	1502 F	Delivery truck support bar with: KSB 1503 angle trip foot	KORD 64
KRZ	1503 F	Guide rail, 0. S.	
KS	1512	Compression spring	
KS	1513	Hand wheel	
KSB	1517	Jogger shaft with: HK 1512 needle bearing	KOR/KORA*
KSBA	1517	Jogger shaft with: HK 1512 needle bearing	KORA/KORD 62
KORD	1517	Jogger shaft with: HK 1512 needle bearing	KORD 64
KS	1519	Jogger opening lever	
KSB	1521	Jogger finger	
KS	1522	Jogger shaft lever with: KS 1514 roller stud KS 1515 roller K 9/19 needle bearing (new number: K 9x12x10)	KOR/KORA*/KORD 64/ KORS
KSBA	1522	Jogger shaft lever with: same as KS 1522	KORA/KORD 62
KS	1523	Jogger control handle with: 11222 spring plunger T1215 spring	KOR
KSB	1523	Jogger control handle with: same as KS 1523	KORA*/KORD 64/KORS
KSBA	1523	Jogger control handle with: same as KS 1523	KORA/KORD 62
KS	1524	Jogger operating lever with: T 1310 roller stud T 0261 roller	KOR/KORA*/KORD 64
KSBA	1524	Jogger operating lever with: same as KS 1524	KORA/KORD 62
KS	1526	Spring rod	
KSB	1544	Delivery truck support bracket, D. S. with: KSB 1514 eccentric stud 6201 ball bearing KS 1629 roller stud KS 2043 roller K 10/10 needle bearing (new number: K 10x13x10)	' up to machine J No. 320983 from machine 1 No. 320984
KSB	1545	Delivery truck support bracket, 0.S. with: same as KSB 1544	
KS	1570	Side jogger rod	
KS	1571 F	Front sheet stop with upper & lower finger	KOR/KORA/KORD 62

/e)99,,co
alle#

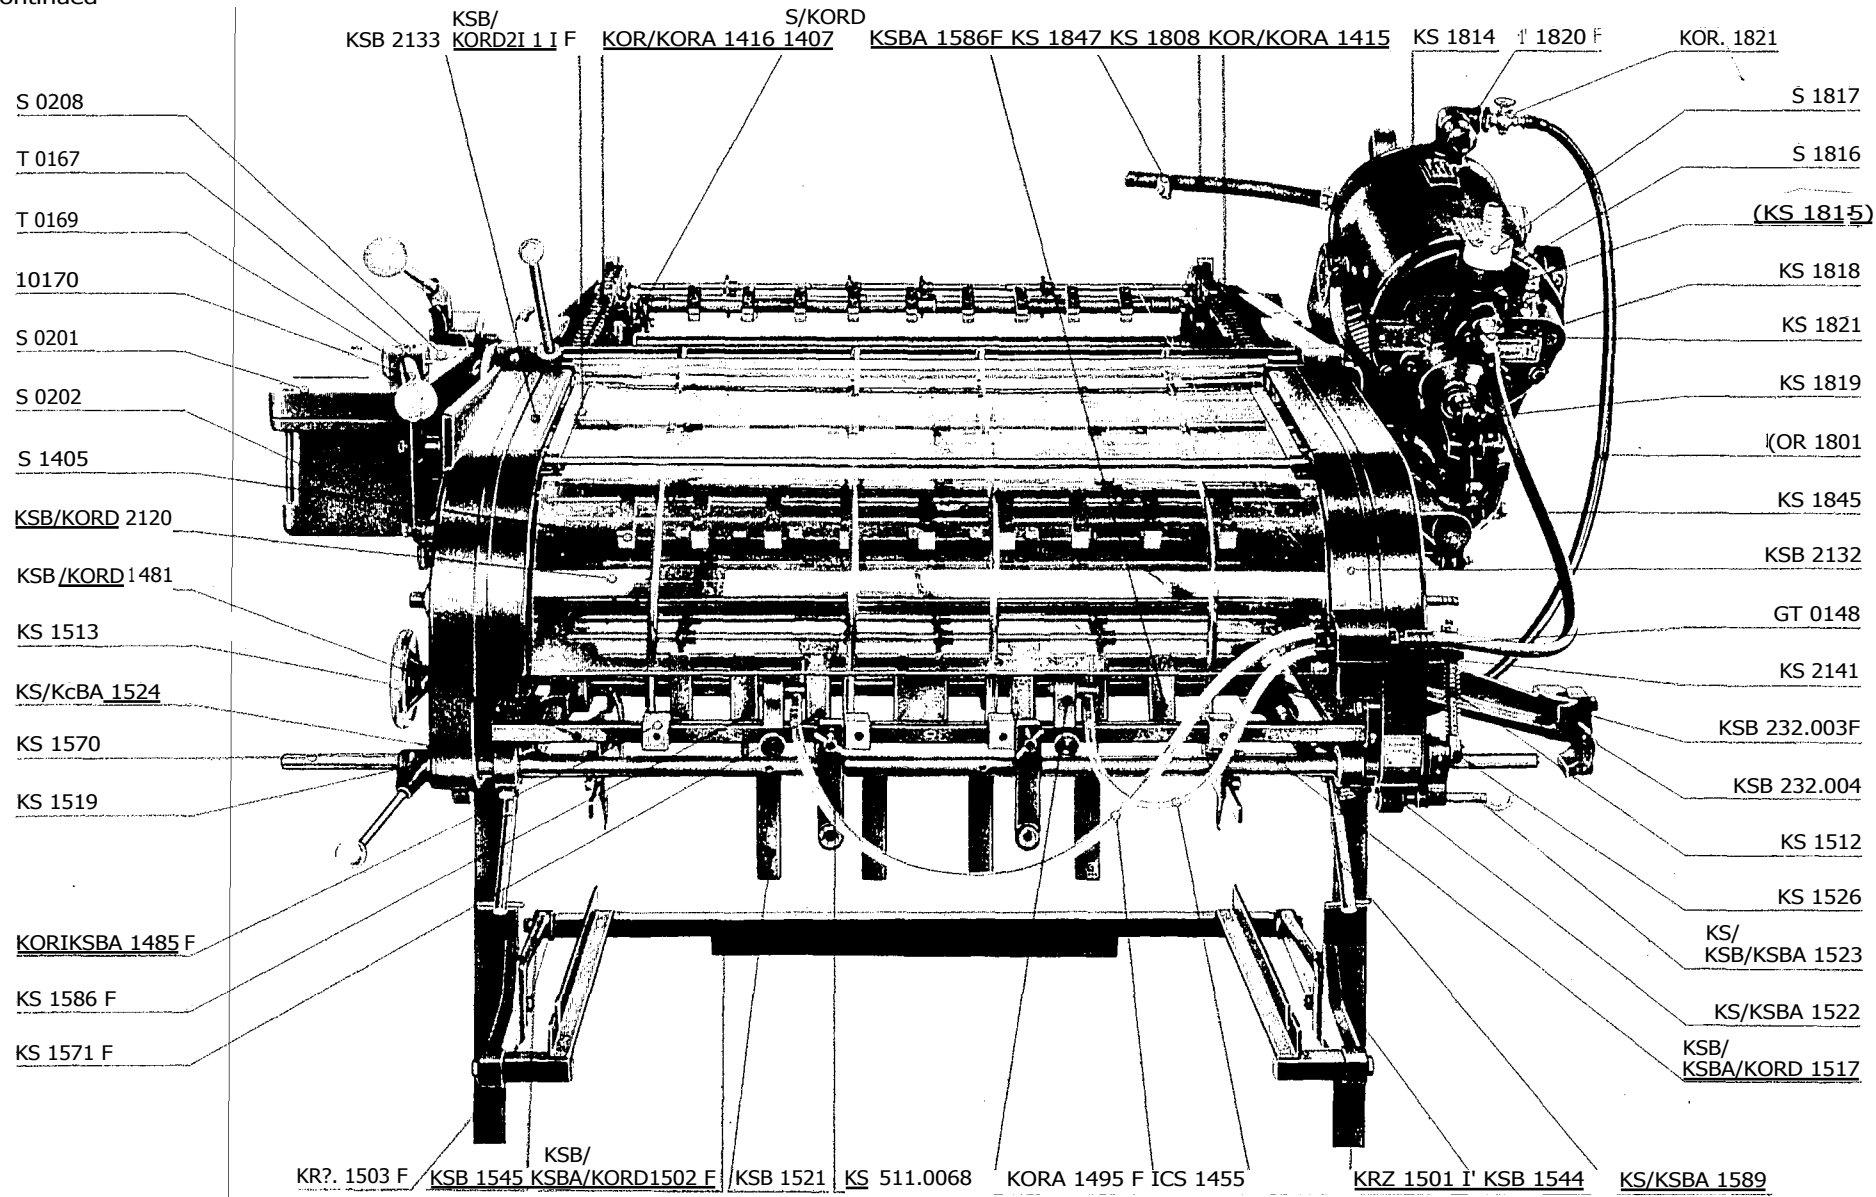

KS	1586 F	Front sheet stop with lower finger	KOR/KORA/KORD 62
KSBA	1586 F	Front sheet stop without finger	KOR/KORD 62
KS	1589	Thumb screw	KOR
KSBA	1589	Thumb screw	KORA/KORD/KORS
KOR	1801	Air hose-800 mm	
KS	1808	Air hose-250 mm	
KS	1814	Rear pump cover with: T 1812 air valve spring T1817 air valve spring plate	
KS	1815	Piston lubrication hole plug	
•	1816	Hose nipple coupling	
•	1817	Hose nipple with: T 0183 filter screen	
KS	1818	Valve housing with: KS 1817 bushing	
KS	1819	Valve stem with: KS 1825 valve disc KS 1816 compression spring	
•	1820 F	Relief valve	
KOR	1821	Air cock R 1/4" with: KS 1820 packing washer	
KS	1821	Air cock R 1/4" with: KS 1820 packing washer	
KS	1845	Vacuum hose-500 mm	
KS	1847	Hose clamp	
KSB	2111 F	Delivery guard, upper ; with: KS 14112 trip cam	KOR, KORA/KORD 62
KORD	2111 F	Delivery guard, urlier with: KS 14112 trip cam	KORD 64
KSB	2120	Delivery guard, lower with: KSB 2119 mounting stud	KOR/KORA/KORD 62
KORD	2120	Delivery guard, lower with: KSB 2119 mounting stud	KORD 64
KSB	2132	Chain guard, D. S.	
KSB	2133	Chain guard, O.S.	
KS	2141	Hose nipple	
KSB	232.003 F	Powder spray bracket	
KSB	232.004	Clamping piece	
KS	511.006 F	Continuous delivery device bracket	

For KORS check list below. If part is not listed, then refer to general listing.

KORS Parts			Illustration shown as
KORS	1415	Roller chain, D. S.	KOR/KORA 1415
KORS	1416	Roller chain, O. S.	KOR/KORA 1416
KORS	1481	Sheet guide support bar	KSB/KORD 1481
KORS	1485 F	Sheet guide with: S 1262 compression spring	KOR/KSBA 1485 F
KORS	1502 F	Delivery table support bar With: KSB 1503 angle piece	KSB/KSBA/ 1. KORD 1502 F
KORS	1517	Jogger shaft with: HK 1512 needle bearing	KSB/KSBA/KORD 1517
KORS	1524	Jogger operating lever with: T 1310 roller stud T0261 roller	KS/KSBA 1524
KORS	1808	Air hose	KS 1808
KORS	2111 F	Delivery guard, upper with: KS 14112 trip cam	KSB/KORD 2111 F
KORS	2120	Delivery guard, lower with: KSB 2119 mounting stud	KSB/KORD 2120
KORS	2132	Chain guard, D. S.	KSB 2132
KORS	2133	Chain guard, O. S.	KSB 2133
KS	1841	Vacum hose, 12%" = 320 mm long	KS 1845


KS .	1409	Torsion spring	
—....S	1413 F	Star wheel with spurs	
KS	1426	ChElin sprocket with: KOR 1441 sprocket bearing stud 4204 ball bearing	
KS	1428	Chain wheel with: same as KS 1426	
'KOR	1444	Cover plate	
S	1446 F	St4 wheel, smooth	
KSB	1453	Gripper shaft	KOR/KORA/KORD 62
KORD	1453	Gri per shaft	KORD 64
KS 1482		Su port bar bracket	f KOR/KORA*/KORD 64/ KORS
KSBA	1482	Support bar bracket	KORA/KORD 62
	1485 F	Vacuum sheet brake	KOR/KORA*/KORD 64/ AS_____
KOR	14109 F	Bldver tube	KOR/KORA/KORD 62
KORD 14109 F		BloWer tube	KORD 64
KS	1532	Delivery cable drum, D. S.	
KS	1533	De ivery cable, 0.S.	
KSB	1552	Gear rack bracket, 0. S.	
KS	1553	Gear rack	
KSB	1553	Gear rack bracket, D. S.	
KS	1554	Front sheet guide bracket, D. S	KOR
KSBA	1554	Front sheet stop guide bracket, D. S.	KORA/KORD 52
KORD	1554	Front sheet stop guide bracket, D. S	KORA*/KORD 64/KORS
KS	1555	Front sheet stop guide bracket, 0 S	KOR
KSBA	1555	Front sheet stop guide bracket, 0. S.	KORA/KORD 62
KORD	1555	Front sheet stop guide bracket, 0 S	KORA*/KORD 64/KORS
KSB	1556	Front sheet stop pinion shaft	KOR/KORA/KORD 62
KORA	1556	Front sheet stop pinion shaft	KORA*
--KORD	1556	Front sheet stop pinion shaft	KORD 64
KS	1564	Si e jogger	
KS	1567 F	Si e jogger extension	
KS	1568 F	Si e jogger extension	
KORD	1571 F	Front sheet stop with lower finger	KORA/KORD 64/KORS
KSB	1574 F	Blower tube	KOR
KSBA	1574 F	Blower tube	KORA/KORD 62
KORA 1574 F		Blower tube	KORA*

KORD	1574 F	Blower tube	KORD 64
KSB	1580	Cross bar	KOR/KORA/KORD 62
..KORD	1580	Cross bar	KORD 64
KORA	1586 F	Tube with center front sheet stops	KORA"
KORD	1586 F	Tube with center front sheet stops	KORD 64
KS	1587	Tripping plate with: KS 1588 holder	KOR/KORA/KORD 62
		KORD 1588 holder	KORA*/KORD 64/KORS
KSBA	1590 F	Front sheet stop, center	KORA/KORD 62
—KORD	1590 F	Front sheet stop, center	KORA*/KORD 64/KORS
---KORD	1594 F	<u>Front sheet</u> sto , side	KORA*/KORD 64/KORS
---,KS	15112	Plastic front sheet stop extension finger	
KS	15118	Cable drum cover, D. S.	
KS	15119	Cable drum cover, 0. S.	
KSB	1827	Suction cut-off shaft	KOR/KORA/KORD 62
KORD	1827	Suction cut-off shaft	KORD 64
	1949	<u>Suction</u> cut-off handle rod	
d 2119		Lower guard mounting <u>stud</u> ➤	


For KORS check list below. If part is not listed, then refer to general listing.

KORS Parts	Illustration shown as
KORS 1453	Gripper shaft KSB/KORD 1453
KORS 14109 F	Blower tube KOR/KORD 14109 F
KORS 1556	Front sheet stop pinion shaft KSB/KORA/KORD 1556
KORS 1574 F	Blower tube KSB/KSBA/KORA/ KORD 1574 F
KORS 1580	Cross bar KSB/KORD 1580
KORS 1586 F	Tube with center front stops KORA/KORD 1586 F
KORS 1827	Suction cut-off shaft KSB/KORD 1827
KORS 1828	Suction cut-off handle rod S 1949

E2

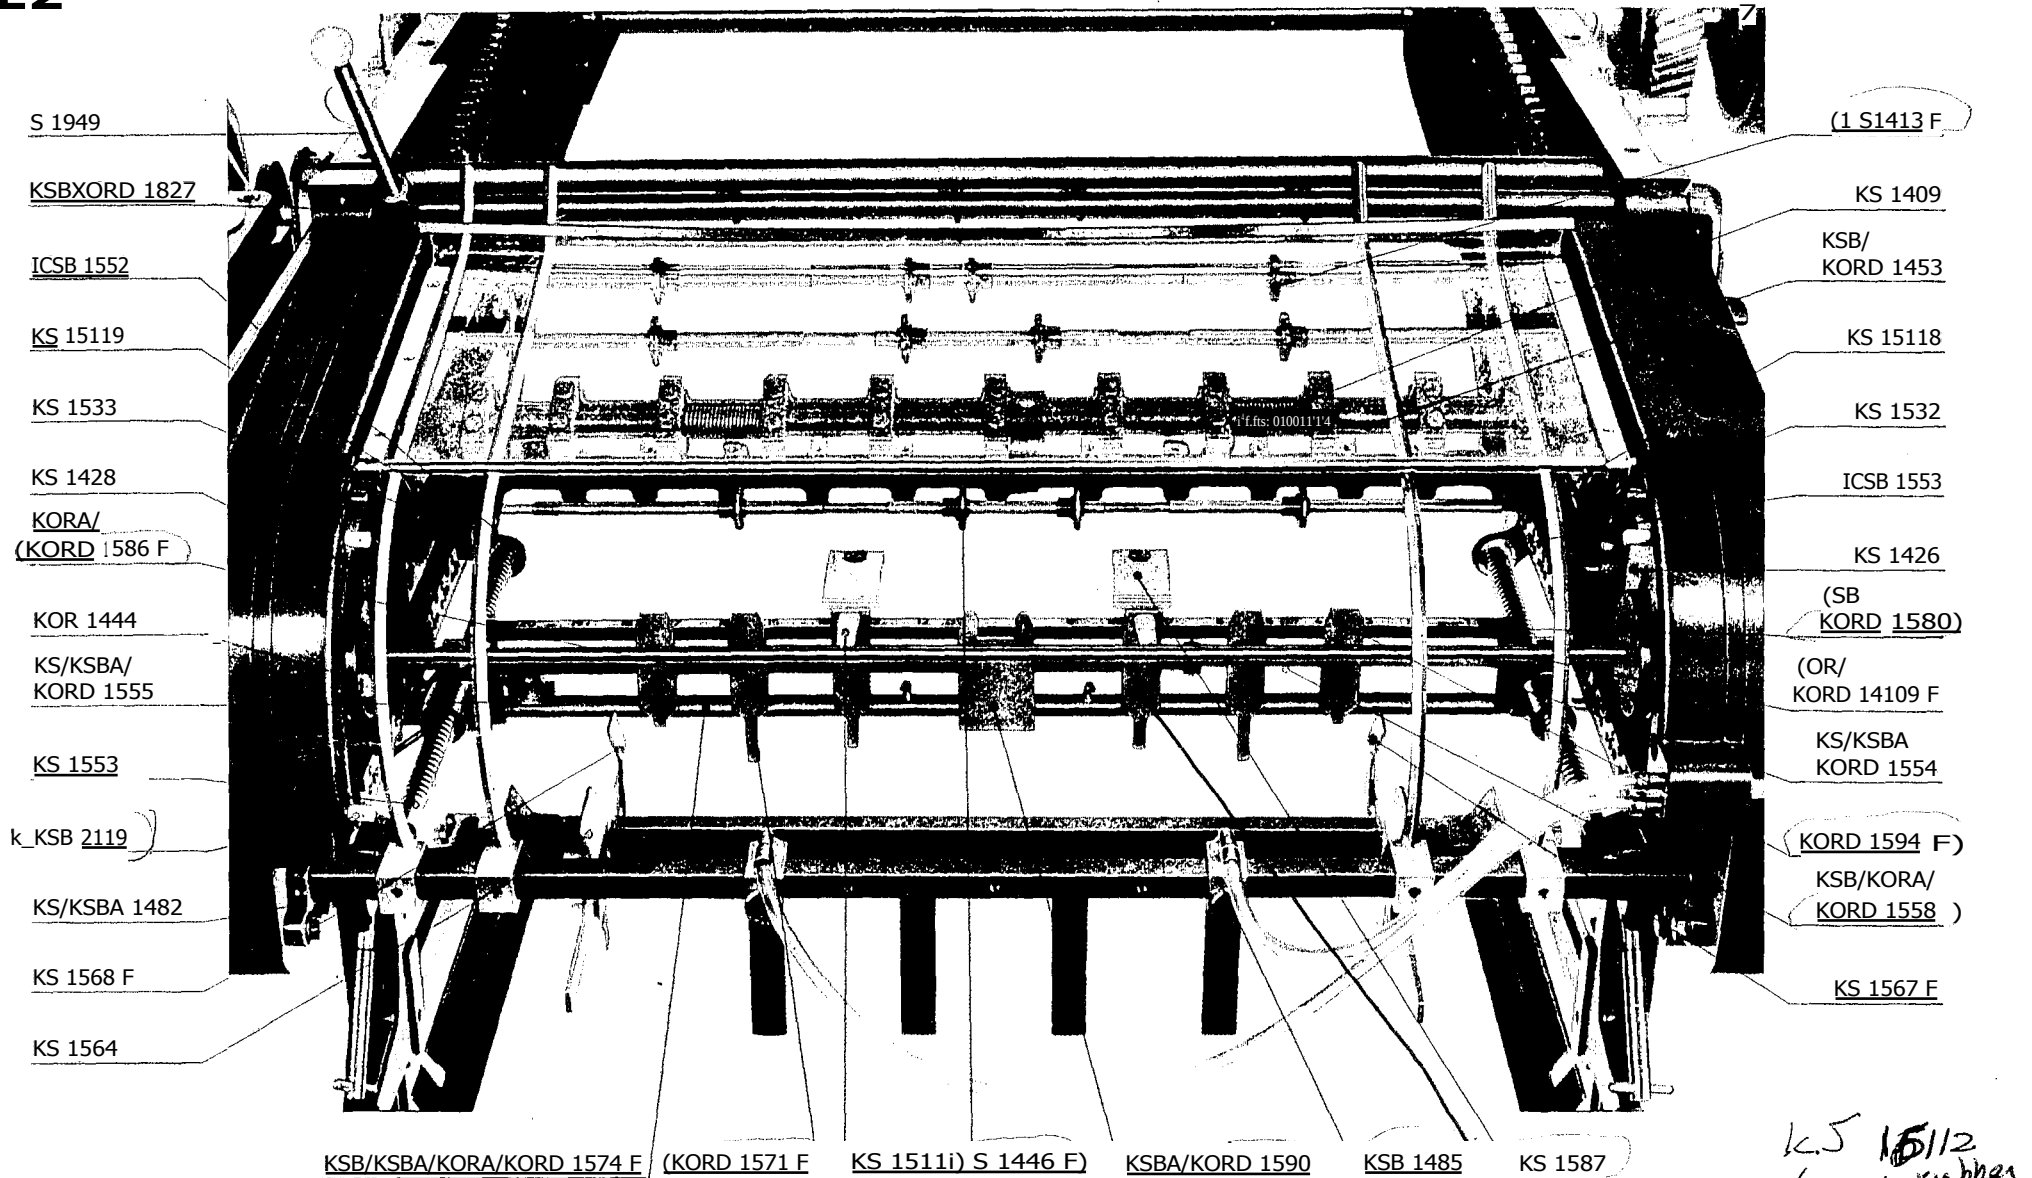

1.5 15112
rubber
finger
Kord 1586F

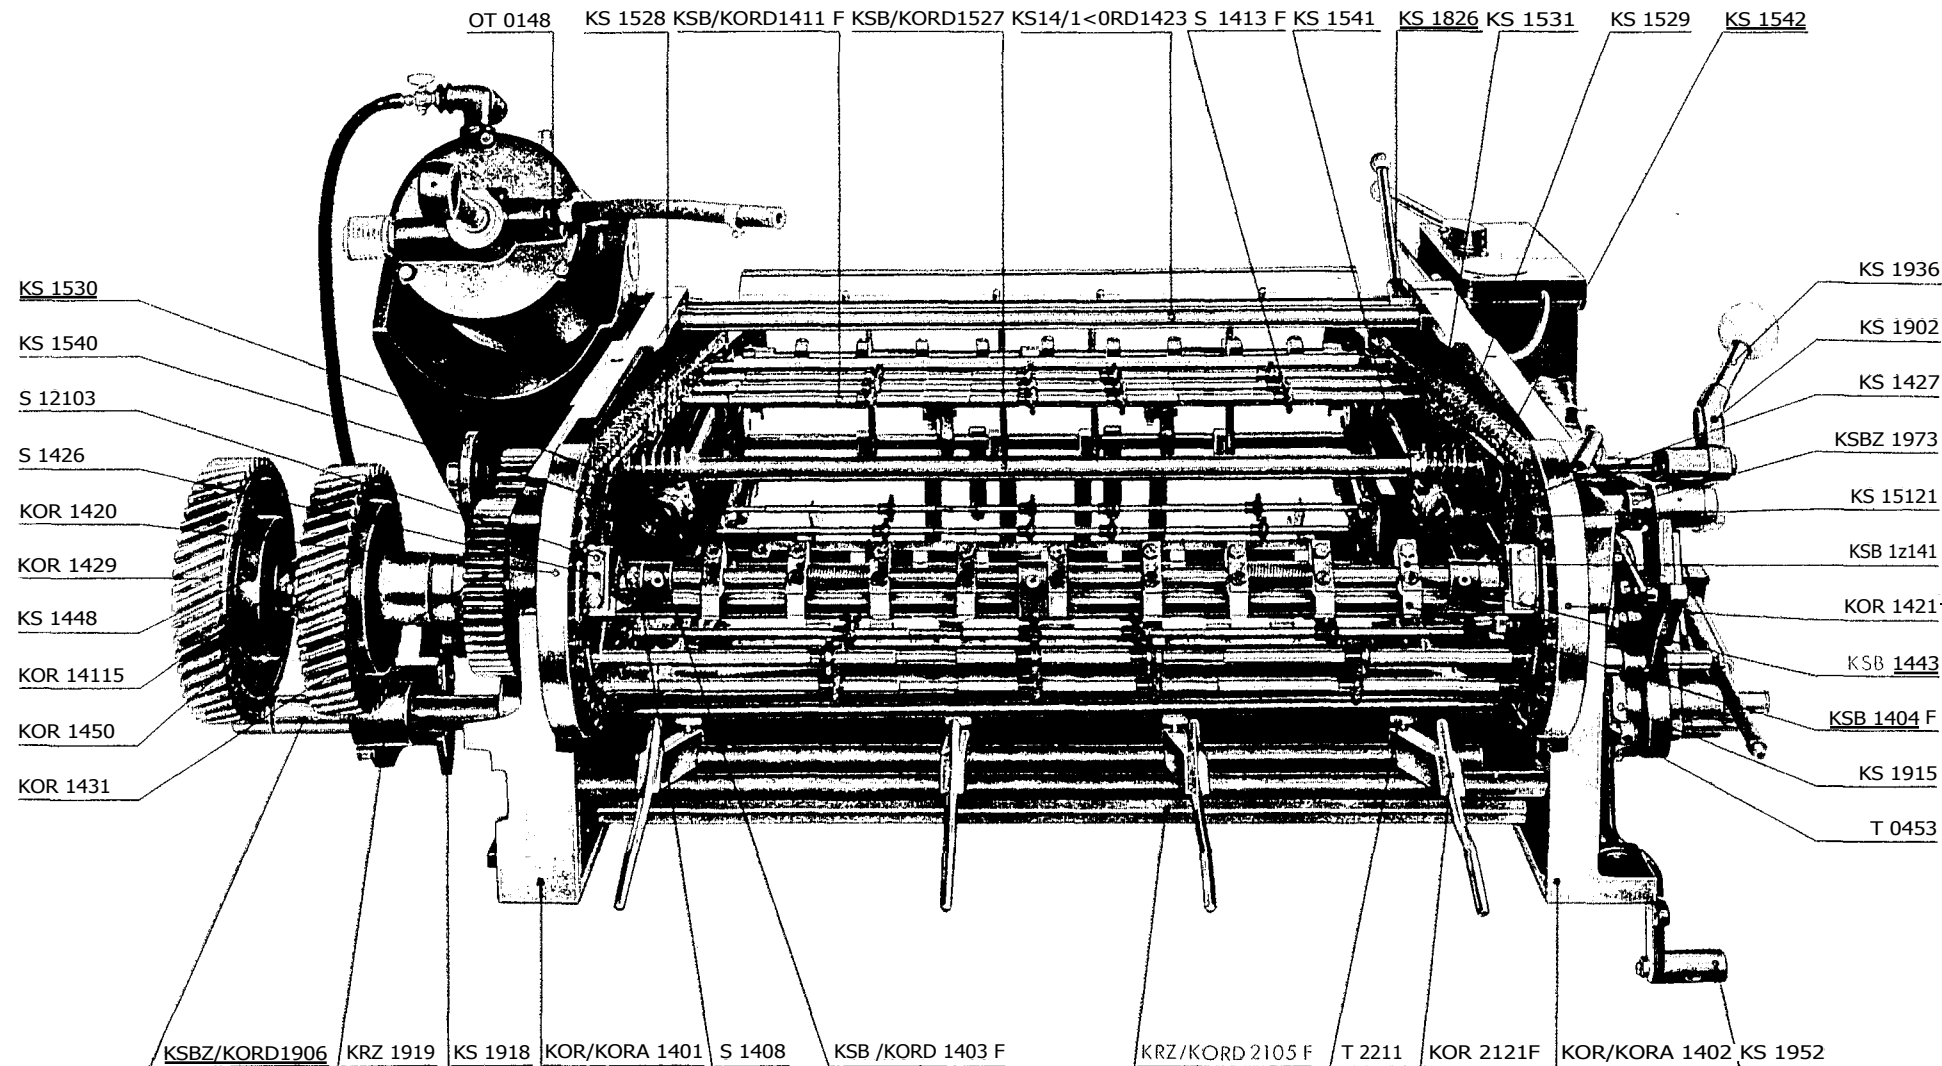

GT	0148	Hose nipple New No.: KSB 1850	
•	0453	Roller with: T 0452 roller stud	
•	12103	Hexagon screw	
KOR	1401	Delivery side frame, D. S. with: 3206 ball bearing S 10141 washer KOR 1437 spacer collar	KOR/KORA"/KORD 64
KORA	1401	Delivery side frame, D. S. with: same as KOR 1401	KORA/KORD 62
KOR	1402	Delivery side frame, 0. S. with: 600,8e ball bearing	KOR/KORA*/KORD 64
KORA	1402	Delivery side frame, 0. S. with: 6006 ball bearing	KORA/KORD 62
KSB	1403 F	Gripper bar with: S 1406 shim	KOR/KORA/KORD 62
KORD	1403 F	Gripper bar. with: S, 1406 shim	1<ORD 64 4. .6 0
KSB	14 F	Gripper	
•	1408	Gripper shaft.collar	
KSB	1411 F	Star wheel shaft shaft	<u>KOR/KORA/KORD 62</u> <u>KORD 64 2052.35</u>
•	1413 F	Star wheel with spurs	
KOR	1420	,Chain guide, D. S.	
KOR	1421	Chain guide, 0. S.	
KSB	1423	Cross bar	KOR/KORA/KORD 62
KORD	1423	Cross bar	KORD 64
•	1426	Hexagon screw locking plate	
KS	1427	Chain sprocket	
KOR	1429	Drive gear with: S 0740 threaded taper pin	
KOR	1431	Flanged gear with: NK 4720 needle bearing KOR 1430 bearing pilot	
KSB	1441	Gripper backing plate	
KSB	1443	Hexagon screw	
KS	1448	Gear flange	

KOR	1450	Feeder drive gear with: KOR 14116 bearing retainer plate GT 01104 washer 3206 ball bearing S 10141 spacer washer	
KOR	14115	Collar	KOR/KORA/KORD 62
KSB	1527	Delivery table drive shaft with: NK 2020 needle bearing	
KORD	1527	Delivery elevator drive shaft with: NK 2020 needle bearing	KORD 64
KS	1528	Gear worm, D. S.	
KS	1529	Gear worm, O. S.	
KS	1530	Worm gear, D. S.	
KS	1531	Worm gear, 0. S.	
KS	1540	Delivery cable drum shaft, D. S.	
KS	1541	Delivery cable drum shaft, 0. S.	
KS	1542	Delivery stop nut guide	
KS	15121	Hexagon stop nut	
KS	1826	Suction cut-off handle end piece	
KS	1902	Control lever, upper portion with: S 1938 compression spring	
KSBZ	1906	Control shaft	KOR/KORA/KORD 62
KORD	1906	Control shaft	KORD 64
KS	1915	Limit switch tripping cam	
KS	1918	Suction cut-off cam	
KRZ	1919	Brake and cut-off cam' lever	
KS	1936	Control handle rod	
KS	1952	Eccentric tripping bolt	
KSBZ	1973	Tripping pawl lever with: KSBZ 1956 roller stud T 0453 roller	
KRZ	2105 F	Dust pan	KOR/KORA/KORD 62
KORD	2105 F	Dust pan	KORD 64
KOR	2121 F	Sheet guide	
	2211	Knurled screw	


AW-

11054e4

57, 006

4'

E 3 continued

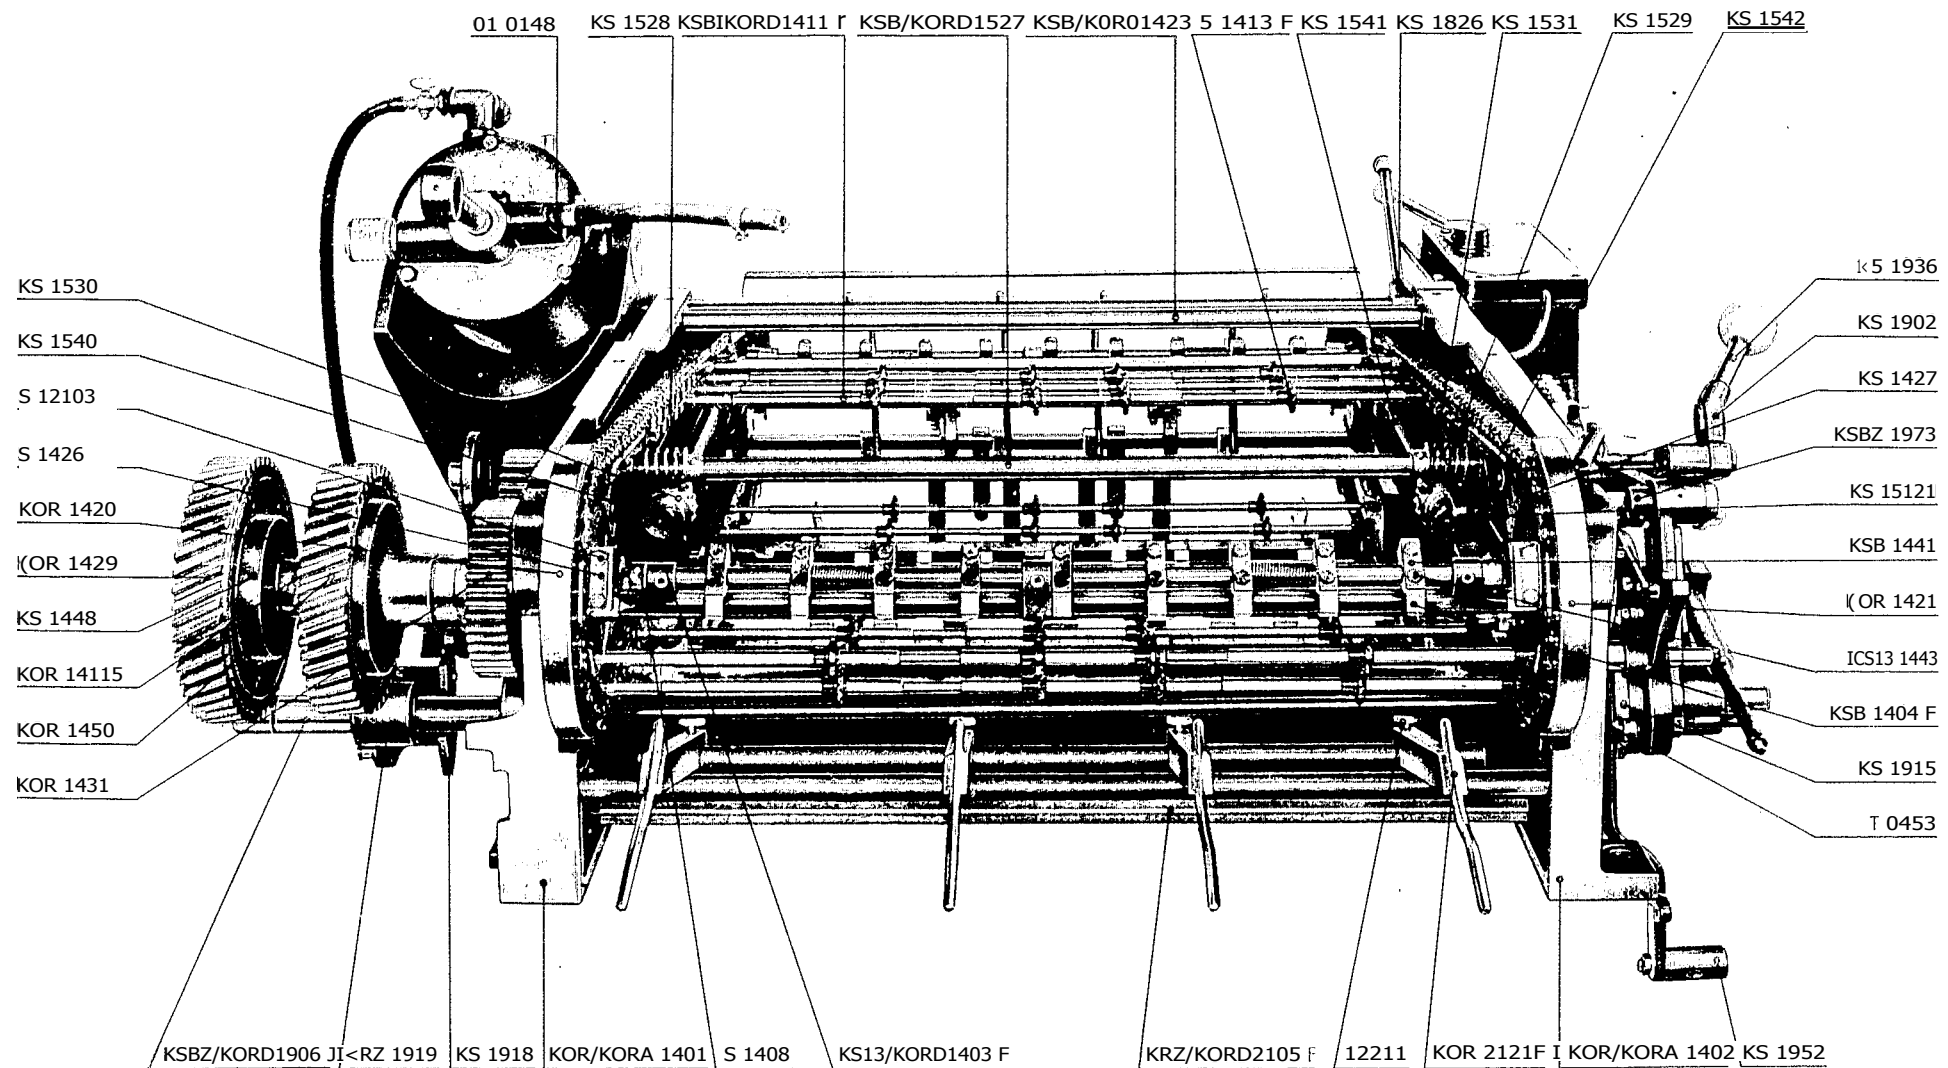

For KORS check list below. If part is not listed, then refer to general listing.

KORS Parts			Illustration shown as
KORS	1401	Delivery side frame, D. S. with: same as KOR 1401	KOR/KORA 1401
KORS	1402	Delivery side frame <u>0</u> S with: 6006 ball bearing	KOR/KORA 1402
KORS	1403 F	Gripper bar with: S 1406 shim	KSB/KORD 1403 F
KORS	1411F	Star wheel shaft	KSB/KORD 1411 F
KORS	1420	Chain guide, D. S.	KOR 1420
KORS	1421	Chain guide, <u>0</u> . S	KOR 1421
KORS	1423	Cross. bar	KSB/KORD 1423
KORS	1429	Drive gear with: S 0740 threaded taper pin	KOR 1429
KORS	1448	Gear flange	KS 1448
KORS	14115	Collar	KOR 14115
KORS	1527	Delivery elevator drive shaft with: NK 2020 needle bearing	KSB/KORD 1527
KORS	1906	Control shaft	KSBZ/KORD 1906
KORS	2105 F	Dust pan	KRZ/KORD 2105 F


"If"

KOR	1418	Chain guide, D.S. With: KS 1417 spacer	
KOR	1419	Chain guide, O.S. with: KS 1417 spacer	
KS	1434	Spacer	
KS	1435	uide rail	KOR up to No. 318787 KORA/KORD up to No. 316559
KSBA	1435	Guide rail	
KS	1436	Gripper opening cam guide bracket	
KS	1439	Gripper opening cam	KOR/KORA/KORD 62
KORD	1439	Gripper opening cam	KORA"/KORD 64/KORS
KOR	1440	Gripper opening cam	
KOR	1449	Chain guide, curved	
KOR	1483 F	Chain guide with: KS 1445 spacer	
KOR	1496 F	Chain guide with: KS 1425 spacer.	
KOR	1497 F	Chain guide with: KS 1445 spacer	
KOR	1498 F	Chain guide with: KS '1425 spacer	
KOR	1499	Chain guide, curved	
KS	1516	Cable drum Shaft bearing-front with: HK 2216 needle bearing	
KS	1525	Cable drum shaft bearing-rear	
KS	1557	Pinion gear	KOR/KORA/KORD 62
KORD	1557	Pinion gear	KORA"/KORD 64/KORS
KSB	1573	Front sheet stop support bar	KOR/KORA/KORD 62
KS	15109 F	Trip rod	KOR/KORA/KORD 62
KORD	15109 F	Trip rod	KORA"/KORD 64/KORS


For KORS check list below. If part is not listed, then refer to general listing.

KORS Parts			Illustration shown as
KORS	1418	Chain guide, D <u>S</u> with: KS 1417 spacer	KOR 1418/19
KORS	1419	Chain guide, <u>OS</u> with: KS 1417 spacer	KOR'1418/19
KORS	1497 F	Chain guide with: KS 1445 spacer	KOR 1497 F
KORS	1498 F	Chain guide with: KS 1425 spacer .	KOR 1498 F

E4

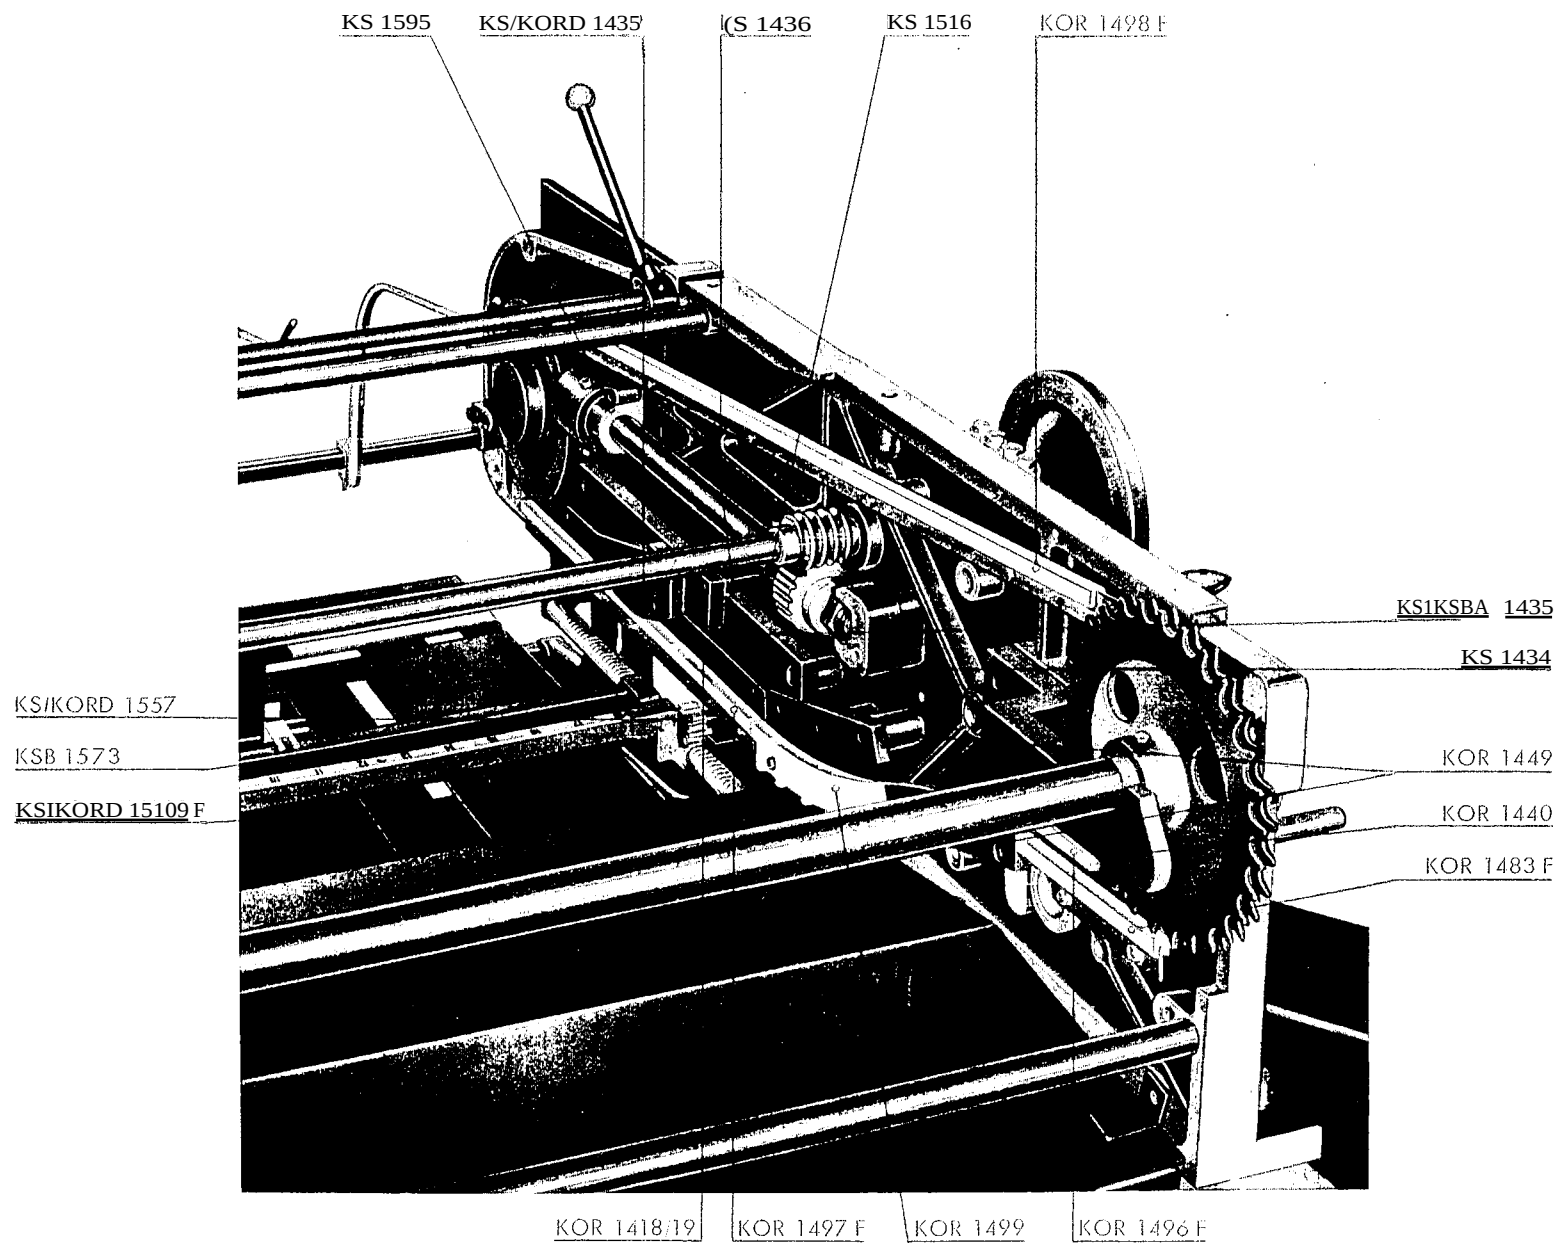


E 5

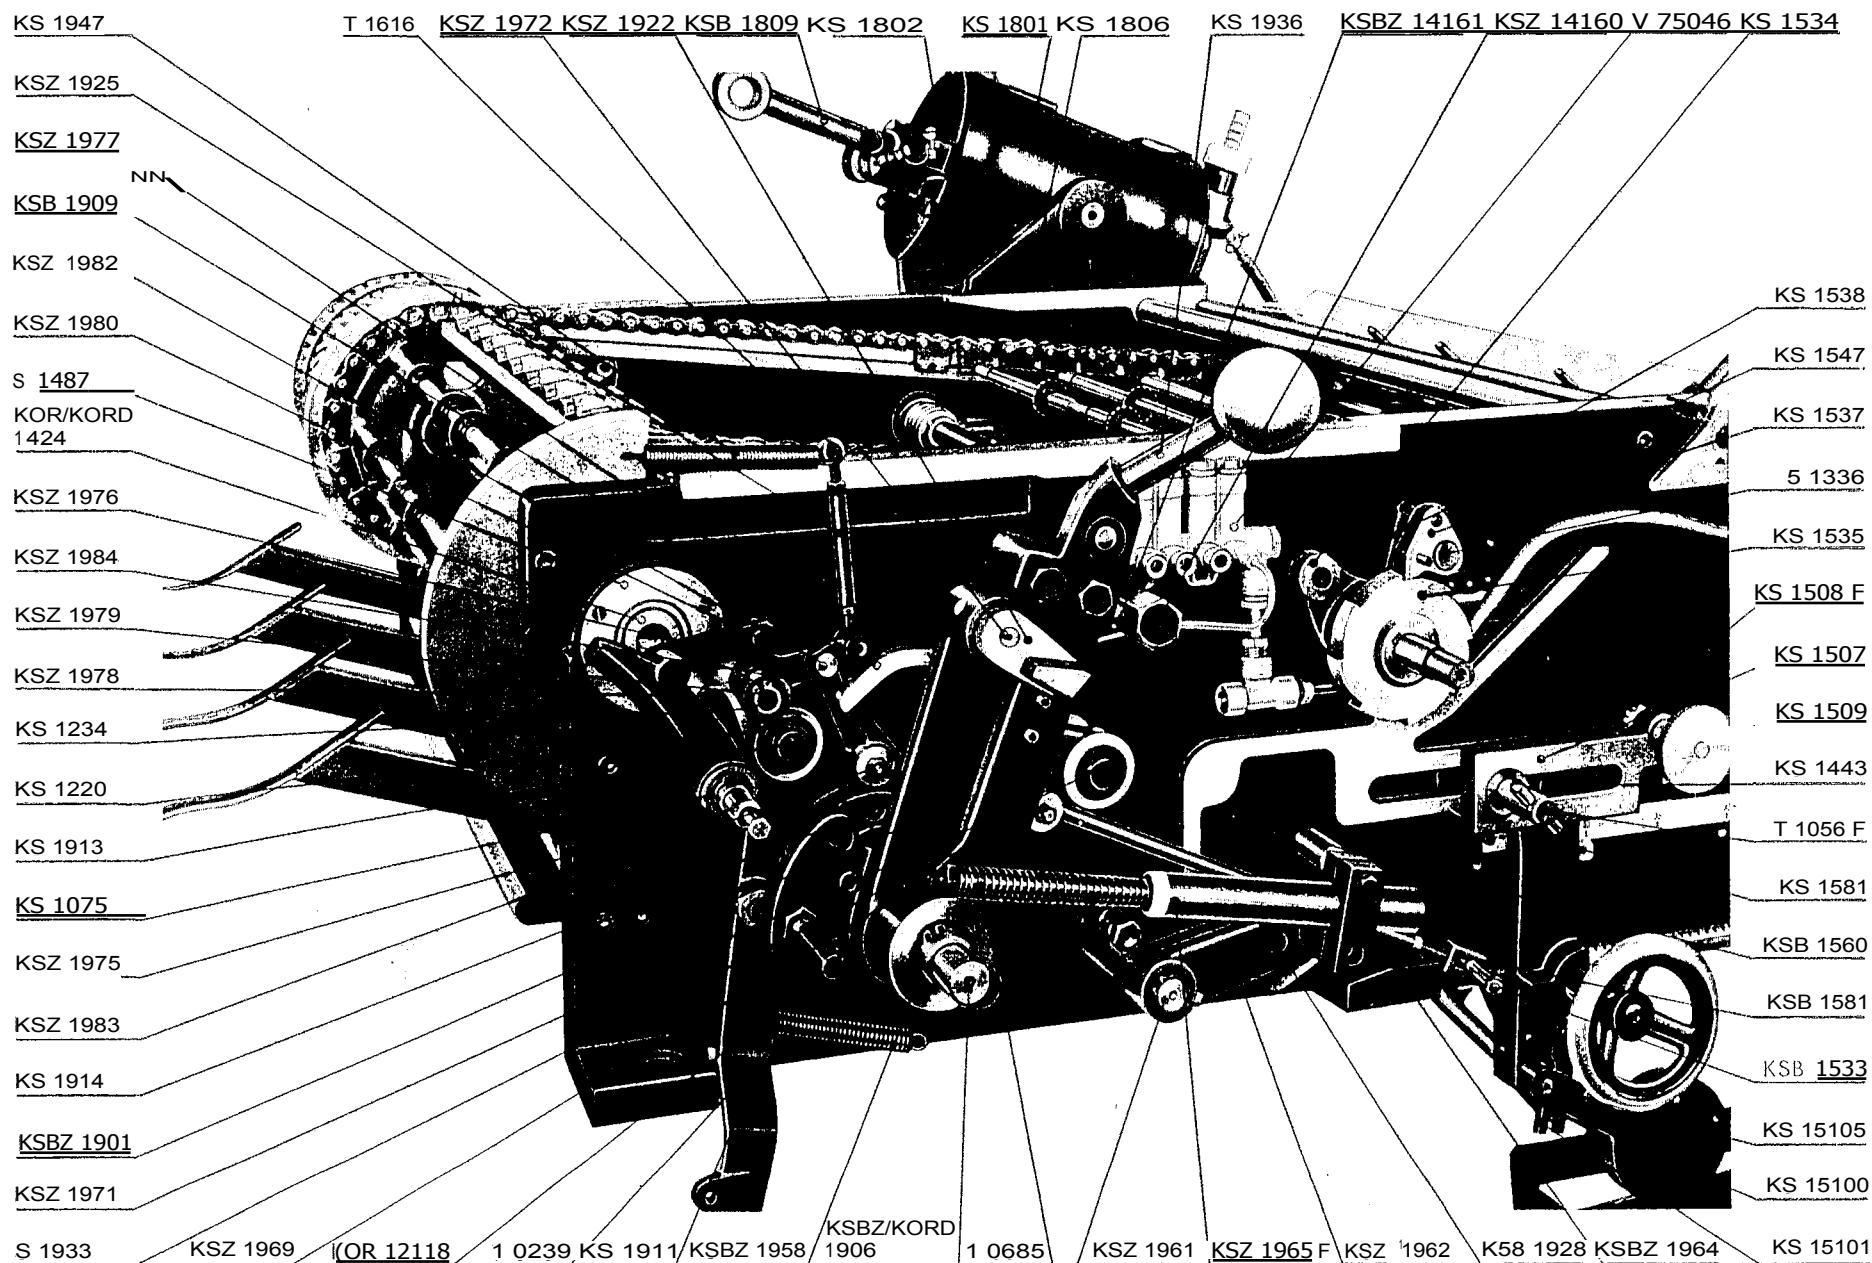

	0239	Tension spring	
	0685	Compression spring	
	1056 F	Clamping nut with: T 0681 washer KS 1438 threaded stud	
KS	1075	Washer	
KS	1220	Washer	
KS	1234	Washer	
KOR	12118	Plain stem bolt	
	1336	Shouldered roller stud	
KOR	1424	Delivery gripper drive shaft with: 6006 ball bearing 6005 ball bearing	KOR/KORA/KORD 62
KORD	1424	Delivery gripper drive shaft with: 6006 ball bearing 6005 ball bearing	KORD 64
KS	1443	Guide pin	
	1487	Bearing cover plate	
KSZ	14160	Control lever stop bolt	
KSBZ	14161	Throw-off lever stop bolt	
KS	1507	Support bracket	
KS	1508F	Pinion gear with: KS 1442 pinion gear rack	
KS	1509	Hand wheel	
KSB	1533	Shouldered bolt	
KS	1534	Ratchet pawl lever with: HK 3520 needle bearing KS 1543 spring connecting pin S 1336 shouldered stud	
KS	1535	Ratchet wheel	
KS	1537	Ratchet pawl with: K 12/13 needle bearing (new number: K 12x15x13)	
KS	1538	Spring connecting pin	
KS	1547	Tension spring	
KSB	1560	Extension nut	
KSB	1581	Slotted eye-bolt	
KS	1581	Pointer	
KS	15100	Weighted lever with: KS 15108 tension spring KS 15103 stop screw	

KS	15101	Forked lever with: KS 15104 lever support stud	
KS	15105	Weighted lever support stud	
T	1616	Connecting piece	
KS	1801	Pump cylinder with: NK 2516 needle bearing	
KS	1802	Front pump cover with: T 1848 felt ring S 1824 bushing KS 1804 cover washer	
KS	1806	Pump bracket	
KSB	1809	Piston rod with: NA 4905 roller bearing KS 1803 piston T 1804 piston ring	
KSBZ	1901	Throw-off lever with: HK 1516 needle bearing	
KSBZ	1906	Control shaft	KOR/KORA/KORD 62
KORD	1906	Control shaft	KORD 64
KSB	1909	Tripping cam lever with: HK 1816 needle bearing	
KS	1911	Tripping lever with: T0452 roller stud T 0453 roller HK 1816 needle bearing	
KS	1913	Tripping lever support stud	
KS	1914	Flanged bearing housing with: HK 3020 needle bearing	
KSZ	1922	Throw-off tripping pawl	
KSZ	1925	Adjustable connecting link	
KSB	1928	Connecting link stud	
	1933	Shouldered screw	
KS	1936	Control handle rod with: F 50 ball handle	
KS	1947	Tension spring	
KSBZ	1958	Control lever, lower portion with: KSBZ 1959 latch S 10144 washer NK 2516 needle bearing	
KSZ	1961	Balance spring lever support stud	
KSZ	1962	Impression throw-off balance spring lever with: HK 1210 needle bearing	

E 5 continued

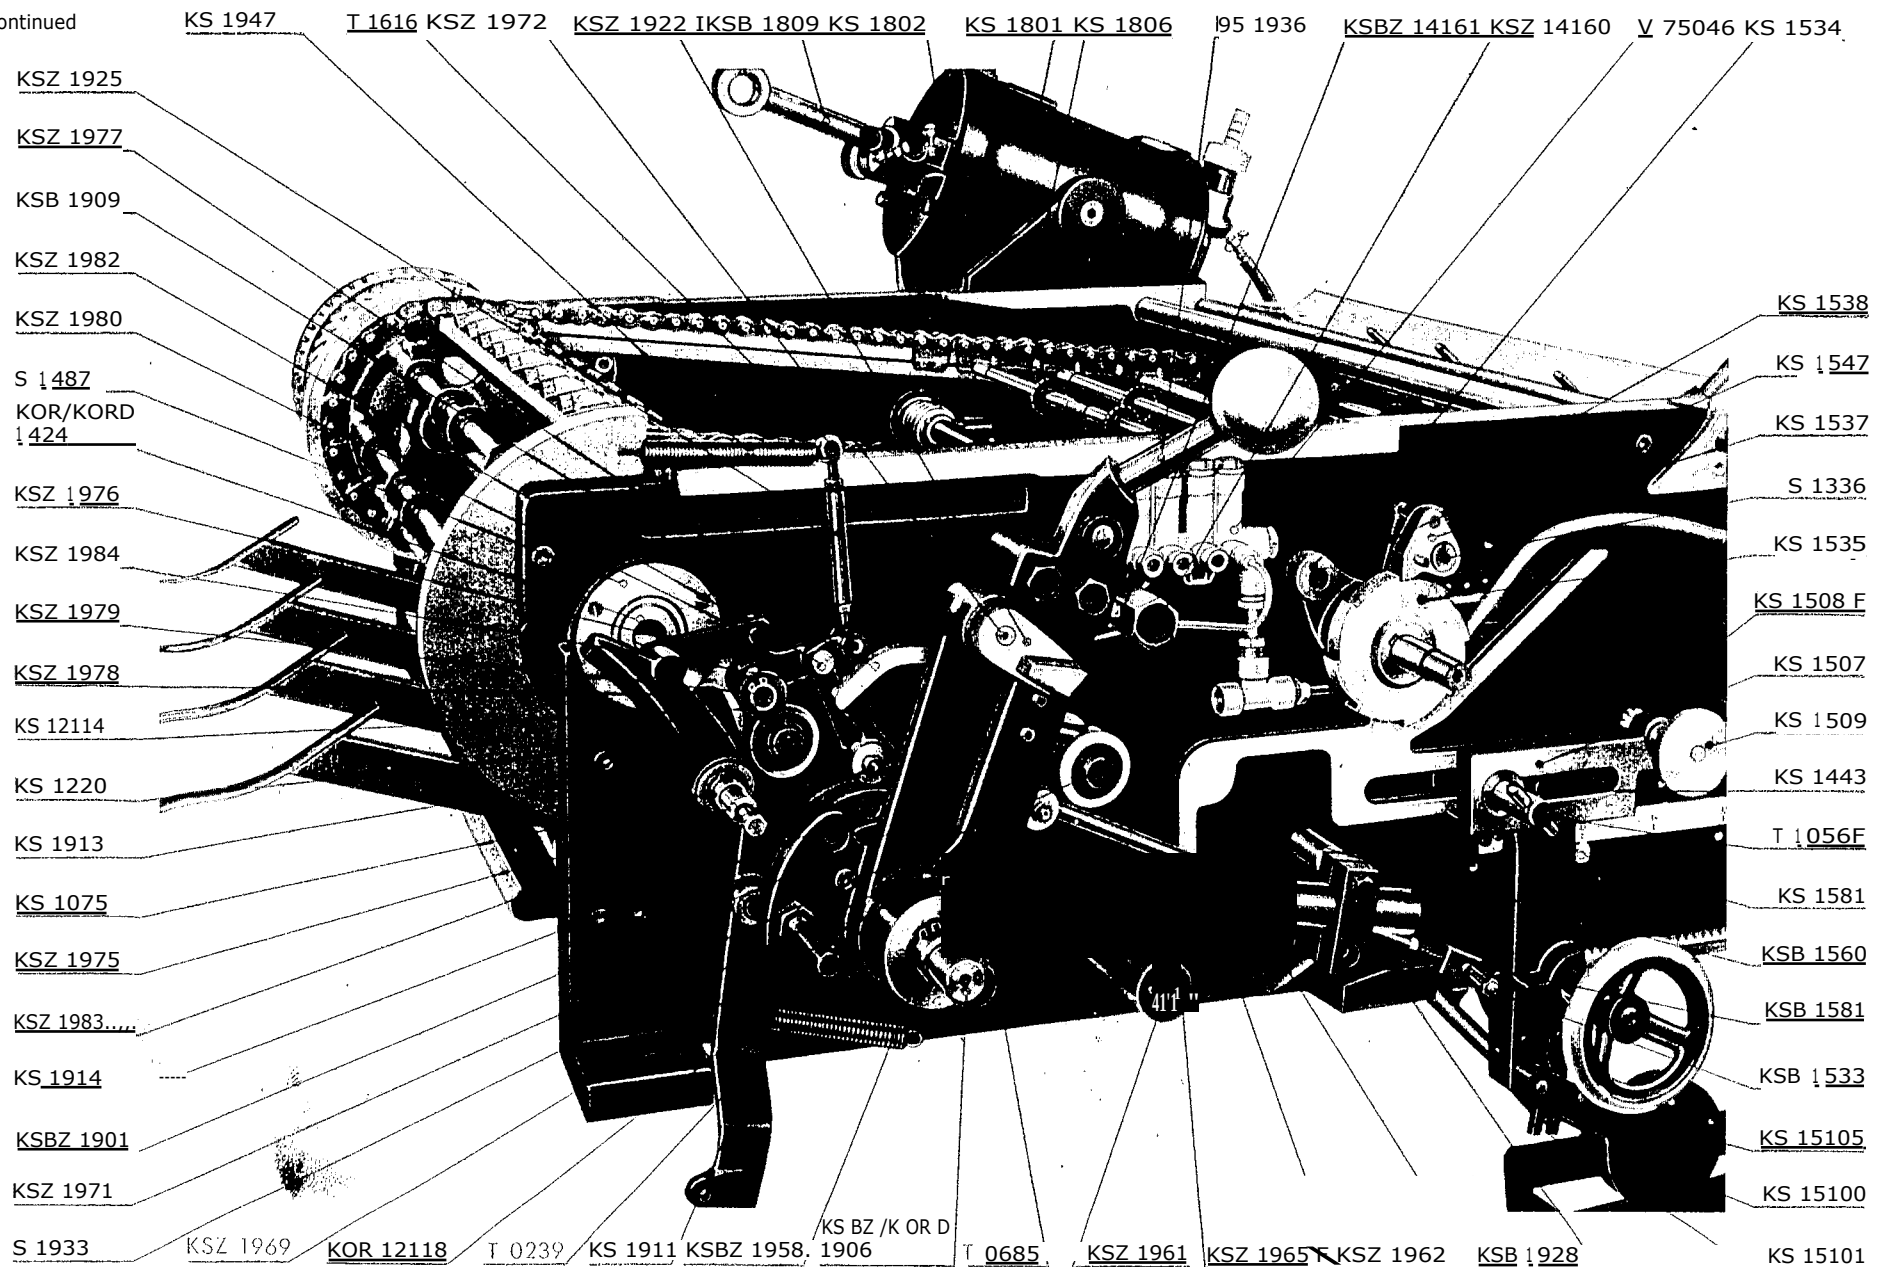

KSBZ	1964	Spring housing clamp with: KS 1234 washer KSBZ 1960Rfmd "
KSZ,	1965 F	Spring housing
KSZ	1969	Spring rod with: KSZ 1968 stop collar
KSZ	1971	Tripping cam lever stud with: KS 1220 washer
KSZ	1972	Tripping pawl shaft
KSZ	1975	Throw-off cam lever support stud with: KS 1075 washer
KSZ	1976	Connecting link
KSZ	1977	Double lever with: T 1310 shoulder stud
KSZ	1978	Impression throw-off cam lever with: KSZ 1980 shoulder stud
KSZ	1979	Double lever support stud
KSZ	1980	Shoulder stud
KSZ	1982	Shoulder stud with: T 0239 tension spring
KSZ	1983	Threaded stud
KSZ	1984	Slotted connecting link
V	75046	Lubrication distributor unit

oot, r

For KORS check list below. If part is not listed, then refer to general listing.

KORS Parts			Illustration shown as
KORS	1424	Delivery gripper drive shaft with: 6006 ball bearing 6005 ball bearing	KOR/KORD 1424
KORS	1906	Control shaft	KSBZ/KORD 1906


it/;6#4

(

*eAve⁰

6/e •rt

E6

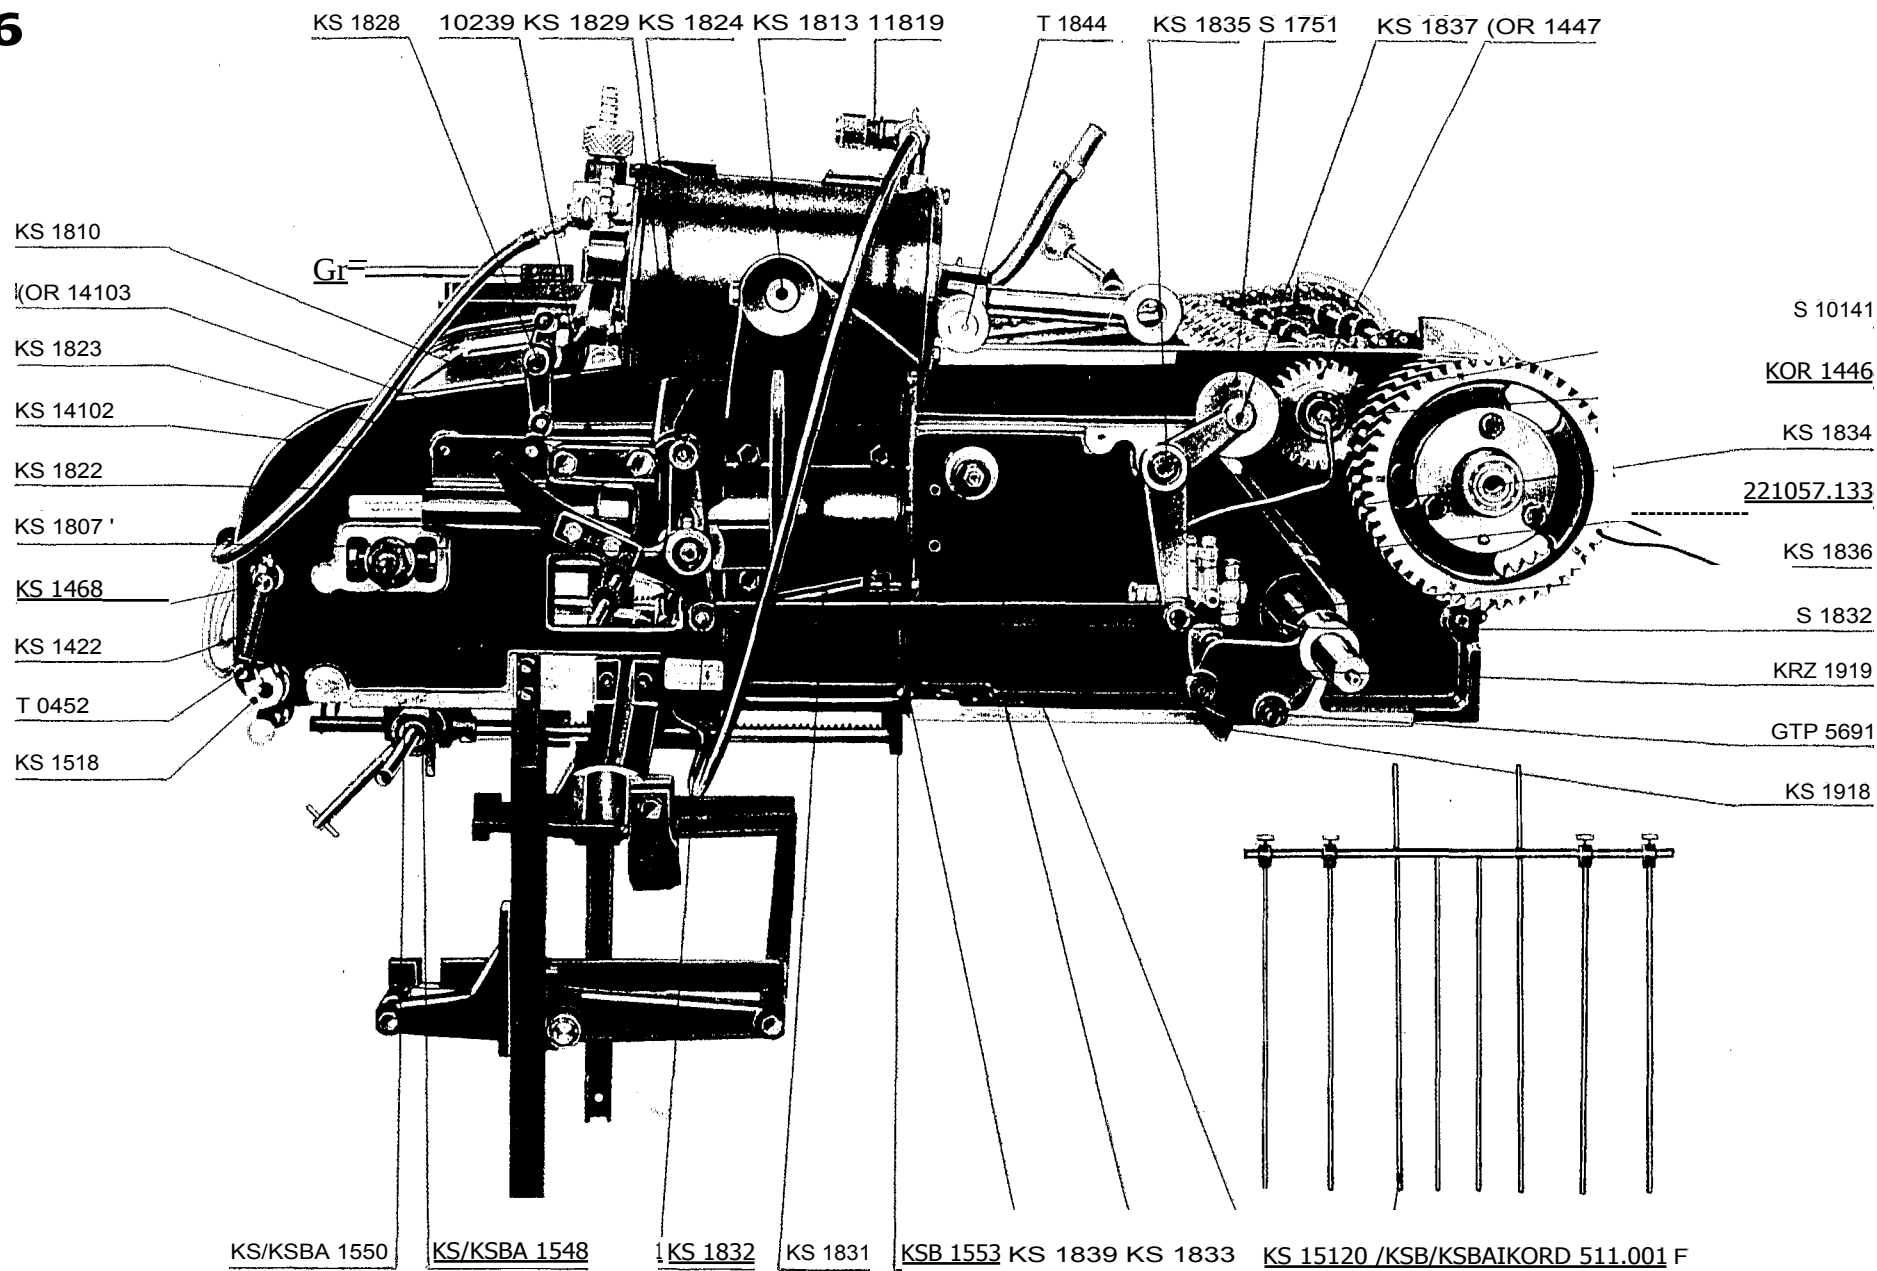


	0239	Tension spring	
	0452	Shoulder stud	
	10141	Washer	
KS	1422	Washer	
KOR	1446	Intermediate gear support stud	
KOR	1447	Intermediate gear with: NK 3030 needle bearing	
KS	1468	Spring rod guide	
KS	14102	Spring rod guard	
KOR	14103	Spring rod guide bracket	
KS	1518.	Jogger shaft stop lever	
KS	1548	Jogger bracket sleeve bushing, D.S. _____ with: T 1310 roller stud T0261 roller KS 1546 compression spring	KOR
KSBA	1548	Jogger bracket sleeve bushing, D.S. _____ with: same as KS 1548	KORA/KORD/KORS
KS	1550	Jogger bracket, D.S.	KOR
KSBA	1550	yogger bracket, D.S.	KORA/KORD/KORS
KSB	1553	Front sheet stop gear rack bracket, D.S.	
KS	15120	Washer with: spring washer 31.5x16.3x1.25 51104 DIN•711 thrust bearing	
	1751	Cam roller	
KS	1807	Suction cut-off cam lever support stud	
KS	1810	Pump valve cut-off lever with: T 0452 roller stud T 0453 roller	
KS	1813	Pump hinge pin	
	1819	Compression spring	
KS	1822	Suction cut-off cam	
KS	1823	Suction cut-off cam lever with: NK 1820 needle bearing	
KS	1824	Cut-off lever roller stud	
KS	1828	Valve cut-off lever stud	
KS	1829	Manual suction cut-off shaft lever.	
KS	1831	Tension spring	
KS	1832	Connecting link stud	
	1832	Cam roller	

KS	1833	Connecting link with: KS 1840 spring connecting screw	
KS	1834	Suction cut-off cam roller lever	
KS	1835	Cam roller lever support stud with: KS 1220 washer	
KS	1836	Cam roller stud	
KS	1837	Cam roller stud with: K 9/10 needle bearing (new number: K 9x12x101	
KS	1839	Spring connection screw	
	1844	Air filter	
KS	1918	Suction cut-off cam	
KRZ	1919	Brake and cut-off cam lever	
GTP	5691	Connecting link stud	
KSB 511.001 F		Continuous delivery device	KOR
KSBA 511.001 F		Continuous delivery device	KORA/KORD 62
KORD 511.001 F		Continuous delivery device	KORD 64
221 057. U 3		Lubrication distributor unit	

For KORS check list below. If part is not listed, then refer to general listing.

KORS Parts	Illustration shown as
KORS 14102	Spring rod guard KS 14102
KORS 511.001 F	Continuous delivery device KSB/KSBA/ KORD 511.001 F

FI

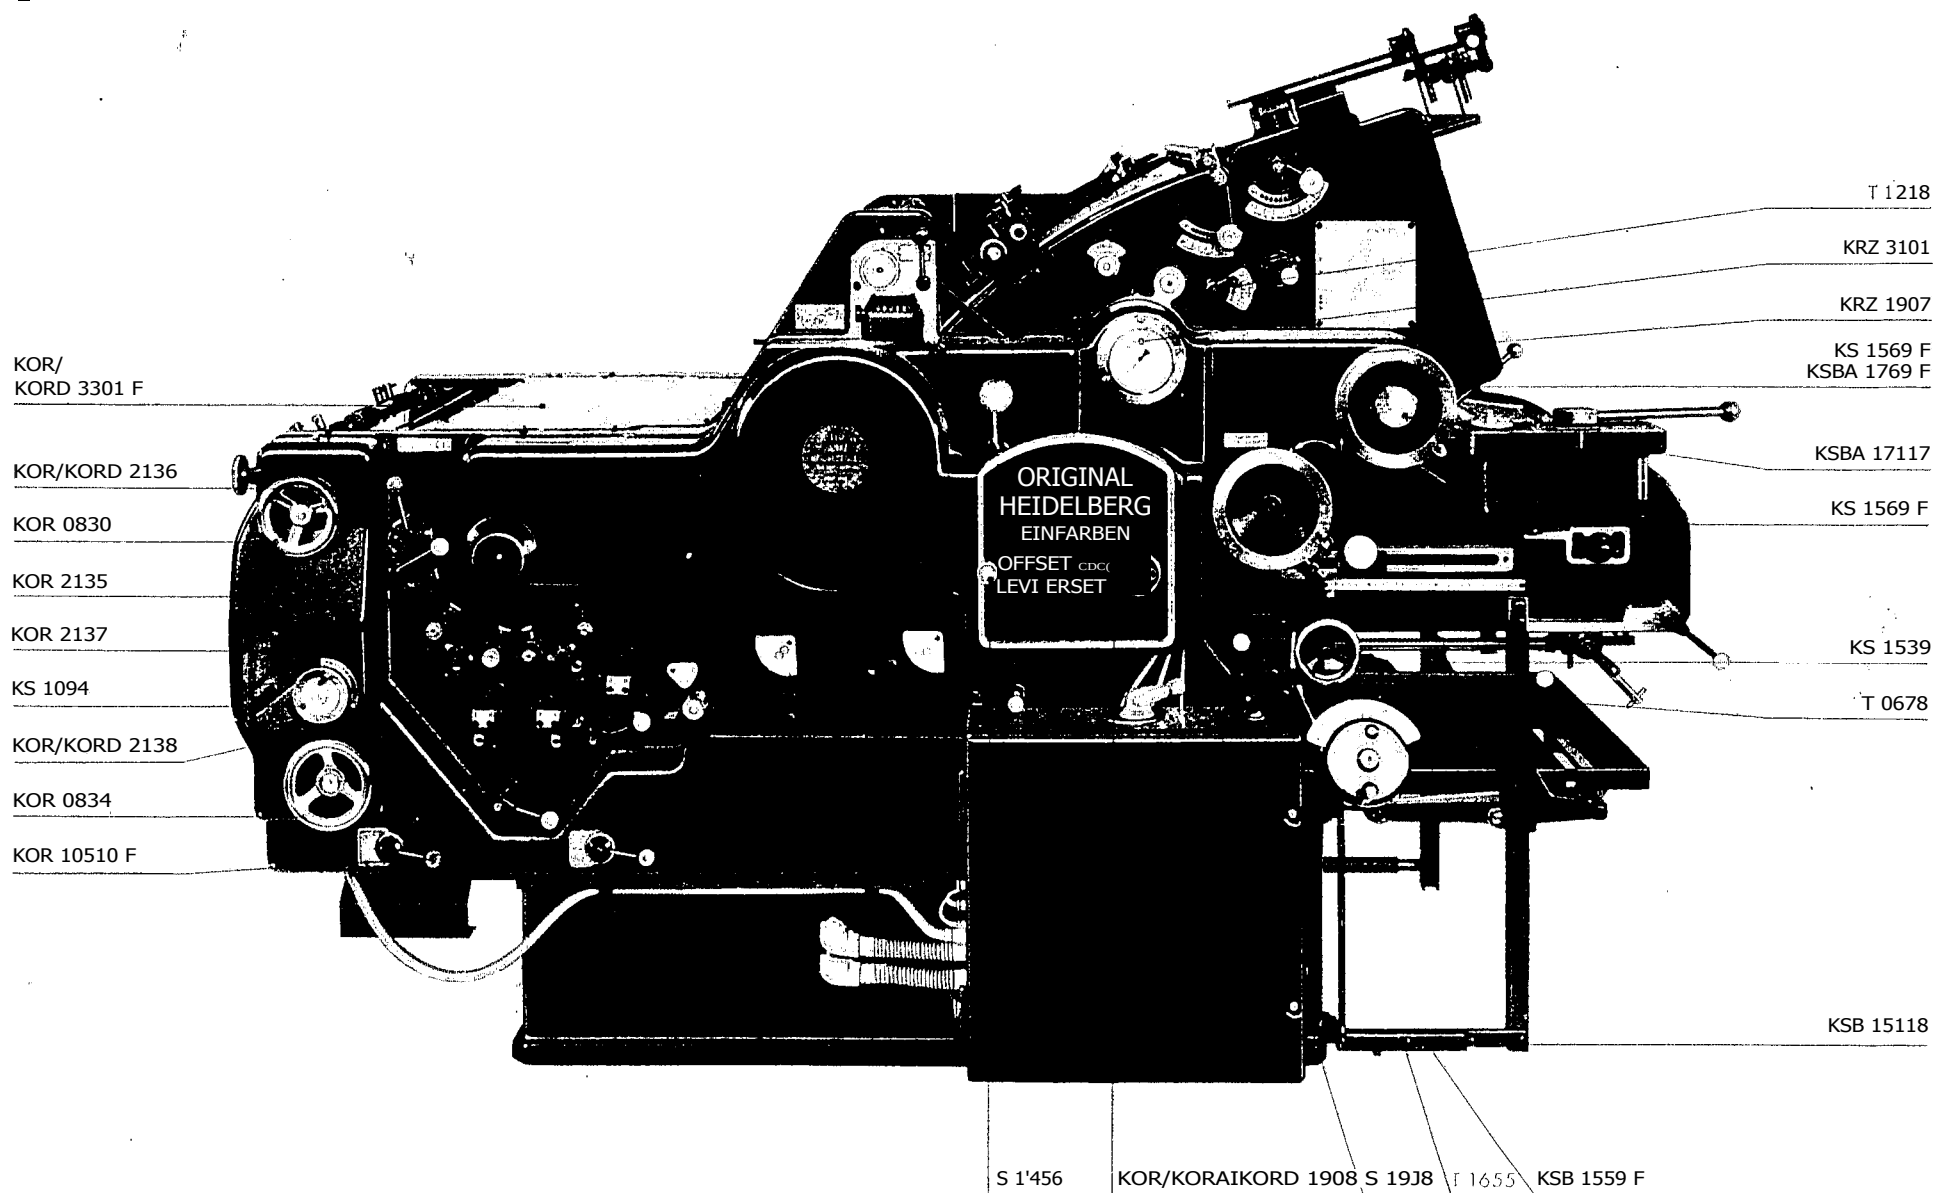

KOR/
KORD 3301 F

KOR/KORD 2136

KOR 0830

KOR 2135

KOR 2137

KS 1094

KOR/KORD 2138

KOR 0834

KOR 10510 F

T 1218

KRZ 3101

KRZ 1907

KS 1569 F
KSBA 1769 F

KSBA 17117

KS 1569 F

KS 1539

T 0678

KSB 15118

S 1'456

KOR/KORAIKORD 1908 S 1938

T 1655

KSB 1559 F

.


•	0678	Trip lever threaded shoulder stud	
KOR	0830	Water fountain handwheel	
KOR	0834	Ink fountain handwheel	
KS	1094	Ink control handwheel	
KOR	10510 F	Ink supply lever (red ball handle)	
	1218	Blower bar height control lever with: T 1222 plunger T 1215 compression spring	
KS	1539	Delivery elevator cable	
KSB	1559 F	Delivery trip lever with: SZ 10250 Compression spring 3/8" steel ball ,	
KS	1569 F	Elevator handwheel	
KSB	15118	Delivery trip lever latch stud	
•	1655	Delivery trip lever stud - with: S 1094 washer	
KSBA	1769 F	Feed table elevator handwheel with: KSBA 17111 flange gear	KORA/KORD/KORS
KSBA	17117	Washer	KORA/KORD/KORS
KRZ	1907	Cover guard, D.S. with: T 0263 oval headed screw	
KOR	1908		
KORA	1908	Cover door	
KORD	1908		
•	1956	Knurled door screw	
•	1958	Door hinge	
KOR	2135	Cover guard, O.S.	
KOR	2136	Cover guard, O.S.	
KORD	2136	Cover guard, O.S.	KORD/KORS
KOR	2137	Sight cover	
KOR	2138	Cover guard	
KORD	2138	Cover guard	KORD/KORS
KRZ	3101	Tachometer with: SB 3102 driver	
KOR	3301 F	Cylinder guard with: KOR 3321 anglelatch plate KOR 3325 baffle plate	
KORD	3301 F	Cylinder guard KORD 3321 latch plate • KORD 3325 baffle plate	

For KORS check list below. If part is not listed, then refer to general listing.

KORS Parts		Illustration shown as
KORS	1908 Cover door	KOR/KORA/KORD 1908
KORS	3301 F ' Cylinder guard with: KORD 3321 latch plate KORS 3325 baffle plate	KOR/KORD 3301 F



F2

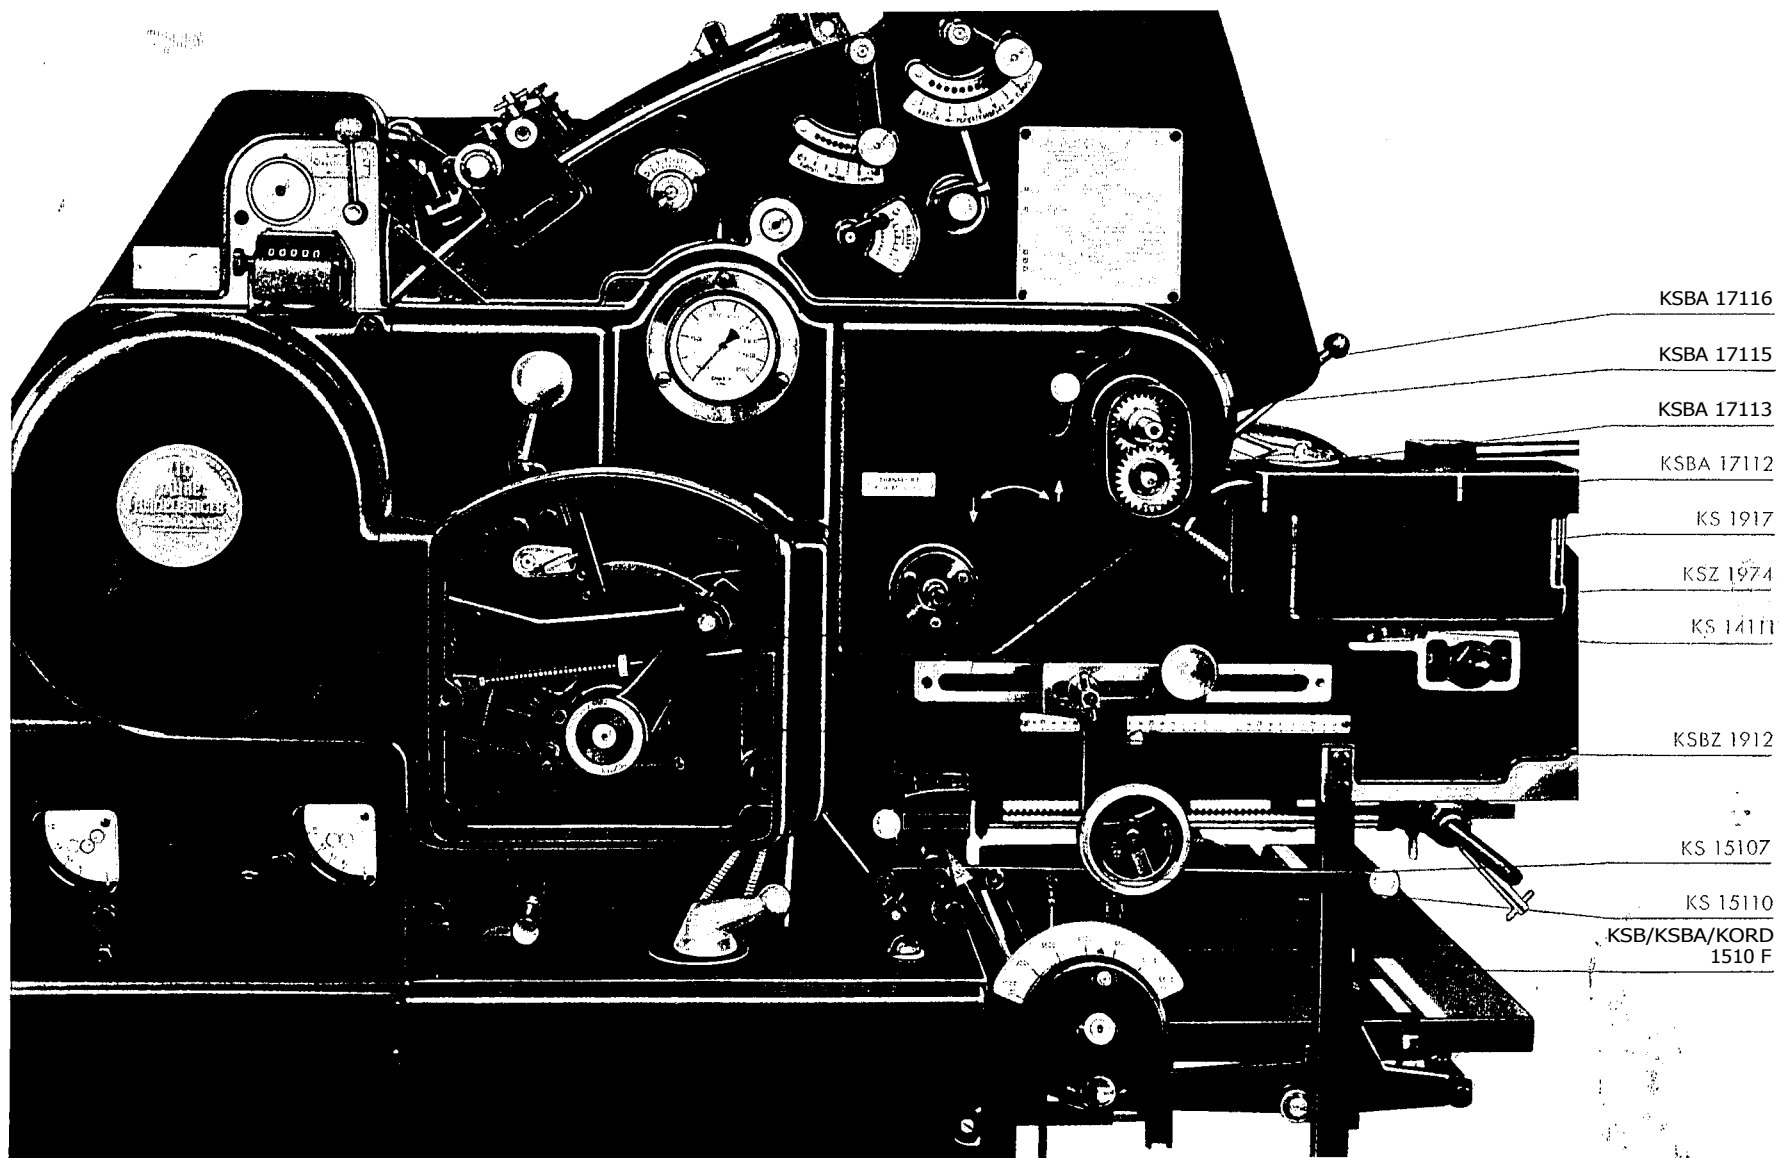


KS	14111	Limit switch trip lever with: GT 0666 shoulder screw	
KSB	1510 F	Delivery truck with: S 1512 caster	'KOR
KSBA	1510 F	Delivery truck with: S 1512 caster	KORA/KORD 62
KORA	1510 F	Delivery truck with: S 1512 caster	KORA?
ficiliD	1510 F	Delivery truck with: S 1512 caster	KORD 64
KS	15107	Shouldered screw	
KS	15110	Trip reset lever	
KSBA 17112		Double gear	KORA/KORD/KORS
KSBA 17113		Double gear stud with: KS 10156 washer	KORA/KORD/KORS
KSBA 17115		Gear	KORA/KORD/KORS
KSBA 17116		Gear guard	KORA/KORD/KORS
kSBZ; 1912'		Shouldered screw	
KS !*, 1917		Flange bearing housing	
K *1974		Washer	

For KORS check list below. If part is not listed, then refer to general listing.

KORS Parts	Illustration shown as
KORS , 1510 F Delivery truck with: S 1512 caster	KSB/KSBA/ KORD 1510 F

F3

52 1021 R,2 1547 KOR 12114 ROR I 2H1 KOR 12116 KSZ 1928 ' KOR 1904 i1616 KSB 1930

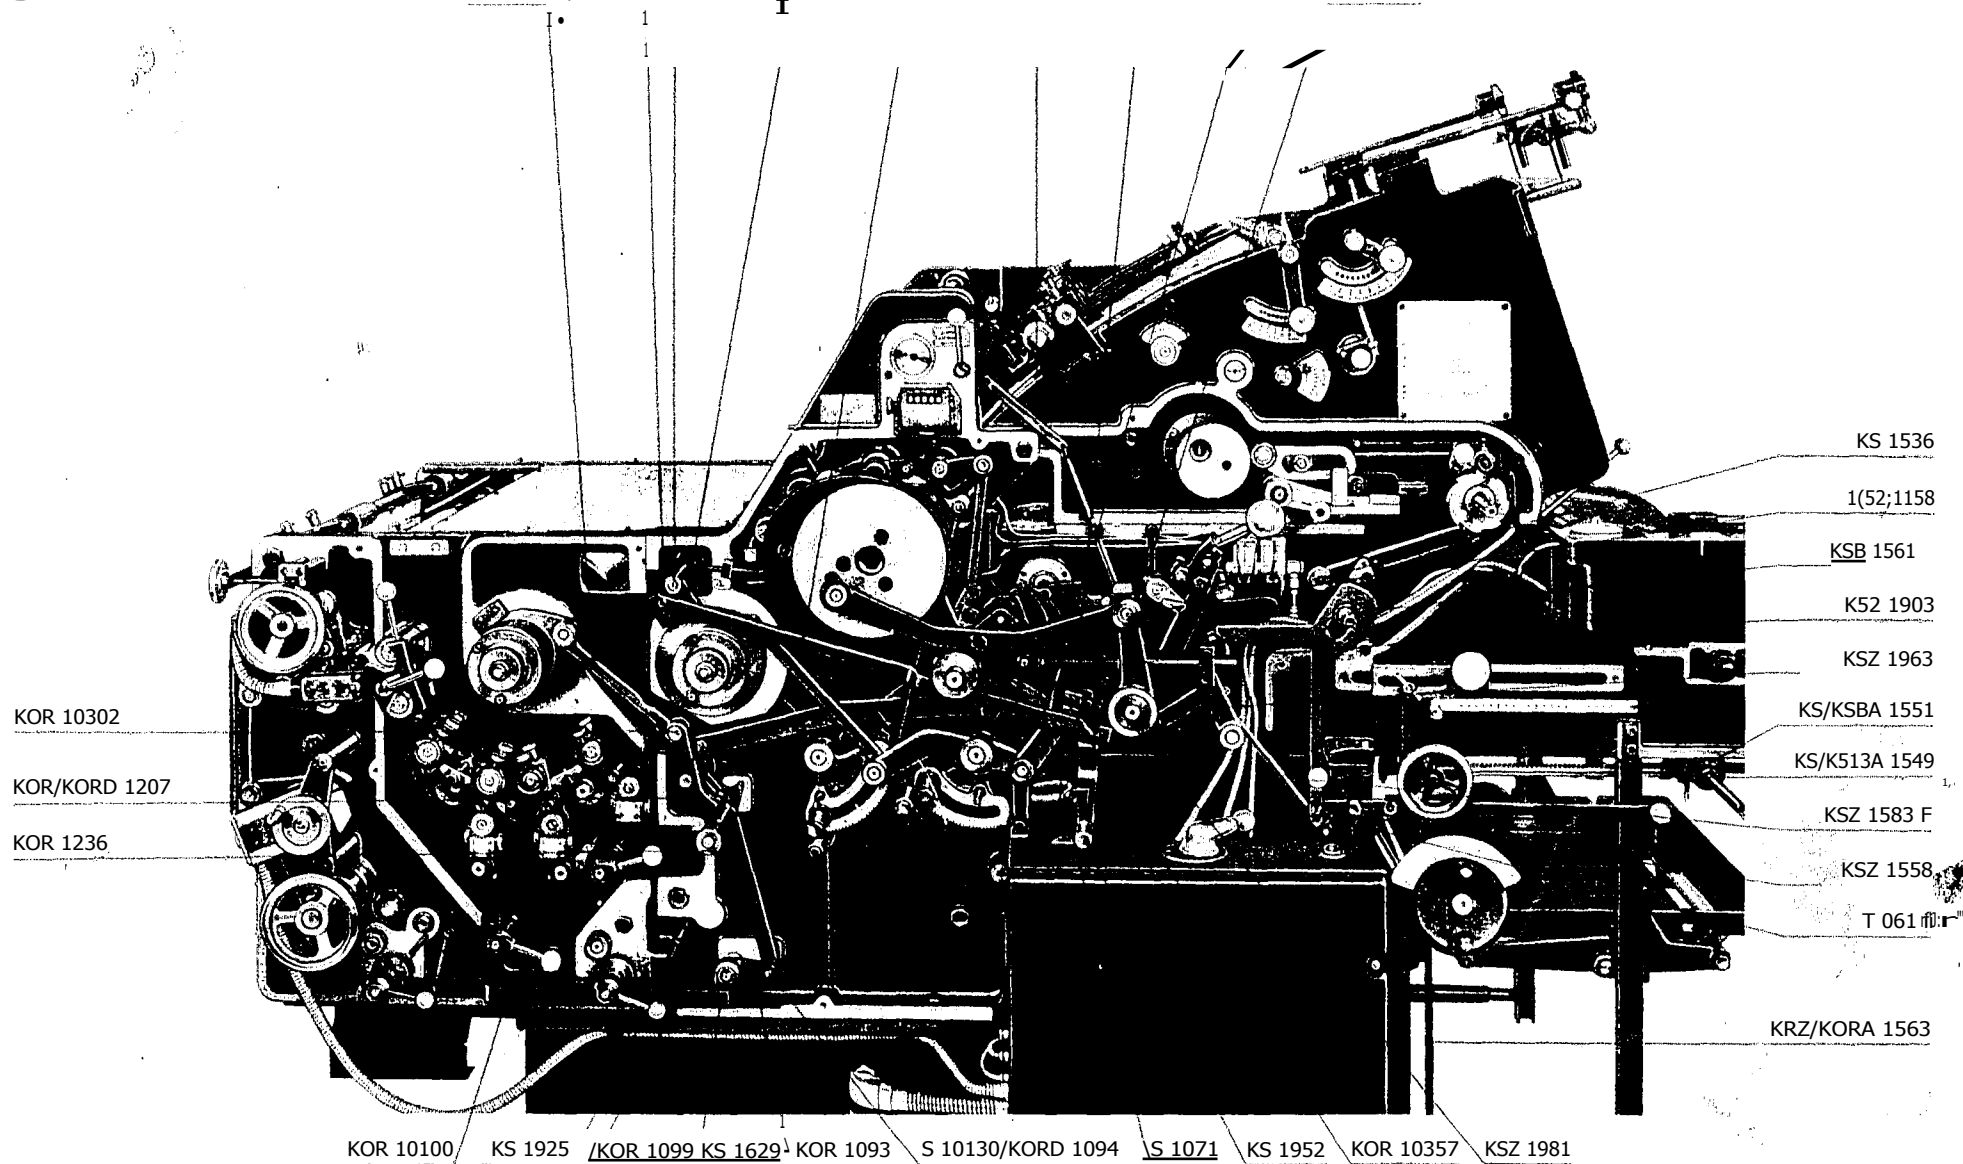


	06111	Shouldered screw	
SZ	1021	Connecting link, D.S. and O.S. with: HK 1616 needle bearing	
	1071	Spring rod head	
KOR	1093	Double lever with: HK 1512 needle bearing KOR 10403 washer	
KORD	1094	Stud	KORD/KORS
KOR	1099	Ink supply Connecting link with: HK 1010 needle bearing	
KOR	10100	Water supply connecting link with: HK 1010 needle bearing	
S	10130	Stud	KOR/KORA
KOR	10302	Shouldered stud with: KS 10156 washer	
KOR	10357	Tension spring	
KSZ	1158	Throw-off lever stud with: KSZ 1974 washer	
KOR	1207	Plate cylinder engaging lever with: GT 0630 stud	
KORD	1207	Plate cylinder engaging lever with: GT 0630 stud	KORD/KORS
KOR	1236	Engaging lever handle with: KRZ 12105 handle rod GT 06122 compression spring	
KOR	12111	Cylinder guard latch shaft bracket with: HK 1212 needle bearing	
KOR	12114	Cylinder guard latch shaft with: KOR 12115 latch	
KOR	12116	Guard latch connecting link with: KS 15106 guide screw	
KS	1536	Threaded shoulder stud	
RZ	1547	Latch shaft lever with: T 1680 shoulder stud	
KS	1549	Jogger bracket sleeve bushing, O.S. with: T 0261 roller 11310 roller stud KS 1546 compression spring	KOR
KSBA	1549	Jogger bracket sleeve bushing, O.S. with: same as KS 1549	KORA/KORD/KORS
KS	1551	Jogger bracket, O.S.	KOR
KSBA	1551	Jogger bracket, O.S.	KORA/KORD/KORS

KSZ	1558	Trip lever with: 1 0678 threaded shoulder stud	
KSB	1561 F	Ratchet pawl cam	
KRZ	1563	Connecting link (new no. KORD 1563) with: GT 02103 connecting piece T 1680 shoulder stud	
KORA	1563	Connecting link with: same as KRZ 1563	
KSZ	1583 F	Connecting link with: S 1933 shouldered screw	
	1616	Connecting piece	
KS	1629	Shoulder stud	
KSZ	1903	Throw-off toggle lever with: 3204 ball bearing	
KOR	1904	Toggle lever connecting link with: 6001 ball bearing	
KS	1925	Tension spring	
KSZ	1928	Cut-out link	
KSB	1930	Angled cam stop bracket	
KS	1952	Eccentric tripping bolt	
KSZ	1963	Balance spring lever connecting link with: KSB 1928 stud	
KSZ	1981	Washer	

{ KOR up to N ..325727
KORA/KORD/KQRS'.

KORA*/KOR
from No. 325728

F4

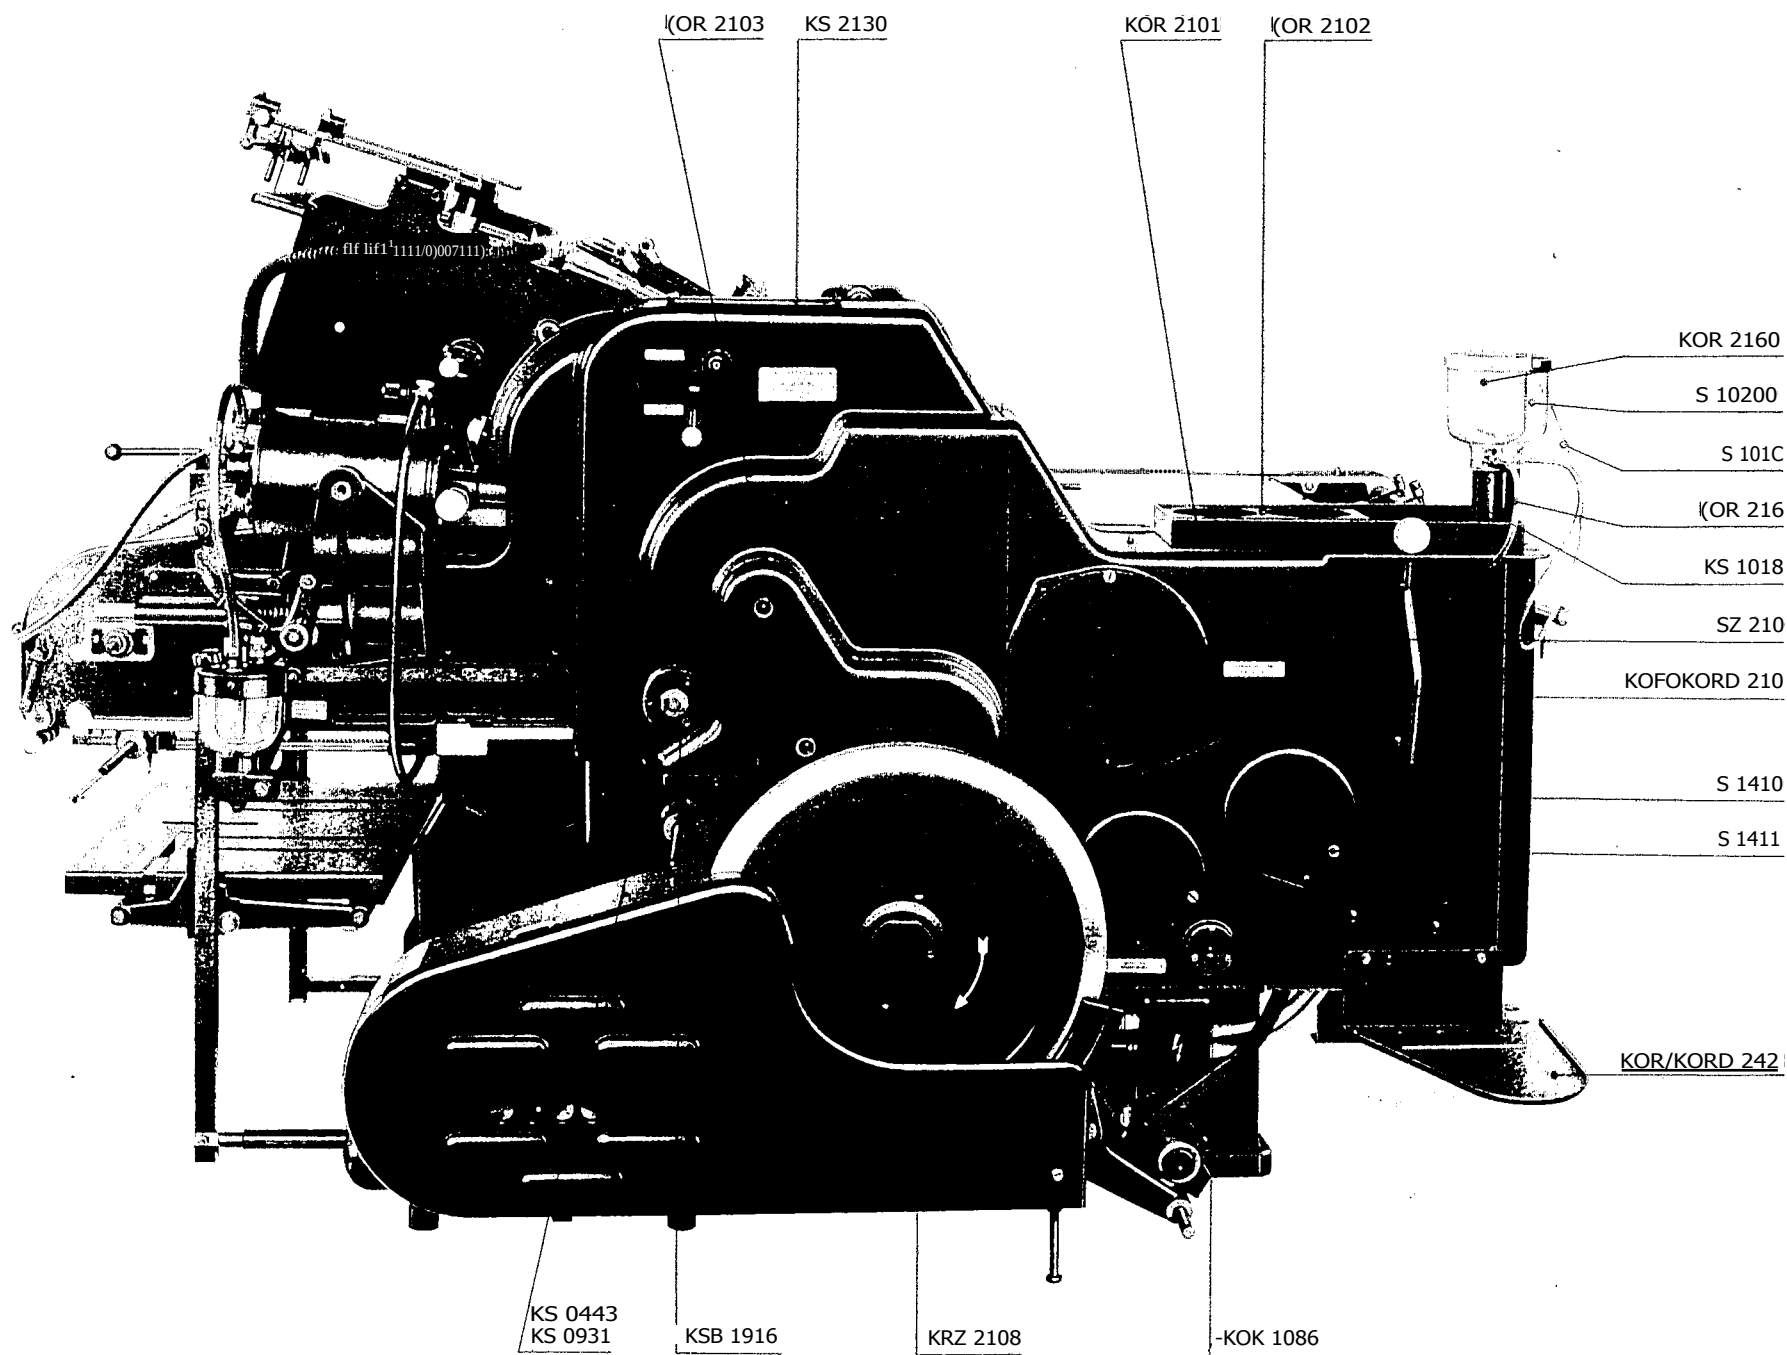

KS	0443	Washer with: B 17 DIN 137 spring washer	from No. 321124
KS	0931	Washer with: A 16 DIN 2093 cup spring washer	from No. 313578
KOR	1086	Bearing housing with: HK 2016 needle bearing	
KS	10189	Dampening and washup fluid container bracket	
	10191	Washup fluid hose with: T2350 nozzle	
S	10200 F	Washup fluid container	
	14108	Cover plate	
	14110	Shouldered screw	
KSB	1916	Flanged bearing housing with: HK 3020 needle bearing	
KOR	2101	Tray	
KOR	2102	Tray partition	
KOR	2103	Main drive guard	
KOR	2104	Inker drive guard, D.S.	
KORD	2104	Inker drive guard, D.S.	KORD/KORS
KRZ	2108	Drive pulley and belt guard	
SZ	2108	Cover plate	
KS	2130	Cover plate	
KOR	2160 F	Dampening fluid container	
KOR	2160	Dampening fluid hose	
KOR	2428	Water bucket shelf	
KORD	2428	Water bucket shelf	

For KORS check list below. If part is not listed, then refer to general listing.

KORS Parts		Illustration shown as
KORS	2428	Water bucket shelf
		KOR/KORD 2428



-


KOR	07296	Circumferential adjustment pointer	
KSBZ	10277	Adjustment pointer shaft	
KOR	10402	Connecting link with: 1<14/17 needle bearing (new number: K 14x18x17)	
	1312	Compression spring	
KOR	1432	Bearing bracket with: 6005 ball bearing	
KRZ	15115	Support bar, O.S.	KOR/KORA/KORD 62
KSB	15115	Support bar, O.S.	KORD 64
KSB	1655	Collar	
	1751	Cam roller	
KS	1843	Vacuum hose	
KS	1845	Air hose	
KS	2118	Guard support bolt	
GTP	5691	Stud with: KSL 10530 washer	
KORD	9060	V-Belt, inside length = 1800 mm (for 50 cycle motor) or KS 100.060 V-Belt, inside length = 1900 mm (for 60 cycle motor)	
KS	100.048 F	Variable speed pulley	
KS	100.051	Pulley washer	

For KOFIS check list below. If part is not listed, then refer to general listing.


KoksTiots		Illustration shown as ,
KORS " 15115	Support bar, O.S.	KRZ/KSB 15115

?At

F5

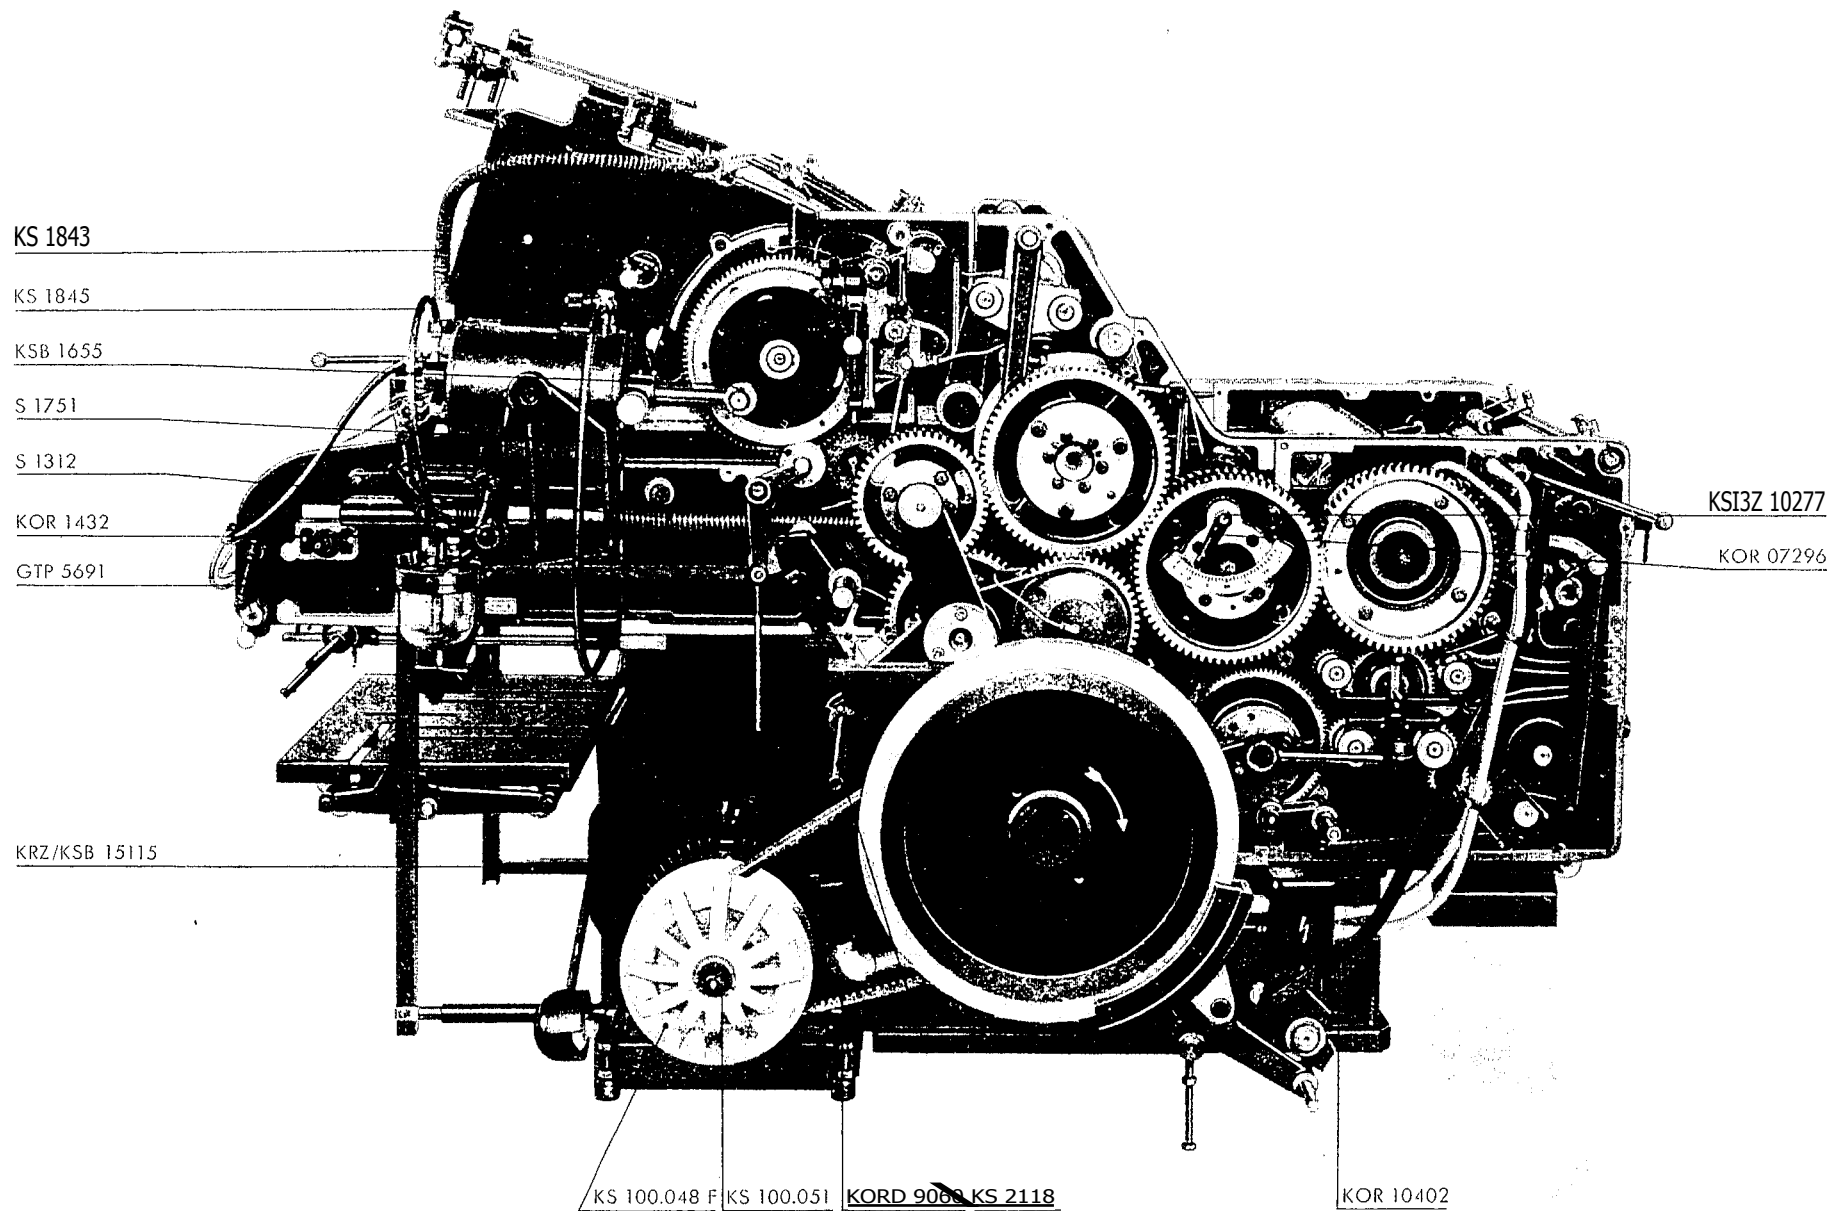

G1

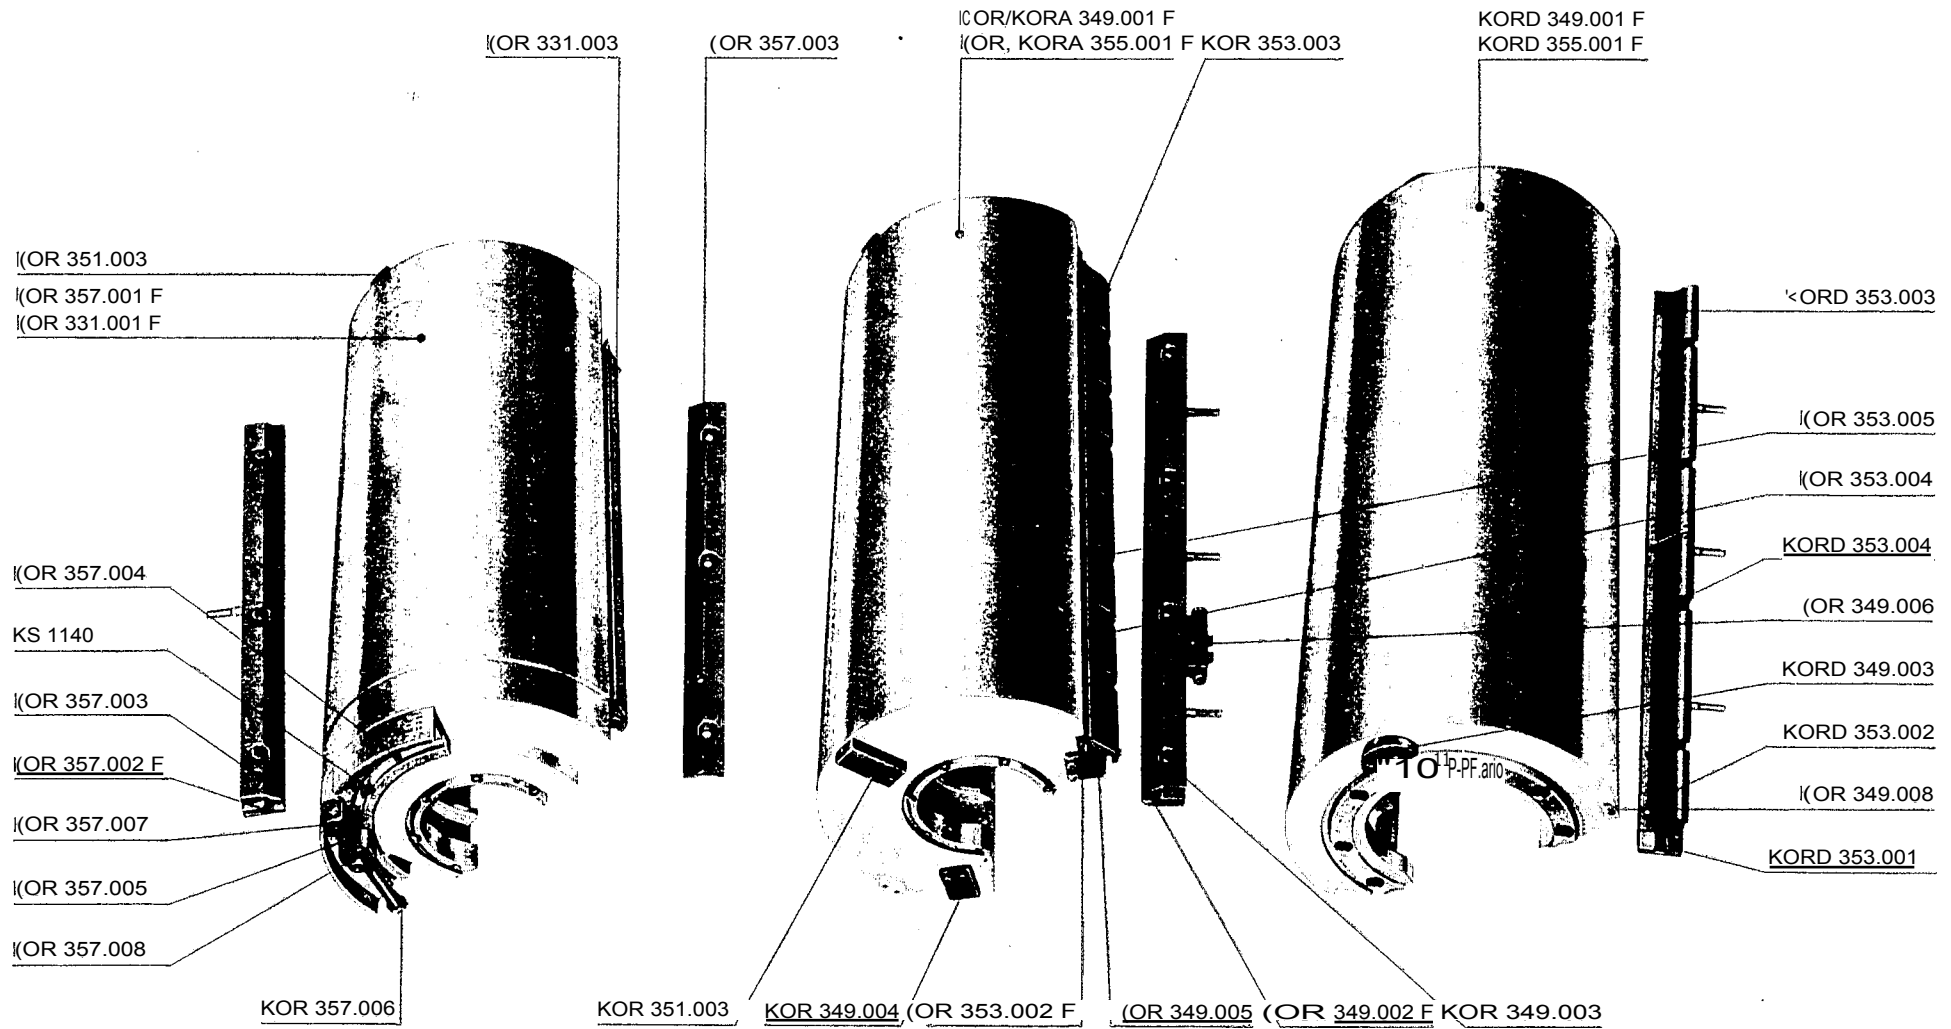

t

KS	1140	Tapered pin
KOR 331.001 F		Special rotary offset plate shell (same as KOR 357.001 F) but with quick-action plate clamps
KOR 331.003		Plate clamp, quick action, upper portion (plate head and tail end) with: KOR 331.002 F plate clamp, quick-action, lower portion, tail end, with S 1262 compression spring
	KOR 331.002	plate clamp, quick-action, lower portion, head end, with KS 2218 threaded stud
	KOR 331.005	plate clamp, quick-action, eccentric
KOR 349.001 F		
KORA 349.001 F		Rotary offset plate shell
KORD 349.001 F		
KOR 349.002 F		Plate clamp, normal, lower portion with: T 1215 compression spring
KOR 349.003		Plate clamp, normal, upper portion with: T 1212 compression spring
KORD 349.003		Lifting handle bracket
KOR 349.004		Guide plate with scale
KOR 349.005		Guide plate without scale (tail end) at KORA operator side KORA 349.005 at KORA drive side KORA 349.006
KOR 349.006		Lateral guide block with: KOR 349.007 hexagon cap screw
KOR 349.008		Printing line indicator
KOR 351.003		Lifting handle bracket
KORD 353.001 F		Plate clamp, quick-action, lower portion with: T 1215 compression spring
KOR 353.002 F		Plate clamp, quick-action, lower portion
KORD 353.002		Plate clamp, quick-action, upper portion
KORD 353.003		Plate clamp, quick-action, upper portion with: S 1262 compression spring
KOR 353.003		Plate clamp, quick-action, upper portion
KOR 353.004		Plate clamp, quick-action, upper portion
KORD 353.004		Plate clamp, quick-action, eccentric
KOR 353.005		Plate clamp, quick-action, eccentric

KOR 355.001 F		
KORA 355.001 F		Rotary wraparound (letterset) plate shell
KORD 355.001 F		
KOR 357.001 F		Special 370x450 mm rotary offset plate shell KOR and KORA only (normal plate clamps) with: KOR 357.009 rubber blanket KOR 357.010 under blanket KSBZ 10403 guide plate parts for other special shells on request
KOR 357.002 F		Plate clamp, normal, lower portion with: T 1215 compression spring
KOR 357.003		Plate clamp, normal, upper portion with: T 1212 compression spring
KOR 357.004		Rotation adjustment segment with: SN 4.08.12 indicator plate
KOR 357.005		Collar
KOR 357.006		Rotation adjusting screw
KOR 357.007		Adjusting screw support bearing
KOR 357.008		Adjusting screw pilot stud
Accessories:	for Offset	for Letterset/Wraparound
Positioning Foil	KOR 349.015	KOR 355.015
	KORA 349.015	KORA 349.015
	KORD 349.015	KORD 349.015
	KORS 349.015	KORS 349.015
Register Pin	KSBZ 355.014	KSBZ 355.014

For KORS check list below. If part is not listed, then refer to general listing.


KORS Parts	Illustration shown as
KORS 349.001 F	Rotary offset plate shell
KORS 355.001 F	Rotary wraparound (letterset) plate shell
	KORD 349.001 F
	KORD 355.001 F

G2

KOR/KORD 0963 F



ORIGINAL HEIDELBERG

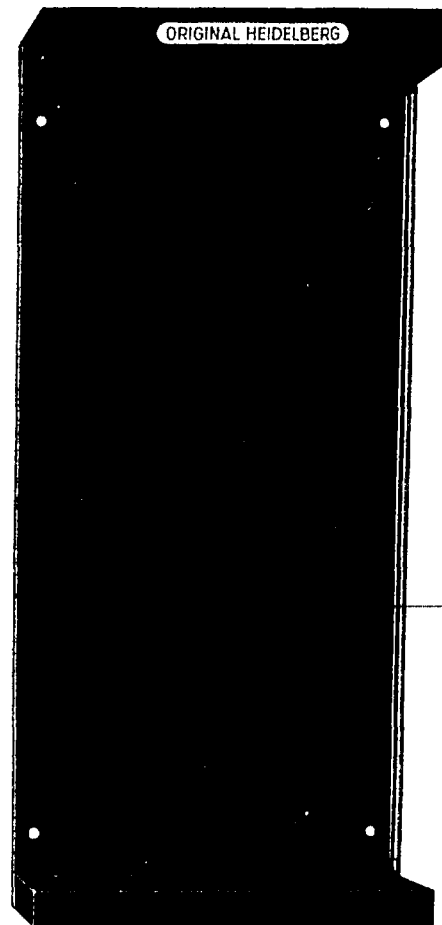

KRZ/KORD 2460

KOR:KORD 0964 F

KOR /KORD 0942 F


KOR KORD 0940 F

KORI<ORD 0943 F

C	KOR	0940 F	Rubber roller -51 0 Red KSBZ 0902 roller core	2. 2. 170
	KORD	0940 F	Rubber roller -51 0 Red KORD 0960 roller core	
	KOR	0942 F	Rubber roller -57 0 Blue KSBZ 0902 roller core	
	KORD	0942 F	Rubber roller -57 0 Blue KORD 0960 roller core	
	KOR	0943 0	Dampener roller - 51 0 Green KOR 0902 roller core with: KOR 0944 dampener roller cover	
	KORD	0943 F	Dampener roller -51 0 Green KORD 0902 roller core with: KORD 0944 dampener roller cover	
	KOR	0963 F	Rubber roller -53 0 White KSBZ 0902 roller core	
	D	0963 F	Rubber roller -53 0 White KORD 0960 roller core	
	KOR	0964 F	Rubber roller -55 0 Brown KSBZ 0902 roller core	
ey	KORD	0964 F	Rubber roller - 55 0 Brown KORD 0960 roller core	47 2 /z ,
	KRZ	2460	Roller rack	KOR/KORA
	KORD	2460	Roller rack	


For KORS check list below. If part is not listed, then refer to general listing.

KORS Parts				Illustration shown as
KORS	0940 F	Rubber roller -51 0 Red KORS 0960 roller core		KOR/KORD 0940 F
KORS	0942 F	Rubber roller - 57 0 Blue KORS 0960 roller core		KOR/KORD 0942 F
KORS	0943 F	Dampening roller - 51 0 Green KORS 0902 roller core with: KORS 0944 dampening roller cover		KOR/KORD 0943 F
KORS	0963 F	Rubber roller - 53 0 White KORS 0960 roller core		KOR/KORD 0963 F
KORS	0964 F	Rubber roller - 55 0 Brown KORS 0960 roller core		KOR/KORD 0964 F
KORS	2460	Roller rack		KRZ/KORD 2460

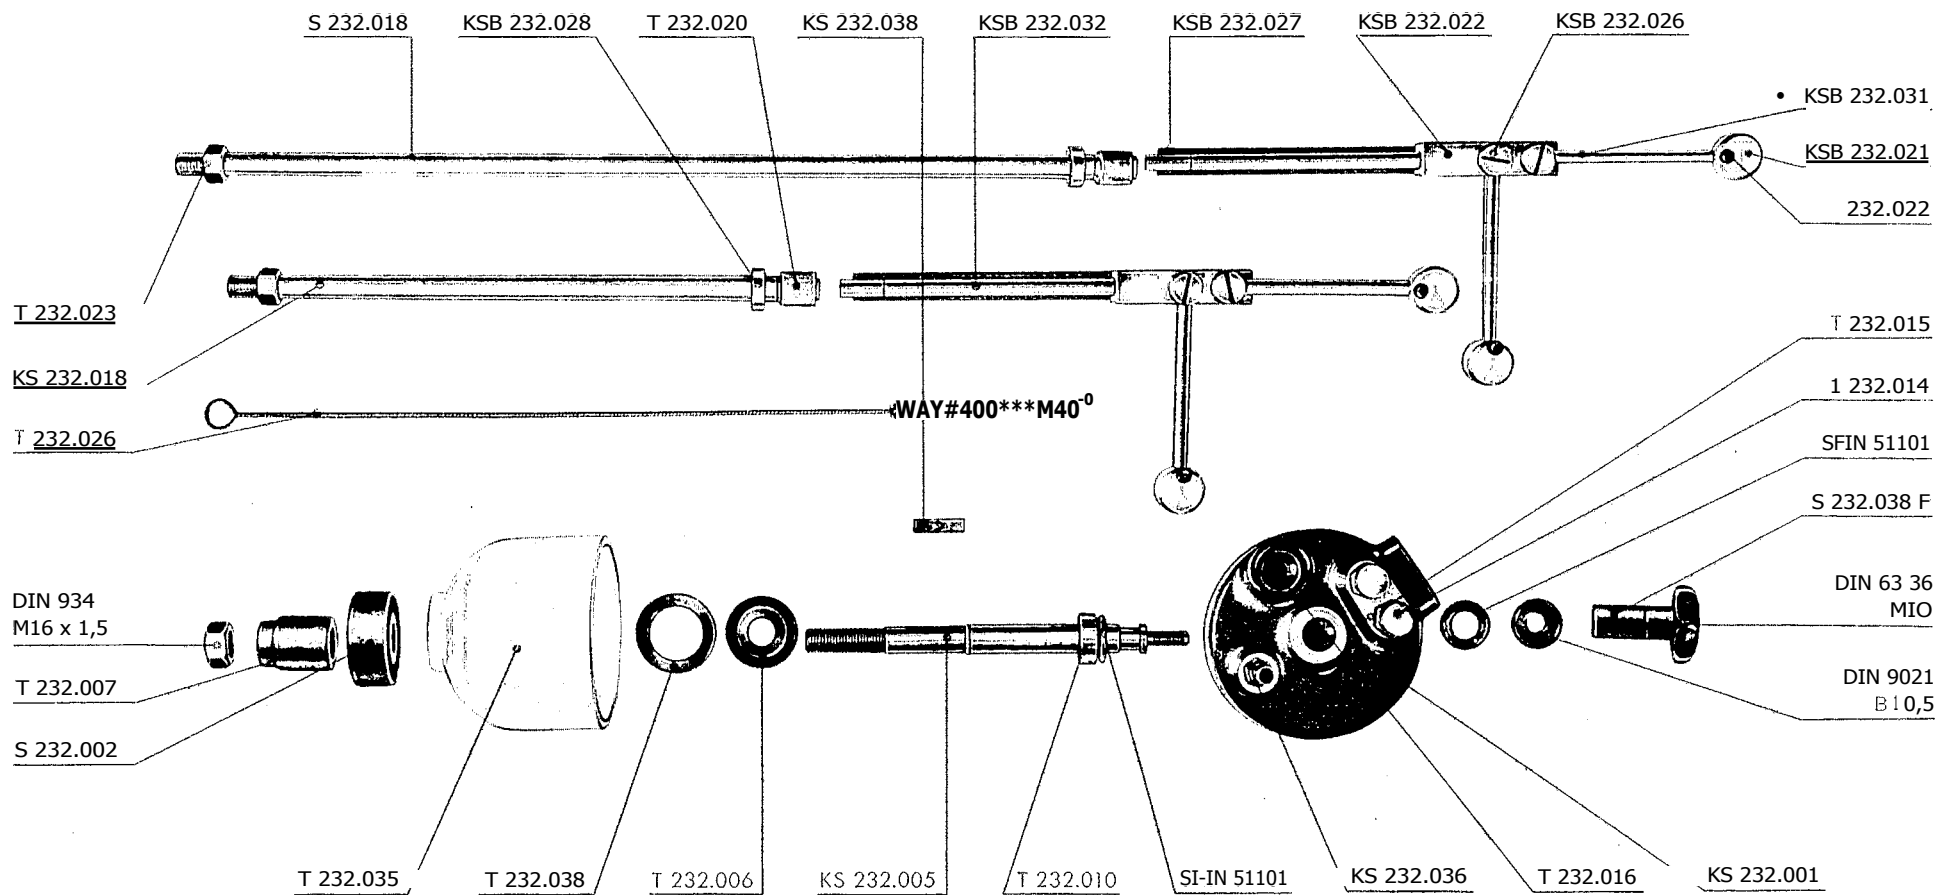

SHN	51101	Packing ring 16x28
KS	232.001	Container cover with: T232.011 cover gasket T 232.012 packing washer
\$	232.002	Container base washer
KS	232.005	Center assembly tube
T	232.006	Gasket washer
T	232.007	Container support nut
T	232.010	Adjusting collar
T	232.014	Powder adjusting screw with: T 232.013 packing washer
T	232.015	Powder adjusting screw bushing
T	232.016	Container cover cap with: T 232.017 cap gasket
S	232.018	Powder tube - long
KS	232.018	Powder tube
T	232.020	Compression nut with: T 232.008 packing washer
KSB	232.021	Spray nozzle
T	232.022	Nozzle screw with: T 232.034 compression spring
KSB	232.022	Powder manifold
T	232.023	Lock nut
T	232.026	Cleaning brush
KSB	232.026	Nozzle tube pivot screw with: KSB 232.029 rubber washer KSB 232.030 fibre washer T 1090 metal washer
KSB	232.027	Manifold guide plate
KSB	232.028	Guide plate collar
KSB	232.031	Nozzle tube
KSB	232.032	Powder manifold tube
T	232.035	Powder container
KS	232.036	Hose nipple
KS	232.038	Spring check valve
T	232.038	Spacer washer
DIN 934 M 16x1.5		Lock nut
S	232.038	Star handle
DIN 9021 B 10.5		Washer

G4

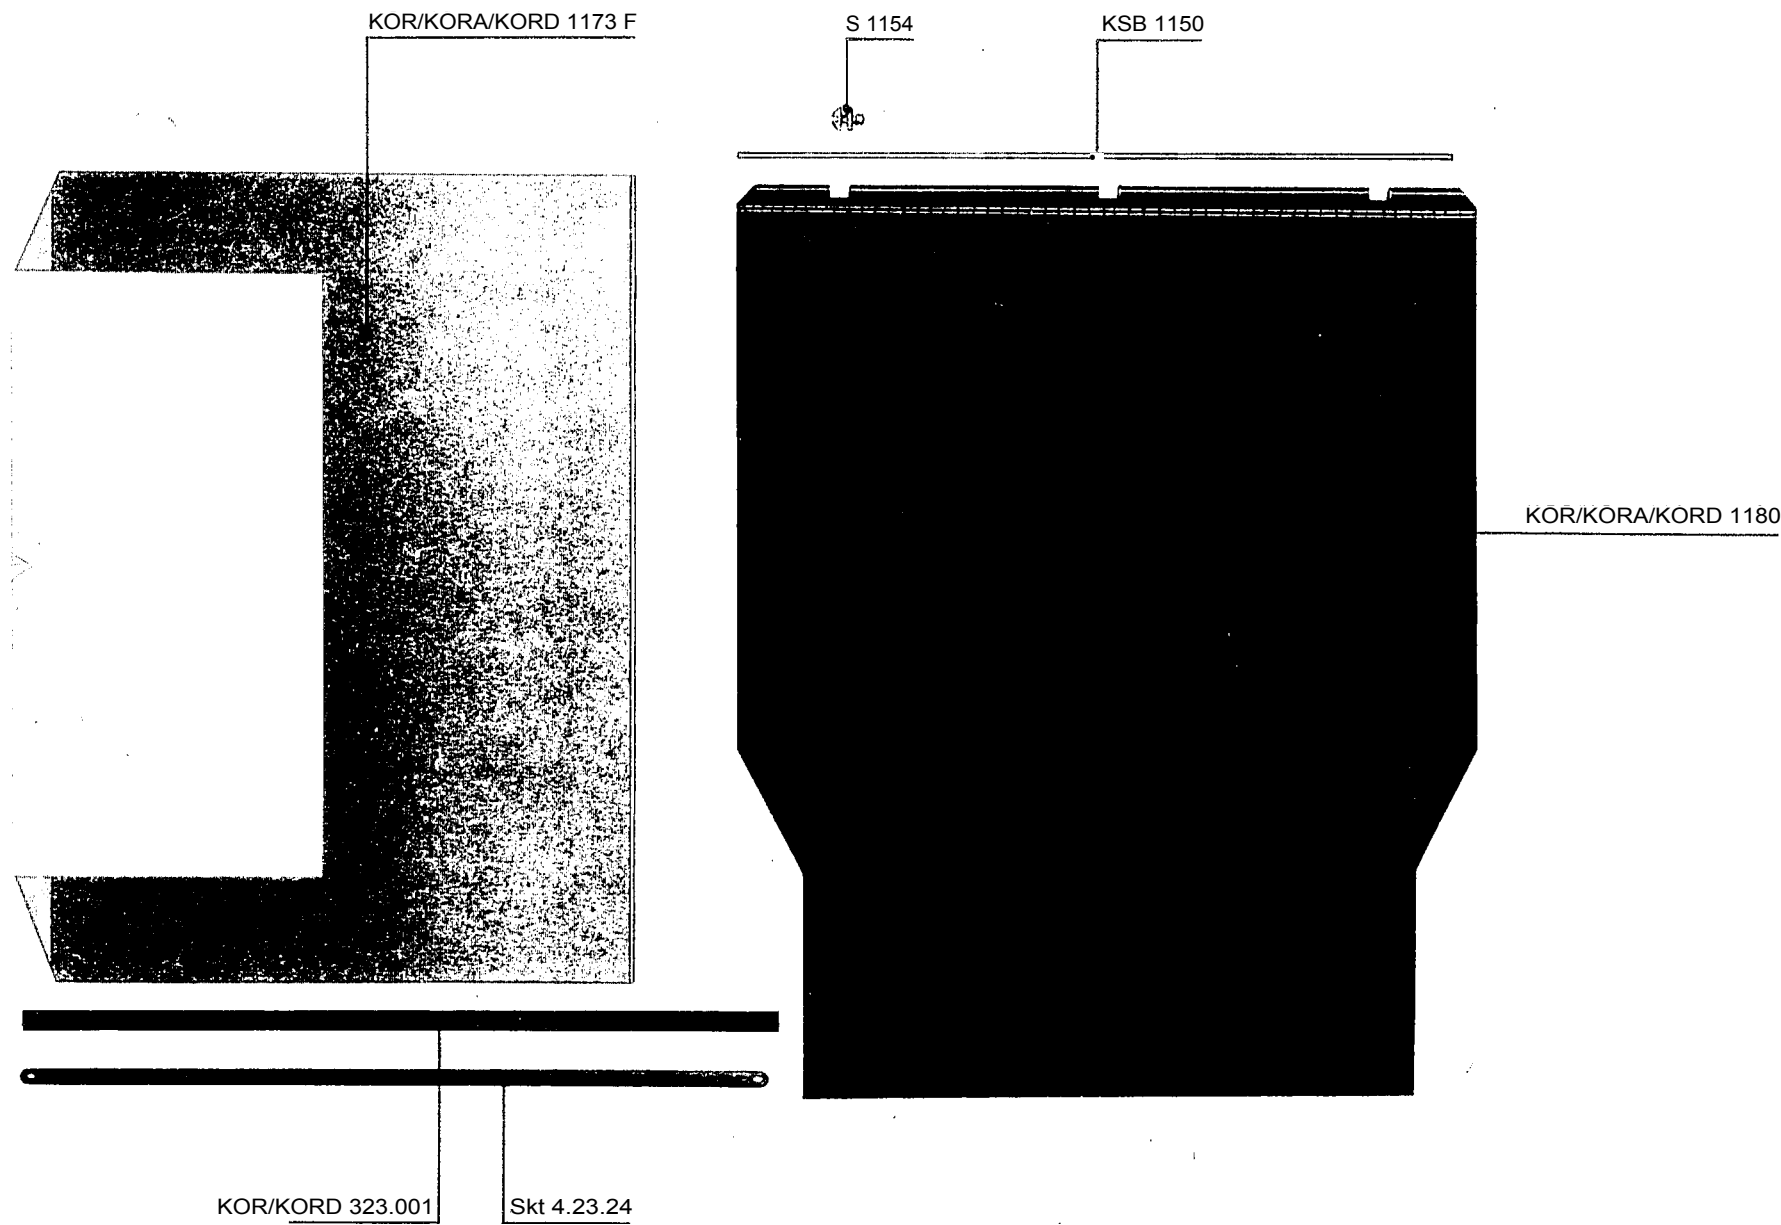


KSB	1150	Blanket rod	
	1154	Blanked rod screw	
KOR	1173 F	Impression cylinder metal jacket 0.46 mm	
KORA	1173 F	(previously 0.4 mm)	
KORD	1173 F		
KOR	1180	Impression cylinder rubber blanket	
KORA	1180		
KORD	1180		
KOR	323.001	Rubber blanket makeready device (letterset) .	KORIKORA/KORD 62
KORD	323.001	Rubber blanket makeready device (letterset) .	KORD 64
SN	4.23.24	Makeready device scale	


For KORS check list below. If part is not listed, then refer to general listing.'

KORS Parts			Illustration shown as
KORS	1150	Blanket rod	KSB 1150
KORS	1173 F	Impression cylinder metal jacket 0.46 mm	KOR/KORA/
		(previously 0.4 mm)	1 KORD 1173 F
KORS	1180	Impression cylinder rubber blanket	KOR/KORA/KORD 1180
KORS	323.001	Rubber blanket makeready device (letterset)	KOR/KORD 323.001

G5

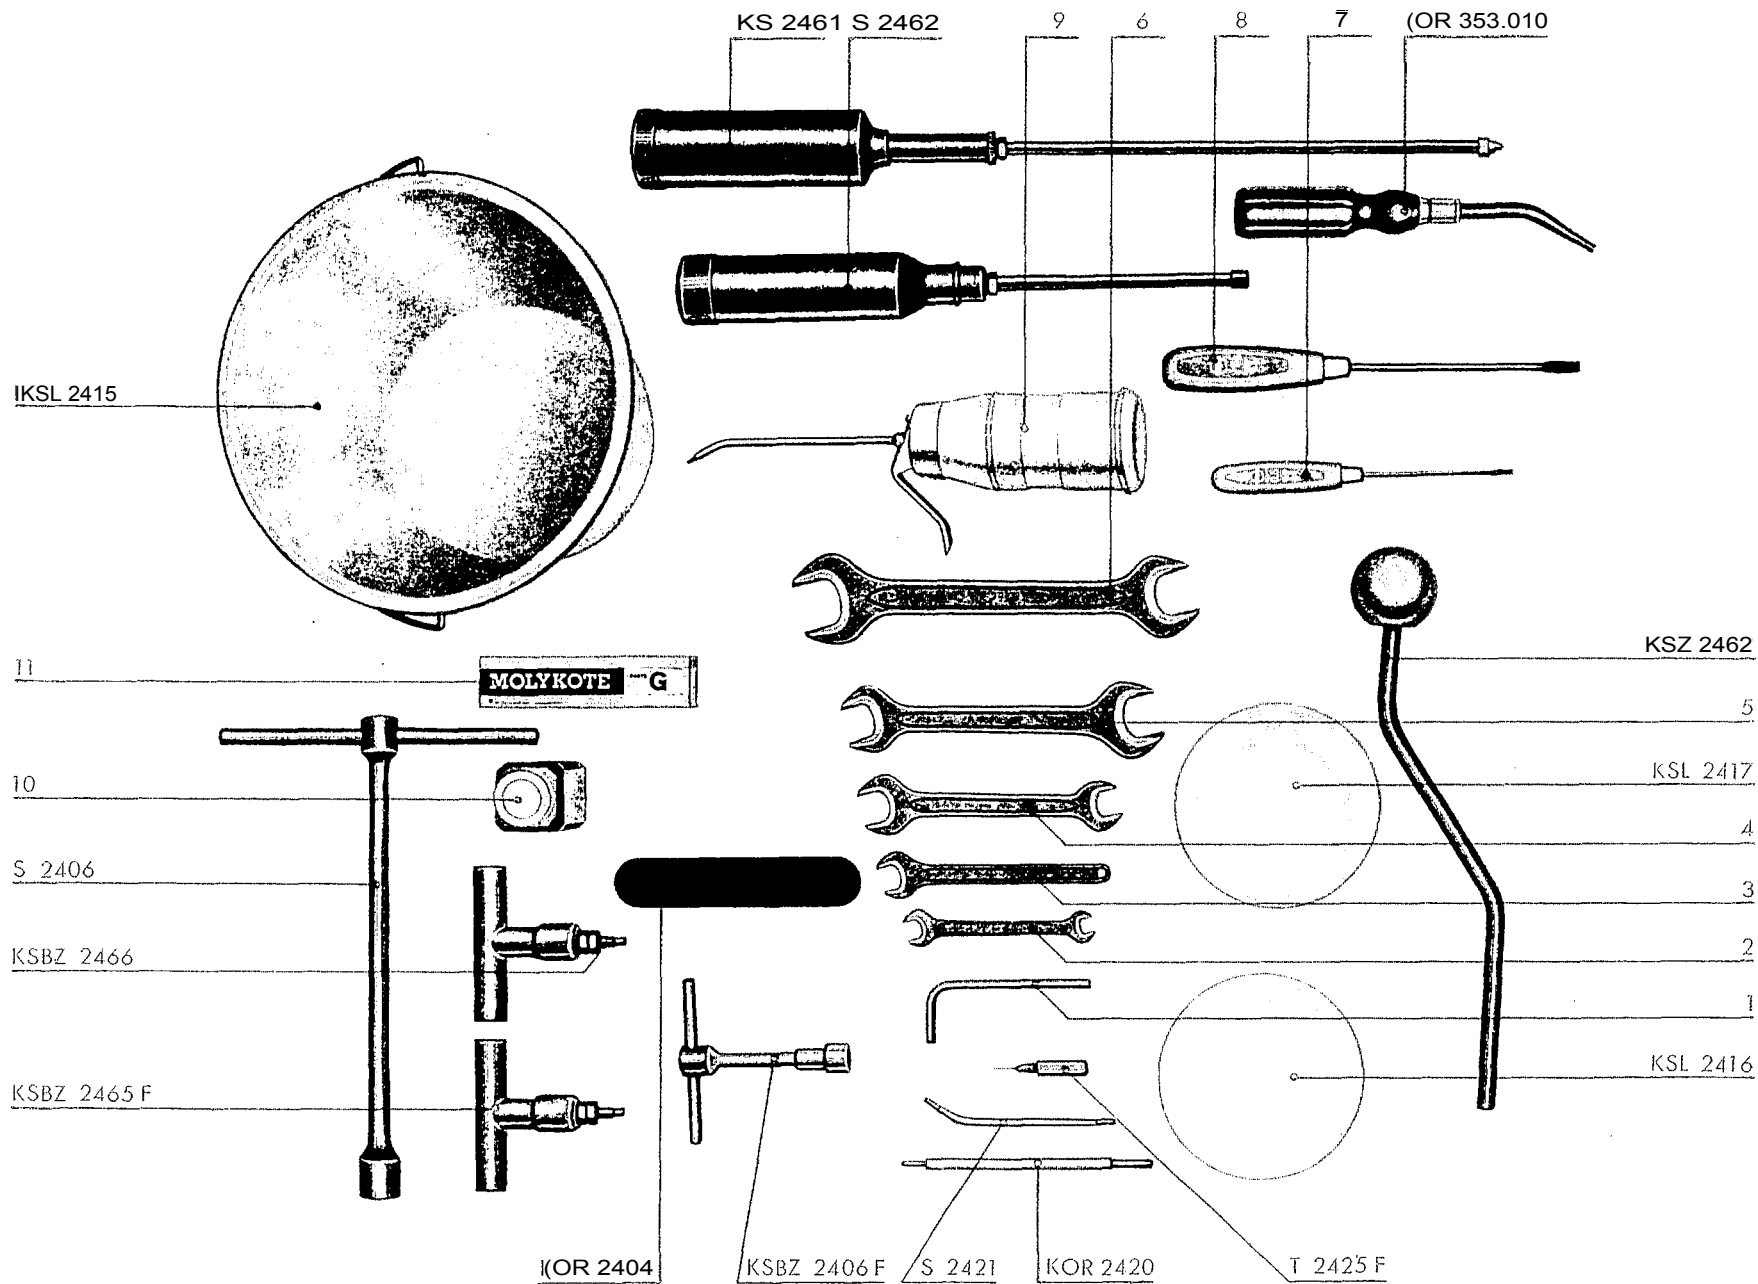

KOR	2404	Roller setting feeler gauge
KSBZ	2406 F	T-handle socket wrench
•	2406	7-handle socket wrench
KSL	2415	Water bucket
KSL	2416	Round hemical dish yellow Rectangular dish — yellow KOR 2403
KSL	2417	Round chemical dish — red Rectangular dish — white KOR 2402
KOR	2420	Pin wrench
•	2421	Pin wrench
•	2425 F	Air hole cleaning tool
KS	2461	Grease gun
•	2462	Oil gun
KSZ	2462	Rotary shell locking ring wrench
KSBZ	2465 F	Rotary shell lifting handle
KSBZ	2466	Lifting handle screw
1		Allen wrench 6 mm
2		Double end wrench 8x10 mm
3		Single end wrench 13 mm
4		Double end wrench 14x17 or 13x17 mm
5		Double end wrench 19x22 mm
6		Double end wrench 24x27 mm
7		Screw driver — small A 0.5
8		Screw driver — large A 1
9		Oil can
10		Bostik rust remover
11		Molykote GK-Rotary shell lubricant
KOR	353.010	Quick action plate clamp pin wrench — round end Plate clamp pin wrench — square end KOR 353.011

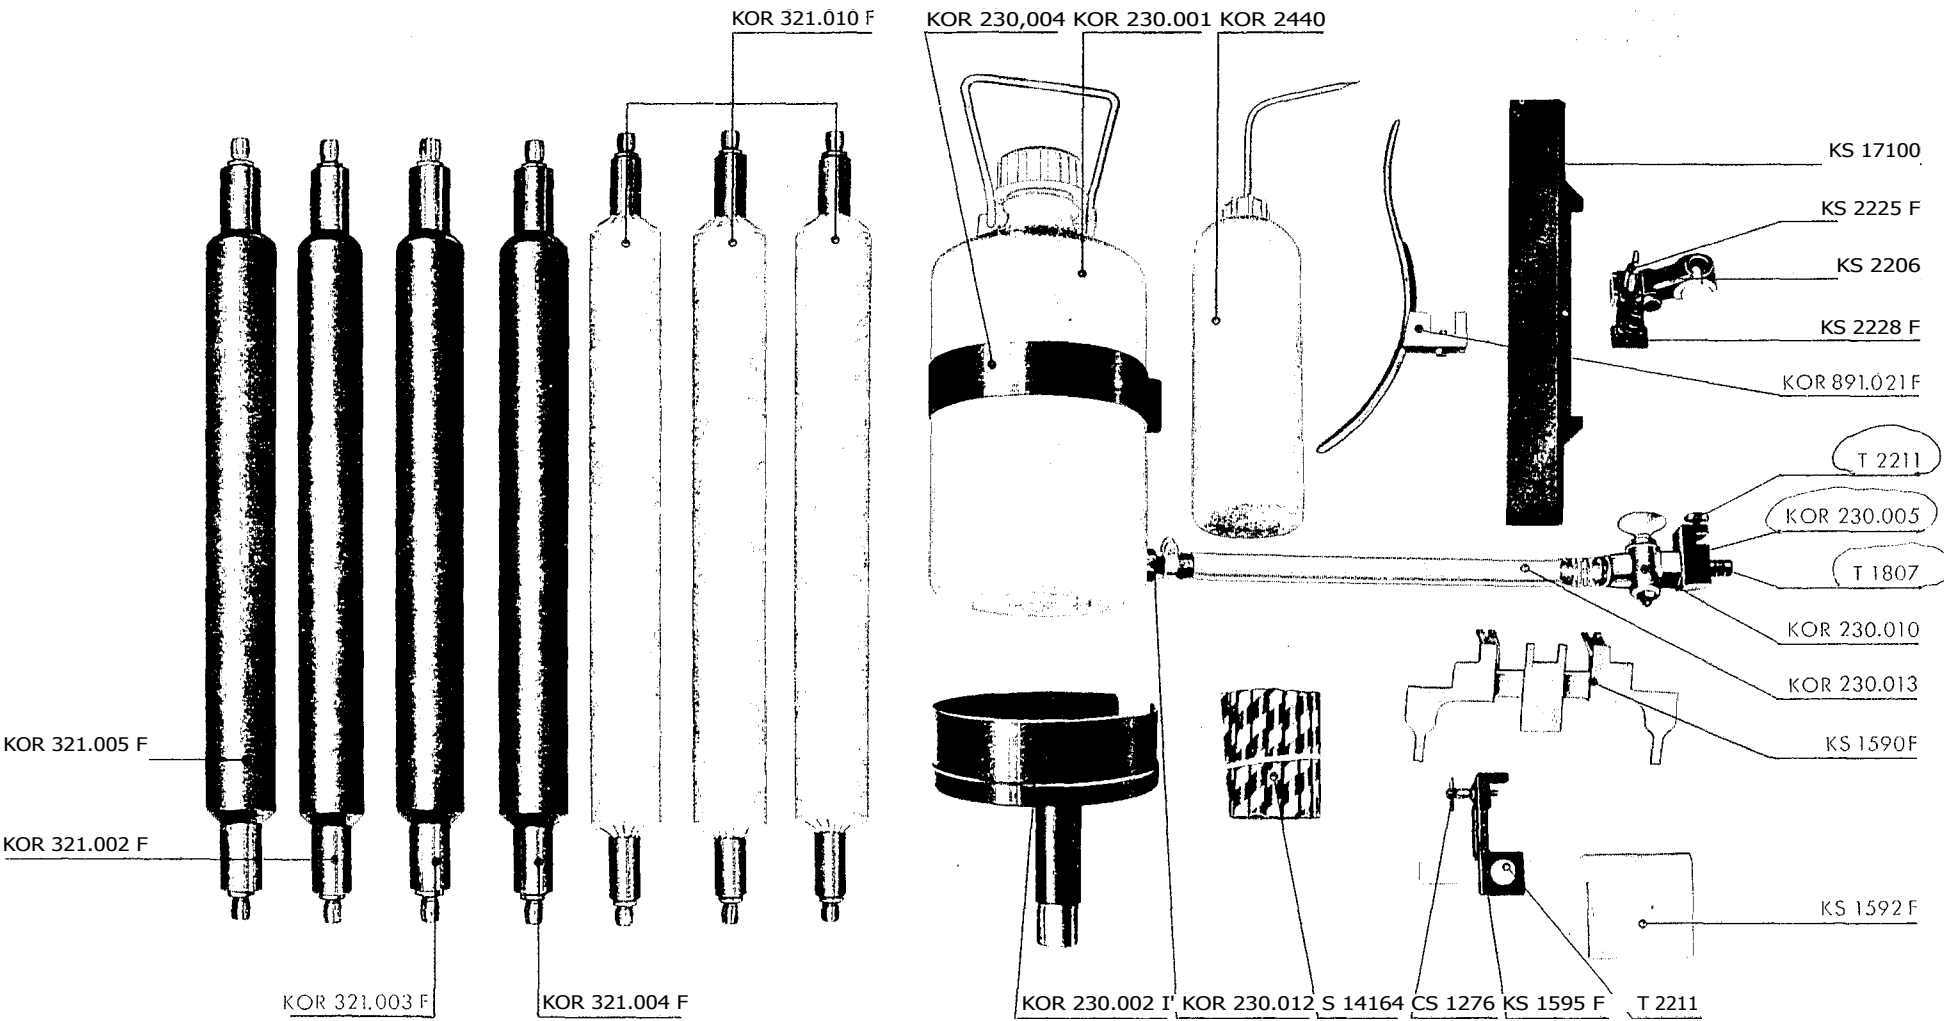

KS	1276	Thumb screw	
	14164	Sand paper star wheel shaft sleeve	
KS	1590 F	Auxiliary front sheet stop	KOR
KS	1592 F	Delivery two-up center divider	
KS	1595 F	Two-up divider bracket	
KS	17100	Feeder two-up center divider with: KS 17101 divider screw	
	1807	Hose nipple	
KS	2206	Center side guide bracket	
T	2211	Knurled screw 	
KS	2225 F	Clamping nut	
KS	2228 F	Side guide	
KOR	2440	Washup fluid bottle	
KOR	230.001	Dampening water container	
KOR	230.002 F	Container bracket	
KOR	230.004	Container band	
KOR	230.005	Pet-cock bracket	
KOR	230.010	Pet-cock	
KOR	230.012	Hose nipple	
KOR	230.013	Water tube	
*KOR	321.002 F	Plate inking roller, short cover —51 0 Red	
*KOR	321.003 F	Plate inking roller, short cover —53 0 White	
*KOR	321.004 F	Plate inking roller, short cover — 55 0 Brown	
*KOR	321.005 F	Plate inking roller, short cover —57 0 Blue	
"KOR	321.010 F	Dampening roller, short cover —51 0 Green with: KOR 321.011 Dampening roller cover	
KOR	891.021 F	Cardboard sheet guide	

* for Special Rotary offset plate shell KOR 357.001 F/331,001 F

For KORS check list below. If part is not listed, then refer to general listing.

KORS Parts		Illustration shown as
KORS	1592 F	Delivery two-up center divider
KORS	17100	Feeder two-up center divider with: KS 17101 divider screw
		KS 1592 F
		KS 17100

-
